

## 94 Rear lighting warning displayed in the instrument cluster

94 19 07 2055123/1 May 28, 2019.

Model(s)	Year	VIN Range	Vehicle-Specific Equipment
A6, A7, and A8	2019	All	Not Applicable
Q5	2018 - 2019	All	Not Applicable

## Condition

#### **Customer states:**

• There is a warning message regarding the rear lighting displayed in the instrument cluster.

### A6, A7, and A8:

• The rear lighting operates properly.

### Q5:

• The rear lighting function is switched to lower bumper as if the trunk is open.

## Workshop findings:

One or more of the following DTCs are stored in the comfort system central control module, J393 (address word 0046). In the case of Q5, at least one DTC is static:

- DTC B12C315 (Right brake light bulb, interruption/short circuit to positive).
- DTC B12C215 (Left brake light bulb, interruption/short circuit to positive).
- DTC B133A15 (Bulb for left brake and tail light, interruption/short circuit to positive).
- DTC B133C15 (Bulb for right brake and tail light, interruption/short circuit to positive).
- DTC B12BE15 (Left tail light bulb, interruption/short circuit to positive).
- DTC B12BF15 (Right tail light bulb, interruption/short circuit to positive).
- DTC B12C615 (Bulb for high-level brake light, interruption/short circuit to positive).

# **Technical Background**

Not applicable.



## **Production Solution**

Not applicable.

## **Service**

Verify condition listed in customer statement and the DTC listed above.

### A6, A7, and A8:

1. Erase the DTCs.

### Q5:

- 1. Switch off ignition
- 2. Gain access to Fuse Panel F -SF- on Relay and Fuse Panel 2 -SR2- in the left luggage compartment.
- 3. Remove the following fuses:

## Fuse panel 1 -ST1- w/ fuse panel F -SF-, black:

- Fuse 9 (on fuse panel F) -SF9- (Image 1C) 20A.
- Fuse 11 (on fuse panel B) -SF11- (Image 1B) 20A.

## Fuse panel 3 -ST3- w/ fuse panel F -SF-, brown:

• Fuse 14 (on fuse panel F) -SF14- (Image 1A) 20A.



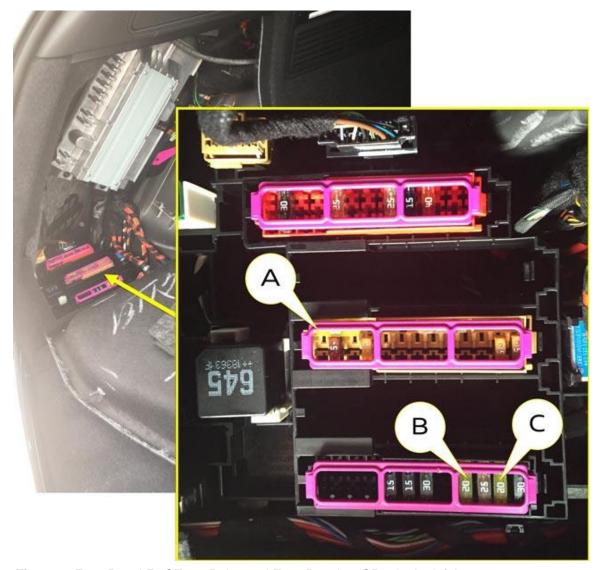


Figure 1. Fuse Panel F – SF- on Relay and Fuse Panel 2 – SR2- in the left luggage compartment.

- 4. Wait 3 minutes.
- 5. Reinstall the fuses.
- 6. Erase the DTCs.



# **Warranty**

Claim Type:	• 110 up to 48 Months/50,000 Miles.				
	G10 for CPO Covered Vehicles – Verify Owner.				
	<ul> <li>If the vehicle is outside any warranty, this Technical Service Bulletin is informational only.</li> </ul>				
Service Number:	er: 5789				
Damage Code: 0039					
Labor Operations:	Q5:				
	Check comfort system central control module (remove fuses)	5789 0199	10 TU		
Diagnostic Time:	GFF – Checking and clearing fault codes included in existing labor operations	0150 0000	Time stated on the diagnostic protocol (Max 60 TU)		
	Road test prior to the service procedure	No allowance	0 TU		
	Road test after the service procedure	No allowance	0 TU		
Claim Comment:	As per TSB #2055123/1				

All warranty claims submitted for payment must be in accordance with the *Audi Warranty Policies and Procedures Manual*. Claims are subject to review or audit by Audi Warranty.

## **Additional Information**

All part and service references provided in this TSB (2055123) are subject to change and/or removal. Always check with your Parts Department and/or ETKA for the latest information and parts bulletins. Please check the Repair Manual for fasteners, bolts, nuts, and screws that require replacement during the repair.

©2019 Audi of America, Inc. All rights reserved. The information contained in this document is based on the latest information available at the time of printing and is subject to the copyright and other intellectual property rights of Audi of America, Inc., its affiliated companies and its licensors. All rights are reserved to make changes at any time without notice. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, nor may these materials be modified or reposted to other sites, without the prior expressed written permission of the publisher.