

# **Technical Service Bulletin**

SUBJECT:			No:	TSB-19-37-003
UNABLE TO C		IG PROCESS	DATE:	May 2019
WHEN RI	EPLACING THE E	PS-ECU	MODE	2018-19 Eclipse Cross
CIRCULATE TO:	[] GENERAL MANAGER	[X] PARTS MANAGER		[ X ] TECHNICIAN
[X] SERVICE ADVISOR	[X] SERVICE MANAGER	[X] WARRANTY PROCESS	DR	[ ] SALES MANAGER

#### PURPOSE

Due to the supplier improperly programming of the Electronic Power Steering ECU (EPS-ECU), when replacing the EPS-ECU, the coding process cannot be competed. When attempting to code the replacement service part, caution "Busy (21)" will be displayed as well as DTC U1195 will be stored.

NOTE: If failure to code the replacement service part occurs, Do NOT attempt to code the part multiple times.

This TSB instructs dealers to reprogram the EPS-ECU with updated software to correct the coding issue.

#### AFFECTED VEHICLES

2018 - 2019 Eclipse Cross vehicles

#### **REQUIRED OPERATIONS**

- 1. Confirm your MUT-III is updated with the latest reprogramming database.
- 2. Reprogram the EPS-ECU with the new software. Refer to the "EPS-ECU Reprogramming Chart" for new software information.

**IMPORTANT:** If an affected vehicle has a Malfunction Indicator Lamp (MIL) illuminated <u>before</u> reprogramming, and DTCs are listed in the EPS-ECU memory, diagnose and repair those DTCs per the service manual <u>before</u> reprogramming. **DO NOT** reprogram the EPS-ECU until the reason(s) for other DTCs being set is corrected.

#### EQUIPMENT

#### The following equipment is needed to reprogram the EPS-ECU.

- VCI (Vehicle Communication Interface) or VCI Lite MB991824 or MB992744V.
- MEDIC Laptop/Tablet with A/C power adapter MIT540031 or FZG1MK2.
- MUT-III main harness 'A' (blue connector at the DLC end) MB991910V or MB992745V.
- USB 2.0 cable MB991827V or RRAR1MBR108GL.
- MEDIC 3.5/4 update at **595** or higher.
- For Standalone MUT-III units, MUT3-SE Reprogramming Database **N190302** or higher.

Copyright 2019, Mitsubishi Motors North America, Inc.


Continued

#### EPS-ECU REPROGRAMMING CHART

Handle	EPS-ECU	Data Number	Software Version		
naliule	Part Number		Previous New		
LHD	8633A111	8633A163	8633A11201	8633A11202	

#### **REPAIR PROCEDURE**


#### SOFTWARE/MEDIC VERSION VERIFICATION

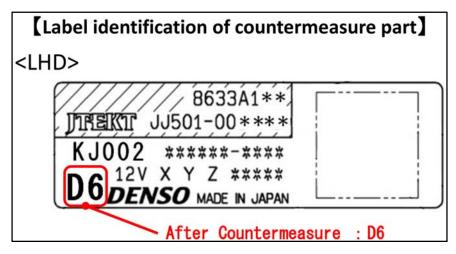

- Verify the identification mark on the EPS-ECU is D0 (before countermeasure). If the Identification mark is D6, then the EPS-ECU has the countermeasure software and reprogramming is not necessary.
- 2. Verify that the EPS-ECU has not already been updated to the latest S/W number in the table above.

If the EPS-ECU is at the latest level, reprogramming is not necessary.

NOTE: Reprogramming the EPS-ECU with the latest database (e.g., N190302) includes all past and current reprogramming for TSBs of affected vehicles. It is not necessary to reprogram the EPS-ECU for each previous TSB.

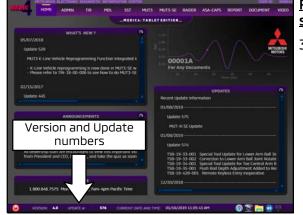


# For MEDIC 3.5/4 users only: (MUT-III STV users go to step 5)

3. Verify the MEDIC 3.5/4 is at version 3.5 and at update **595** or higher.

If your **<u>MEDIC 3.5/4 update is at least 595</u>**, continue with the Reprogramming Procedure.


If your **<u>MEDIC 3.5/4 update is below 595</u>**, update your MEDIC as follows.

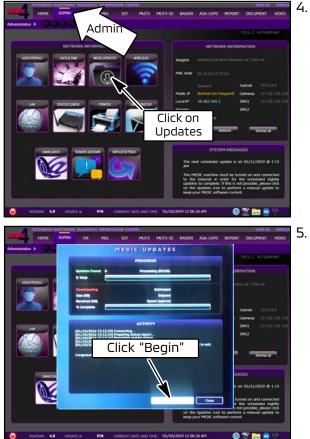

Select the MEDIC 3.5/4 Admin tab and click on "Updates."

 IF the MEDIC update screen advises updates are available, click the "Begin" button. After all updates are complete, <u>GO TO THE REPROGRAMMING</u> <u>PROCEDURE.</u>

- NUTS C
   NUTS
   NUTS
- STANDALONE MUT-III SCAN TOOL VIEWER (STV) ONLY: (MEDIC 3.5 USERS - GO TO THE <u>REPROGRAMMING PROCEDURE)</u>. Verify that your MUT3-SE has the most current version of the reprogramming database: From the MUT3-SE Main Page:
  - a. Click "STV."

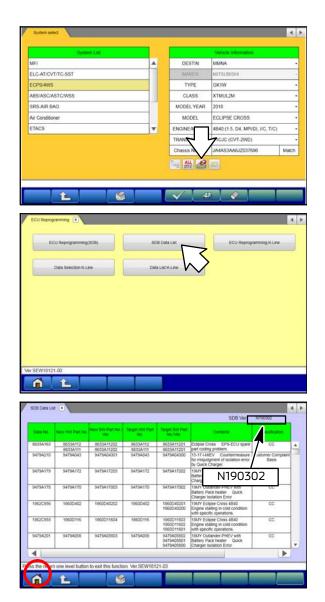

b. Click the "ECU Reprogramming" button.

c. Click "SDB Data List."

- d. Confirm that the database number displayed in the upper right above the chart is **N190302 or higher** 
  - If the database number displayed on your MUT3-SE is N190302 or higher, continue to the next section.
  - If the reprogramming database number displayed on your MUT3-SE is <u>lower</u> than N190302, then the MUT3-SE database needs to be updated.
- e. Once database number is confirmed, hit the Home button to go back to the System Select screen.


#### REPROGRAMMING PROCEDURE

### 

To ensure that the vehicle battery maintains 12V during the procedure, hookup a battery charger to the 12V starter battery during the procedure. The 12V starter battery can be accessed from the rear of the vehicle under the luggage floorboard, in the location shown below.

#### NOTE: VCI Stand-alone reprogramming is not available for this procedure. The laptop/tablet and the VCI must remain connected for the entire procedure.

 Connect the equipment as follows: NOTE: VCI Lite and MEDIC 4.0 Toughpad shown for illustration purposes only.

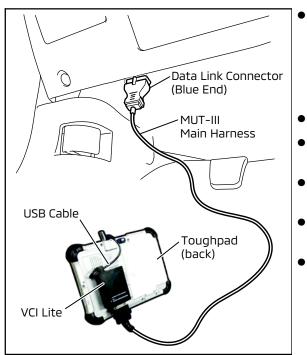


- Turn the MEDIC PC/tablet on. If the battery indicator in the lower right hand corner of the screen does not show a full charge, it is recommended that either the battery be charged prior to beginning, or be used with the A/C power adaptor connected.
- Connect the USB cable to the VCI/VCI Lite.
- When the laptop/tablet displays the MUT-III main screen, connect the USB cable to the device.
- Connect the MUT-III main harness with the blue DLC connection to the VCI/VCI Lite.
- Connect the blue connection of the MUT-III main harness to the vehicle's data link connector.
- For VCI only (p/n MB991824): Turn the VCI power switch ON. Verify that the indicator lamp in the upper right corner of the screen is green.

## 

DO NOT DISTURB THE HARNESS CABLES OR CONNECTIONS DURING THE REPROGRAMMING PROCESS AS IT COULD CAUSE THE CONTROL UNIT TO LOSE DATA. IF THE USB CABLE IS DISCONNECTED DURING THIS PROCEDURE, A WARNING MESSAGE WILL DISPLAY.

2. Turn the ignition switch to the "ON" position.

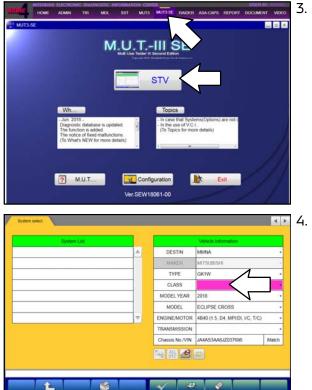

 Using MEDIC, from the main page, click the "MUT3-SE" icon at the top center of the screen to open MUT-III SE.

Click the STV button.


The System Select screen opens and populates with some basic information from the vehicle.

Look at the label on the passenger side B pillar to identify the appropriate class.


If necessary, select the correct class from the drop-down list.

5. Verify that the EPS-ECU has not already been updated to the latest S/W number shown in the **"EPS-ECU Reprogramming Chart"** in this TSB.

If the EPS-ECU is at the latest level, reprogramming is not necessary.

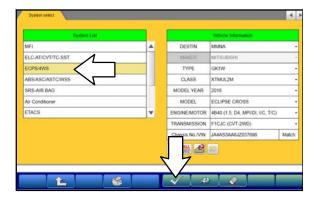

a. Select "**ECPS/4WS**" from the System List, then click on the check mark at the bottom of the screen.

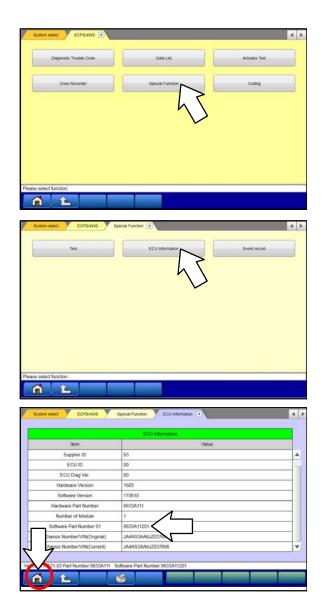

b. Select "Special Function."

c. Select "ECU Information."

 d. If the Software Version listed is not at the latest level (shown in the "EPS-ECU Reprogramming Chart" in this TSB), proceed with the next step. Click the Home button to return to the System Select screen.

If the Software Version **is** at the latest level, then reprogramming is not necessary.

6. Before reprogramming, perform an "**Erase and Read All DTCs**" to clear any DTCs that may have set.

System List	Vehicle Information
Construction of the American State of the Am	DESTIN MMNA -
ELC-AT/CVT/TC-SST	MAKER MITSUBISHI
CPS/4WS	TYPE GK1W ·
ABS/ASC/ASTC/WSS GRS-AIR BAG	CLASS XTMUL2M · · · · · · · · · · · · · · · · · · ·
ar Conditioner TACS	and some and the second s
TAUS	
	Cha VIN JA4AS3A6JZ037696 Match
	1 m Ht 🔐 🔤
L S	V # V
	4 >
aotos 🔹	4 >
Read al DTCs Erase a	and Read all DTCs
	5
	h
	v
ct function.	
AI DTCs Erase and Read at DTCs	
AFDTCs Erase and Read at DTCs	< >
Al DTCs Erase and Read at DTCs C	< <u>x</u>
System List	× 1
System List Select System Name Results	Cit Hormaton
System List Select System Name Results	Cel Information
System List Select System Name Results I MF1 I I Al DICC I ELCATICV/I/IC-SST	LIPSE CROSS
System Lat Select System Name Results C MFI ELCATIOV/I/TC.SST ECPSI4WS	LIPSE CROSS
System Lat           Select         System Name           Ø         MF1           Ø         LEL           Ø         ECPS/eWS           Ø         ECPS/eWS           Ø         ABSASC/ASTC/WS           Ø         ABSASC/ASTC/WS	LIPSE CROSS
System Lat Select System Name Results W IF1 CATION/IFC.SST ECPSI4VS Q AI DTCs	LIPSE CROSS
System Lat           Select         System Name           Ø         MF1           Ø         LEL           Ø         ECPS/eWS           Ø         ECPS/eWS           Ø         ABSASC/ASTC/WS           Ø         ABSASC/ASTC/WS	LIPSE CROSS
System Lat           Select         System Name         Results           Image: Select System Name         Results         All DTCs           Image: Select Se	LIPSE CROSS
System Name         Results           Ø         MF1         A DTCs           Ø         ELCATICV/T/CSST         Ø         AI DTCs           Ø         ELCATICV/T/CSST         Ø         AI DTCs           Ø         ESASCASTC/VF         Start the AI DTC           Ø         ASSASCASTC/VF         Start the AI DTC           Ø         AFACONTROLOGY         Start the AI DTC	LIPSE CROSS
System Lat           Select         System Name         Results           Image: Select System Name         Results         All DTCs           Image: Select Se	LIPSE CROSS
System Latt           Select         System Name           W FI         Facults           W ELCATIOV/ITC-SST         All DTCs           V         ELCATIOV/ITC-SST           V         ECPS-revis           Ø         ABSASCIASTCWN           Ø         SRS-AR BAG           Ø         All OCc           Ø         SRS-AR BAG           Ø         FLACS           Ø         TPMS	LIPSE CROSS
System Latt           Select         System Name           W FI         Facults           W ELCATIOV/ITC-SST         All DTCs           V         ELCATIOV/ITC-SST           V         ECPS-revis           Ø         ABSASCIASTCWN           Ø         SRS-AR BAG           Ø         All OCc           Ø         SRS-AR BAG           Ø         FLACS           Ø         TPMS	LIPSE CROSS
System Latt           Select         System Name           W FI         Facults           W ELCATIOV/ITC-SST         All DTCs           V         ELCATIOV/ITC-SST           V         ECPS-revis           ABSASCIASTCWN         Start the 4D DIS           V         SRS-AR BAG           V         ELCCS           V         All DTCs           V         TPAIS	LIPSE CROSS
System Latt           Select         System Name           W FI         Facults           W ELCATIOV/ITC-SST         All DTCs           V         ELCATIOV/ITC-SST           V         ECPS-revis           ABSASCIASTCWN         Start the 4D DIS           V         SRS-AR BAG           V         ELCCS           V         All DTCs           V         TPAIS	LIPSE CROSS
System Name Results Select System Name Results MFI ELCATCVT/TC-SST EECSEVVS SAR BAG ABS/ASC/ASTCVV SSS-AIR BAG A rc Constioner E AI Constioner E EIACS	LIPSE CROSS
System Latt           Select         System Name           W FI         Facults           W ELCATIOV/ITC-SST         All DTCs           V         ELCATIOV/ITC-SST           V         ECPS-revis           ABSASCIASTCWN         Start the 4D DIS           V         SRS-AR BAG           V         ELCCS           V         All DTCs           V         TPAIS	LIPSE CROSS
System Latt           Select         System Name           W FI         Facults           W ELCATIOV/ITC-SST         All DTCs           V         ELCATIOV/ITC-SST           V         ECPS-revis           ABSASCIASTCWN         Start the 4D DIS           V         SRS-AR BAG           V         ELCCS           V         All DTCs           V         TPAIS	LIPSE CROSS
System Lati System Name Results System Name Results Setter Autors ELCATIOVITICSST CONSIGNER RESAR BAG Starte Autors Frances Fr	LIPSE CROSS
System Lati System Name Results System Name Results Setter Autors ELCATIOVITICSST CONSIGNER RESAR BAG Starte Autors Frances Fr	LIPSE CROSS
System Latt       Select     System Name       If IFI     A LOTOS       If IFI     A LOTOS       If IFI     A LOTOS       If IFI     If ALD ICS       If IFI     If ALD ICS       If IFI     If IFI	LIPSE CROSS
System Latt       Select     System Name       If IFI     ALD TCS       If IFI     ALD TCS       If IFI     If IFICS       If IFICS     If IFICS <tr< td=""><td>s. UPSE CROSS</td></tr<>	s. UPSE CROSS
System Lat.       Select     System Name     Results       MFI     If A DTCs       Image: ELCATIOV/ITC-SST     Image: A LDTCs       Image: ELCATION     Image: A LDTCs       Image: ELCATI	cs.
System Lat.       Select.     System Name     Results       ✓     MFI     If At DTCS       ✓     ELC-ATICV/T/C-SST     If At DTCS       ✓     ECPS:eVS     Start the At DTC       ✓     FEACS     If At CodSoore       ✓     ETCACS     If TPAS	Cs. UPSE CROSS
System Lat.       Select     System Name     Results       MFI     If A DTCs       Image: ELCATIOV/ITC-SST     Image: A LDTCs       Image: ELCATION     Image: A LDTCs       Image: ELCATI	cs.
System Lat.       Select.     System Name     Results       ✓     MFI     If At DTCS       ✓     ELC-ATICV/T/C-SST     If At DTCS       ✓     ECPS:eVS     Start the At DTC       ✓     FEACS     If At CodSoore       ✓     ETCACS     If TPAS	Cs. UPSE CROSS
System Lat       Select     System Name     Results       If HF1     ALD TOC       ECPS/RVS     Interface       ISRS/ACCASTOWE     Start the AD OTC       ISRS/AR BAG     Start the AD OTC       ISRS/AR BAG     Start the AD OTC       ITHAS     Interface       ITHAS     Interface       ISRS/AR BAG     Start the AD OTC       ITHAS     Interface       ITHAS     Interface       ISRS/AR BAG     Start the AD OTC       ITHAS     Interface       INTERFace     Start the AD OTC       INTERFace     Interface       INTERFace     Interface <t< td=""><td>LIPSE CROSS  B TVXTNUL2M  VXTNUL2M  VXTNUL2M  VXTNUL2M  VXTNUL2M  C C C C C C C C C C C C C C C C C C</td></t<>	LIPSE CROSS  B TVXTNUL2M  VXTNUL2M  VXTNUL2M  VXTNUL2M  VXTNUL2M  C C C C C C C C C C C C C C C C C C
System Latt       Select     System Name     Results       If     If     If     At DTCS       If     ECALICY/ITCSST     If     At DTCS       If     ASSASCASTCOVE     If     If       If     SRSAR BAG     If     If       If     At Conditioner     If     If       If     ETACS     If     If       If     TPAIS     If     If       If     If     If     If       If     If     If     If       If     If     If     If       If     State Bad at DTCs     If     If       If     If     If       If     If     If	LIPSE CROSS  B TVXTNUL2M  VXTNUL2M  VXTNUL2M  VXTNUL2M  VXTNUL2M  C C C C C C C C C C C C C C C C C C
System Lat.       Select     System Name       W IAT     C Al DTC       P     ELC-ATIC/VT/TC-SST       P     EDS-SKVS       P     ASSASCASTCVV       P     ELGS       P     ELGS       P     ELGS       P     TPMS	LIPSE CROSS  B TVXTNUL2M  VXTNUL2M  VXTNUL2M  VXTNUL2M  VXTNUL2M  C C C C C C C C C C C C C C C C C C
System Lat.       System Name     Results       MFI     If A DTCs       Image: ELCATIC/VT/TC_SST     Image: A LDTCs       Image: A LDTC/VT/TC_SST     Image: A LDTCs       Image: A LDTC/VT/TC	LIPSE CROSS
System Lat.       Select     System Name       W FF1     C A D TCC       W ELC-ATIC/VT/TC-SST     Image: Conditioner       W BS-ARE BAG     Image: Conditioner	LIPSE CROSS
System Lat.       Select     System Name     Results       Image: Fill and the select of th	LIPSE CROSS
System Name     Results       Select     System Name     Results       WFI     If A DTCs       If ELC-ATIC/VT/TC-SST     If A DTCs       If ASSASC/ASTC/WS     Start the AD DTCs       If ASSASC/ASTC/WS     Start the AD DTCs       If ASSASC/ASTC/WS     Start the AD DTCs       If ACCS     Start the AD DTCs       If ASSASC/ASTC/WS     Start the AD DTCs       If ACCS     If AD DTCS       If AD TCS     Start the AD DTCs       If AD TCS     If AD TCS       If AD TCS     If AD TCS <td>LIPSE CROSS</td>	LIPSE CROSS
System Name     Results       Select     System Name     Results       Image: Select Name     Image: Select Name     Image: Select Name       Image: Select Name     ELC-ATIC/VT/TC-SST     Image: Select Name       Image: Select Name     Results     Image: Select Name       Image: Select Name     Select Name     Image: Select Name       Image: Select Name     Select Name     Image: Select Name       Image: Select Name     Image: Select Name     Image: Select Name       Image: Select Name     Image: Select Name     Image: Select Name       Image: Select Name     Image: Select Name     Image: Select Name       Image: Select Name	LIPSE CROSS

a. On the System Select screen click the "ALL DTC" button.

b. Select "Erase and Read All DTCs."


c. A window will pop up asking you to confirm DTC erasing. Click the check mark in the dialog box for DTC erasing and reading to begin.

- d. The "System List" on the left side of the screen will have all selections checked. <u>Do not</u> change these selections.
- e. Click the check mark to continue.

Select	System Name	Results		Code	1	Name	Status	
1	SRS-AIR BAG	ALDTCs						
2	Air Conditioner	-				1		
1	ETACS	All DTCs						
1	TPMS	All erasing a	and check	s are completed.	. 1			1
1	Metor	Execute "Re detected DT	ead all DT	Cs" if you confirm use the DTCs that	he are erasing			1
4	Steering Angle Sensor	now may be	e displayer	d in check result.				1
1	FAST/05S/MMO/Keyn							
4	OCM	$\checkmark$						Ŧ
w DTCs				~	X			4   Þ
a DTCs	System List					C trouble code()		<b>↓</b> ▶
a DTCs		Results		Code		c trouble code() Name	0 Status	<.
a DTCs elect	System List System Name	Results		Code				
elect	System List System Name MFI	Results OK		Code				
ar DTCs ielect	System List System Name MFI ELC-AT/CVT/TC-SST	Results OK OK		Code				
ar DTCs ietect	System Lat System Name MFI ELC-AT/CVT/TC-SST ECPS/4WS	Results OK OK OK		Code				
ar DTCs are betock I I I I I I I I I I I I I I I I I I I	System List System Name MFI ELCATICVT/TC-SST ECPS:4WS ABS/ASC/ASTCW/SS	Results OK OK OK		Code				
ar DTCs are betock I I I I I I I I I I I I I I I I I I I	System List System Name MFI ELC-ATICV17TC-SST ECPS:4WS ABS/ASC/ASTCWSS SRS-AIR BAG	Results OK OK OK OK		Code				
a DTCs	System Latt System Name MST ELCAT/CVT/TC-SST ECPSI-KVS ABS/ASC/ASTC/VSS SRS-AIR BAG Air Conditioner	Results OK OK OK OK OK		Code				

- When DTC erasing is completed, click the check mark in the pop-up message that reads "All erasing and checks are completed."
  - a. If any DTCs return after erasing is completed, click the check mark to clear the window. Diagnose and repair per the Service Manual.
  - b. If DTCs do not return, click the check mark to clear the window, then click the Home icon in the lower left to return to the System Select menu.

8. **Reprogram the EPS-ECU** following the steps below.

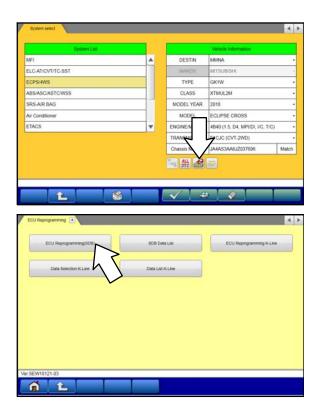

a. On the System Select page, click on the Reprogram button.

b. Select "ECU Reprogramming (SDB)."

			Address Information	_
System List			Vehicle Information	
MFI	<b>A</b>	TYPE	GK1W	
ELC-AT/CVT/TC-SST		CLASS	XTMUL2M	
ECPS/4WS		MODEL YEAR	2018	
ABS/ASC/ASTC/WSS		MODEL	ECLIPSE CROSS	
SRS-AIR BAG		Chassis No./VIN	JA4AS3AA6JZ037696	Match
Ar Conditioner ETACS				
SEW18121-03		Check the vehicle in press the OK buttor	e reprogramming data. formation and select the syst i level button change the sele	A CONTRACTOR OF
ECU Reprogramming(SDB)				•
Bystem Search result series ECPS/4WS Necessary	8633A163 86	W Part No. New SW Part Vec. 33A111 8633A1120	No. N	a SW Part 9 Wet 3A11201
Select the reprogramming data syste	m by system and press the C	*		•
SEW18121-03		$ \rightarrow / $		
3EW10121-03				
		$\checkmark$	10 10 10 10 10	
ECU Reprogramming(SDB)				<
construction (C)				NON PAR
System Search result select ECPS/WVS Necessary		33A111 8633A1120	No./ Correct HW Paint Correct No. No. No. No. No. No. 2 B633A111 8633	3A11201
System Search result select ECPS/WVS Necessary	0633A163 06	33A111 8633A1120 data.		
System Search result select ECPS/WVS Necessary	D633A163 D6	33A111 8633A1120 data. mming data.		SA11201
Bythem Search level and ECPS-IVVS Necessary	Check reprogramming     Check reprogramming	33A111 8633A1120 data. mming data.		SA11201
Bythem Search level where ECPS-IVVS Necessary	Check reprogramming     Check reprogramming	33A111 8633A1120 data. mming data.		SA11201
Bythem Search level and ECPS-IVVS Necessary	Check reprogramming     Check reprogramming	33A111 8633A1120 data. mming data.		SA11201

c. Select "**ECPS/4WS**" in the System List, then click the check mark.

- d. Verify that the correct data file listed in the table matches the one in the "EPS-ECU Reprogramming Chart."
- e. Click the check mark at the bottom of the page to initiate reprogramming.
- f. Click the check mark in the "Check reprogramming data" dialog box.



 ECU Reprogramming(SCD)
 Immunity reports
 Immunity reports
 Immunity reports

 Notice
 Destination
 Destination
 Destination
 Destination

 Immunity
 Destination
 Destination
 Destination
 Destination
 Destination

 Immunity
 Destination
 Destination
 Destination
 Destination
 Destination
 Destination
 Destination

 Immunity
 Destination
 Destination
 Destination

-

n t

g. Once the reprogramming is initiated, the screen shown will indicate the reprogramming progress.

NOTE: Do NOT disturb the cables or turn off the ignition during reprogramming.

h. Once reprogramming is completed, click the check mark in the "Completed" dialog box.

i. Verify the correct information is listed in the table. Click the check mark at the bottom of the page, then click the Home button to return to the System Select screen.

- 9. Perform an "Erase and Read All DTCs" again to clear any DTCs that may have set. **For instructions, refer to steps 6 and 7 in this TSB.**
- 10. Confirm the software version has been updated. **For instructions, refer to step 5 in this TSB.**

	ECU Information	
	Value	Item
	93	Supplier ID
	00	ECU ID
0	00	ECU Diag Ver.
	1605	Hardware Version
	170620	Software Version
	8633A111	Hardware Part Number
		Number of Module
	8633A11202	Software Part Number 01
	JA4A53AA6JZ037696	Chassis Number/VIN(Original)
	JA4AS3AA6JZ037696	Chassis Number/VIN(Current)

Confirm "Software Version" now matches the NEW one shown in the **"EPS-ECU Reprogramming Chart"** in this TSB.

- 11. Complete the VIN writing and Variant coding on the EPS-ECU.
- 12. Turn off the ignition switch and disconnect the MUT-III. Turn off and disconnect the battery charger.
- 13. Test drive the vehicle to confirm proper operation of the power steering.

#### WARRANTY INFORMATION

This bulletin is supplied as technical information only and is not an authorization to repair. If an affected vehicle is reported with the described condition, diagnose the condition, repair as described in this bulletin and submit a normal warranty claim using the following information.

Operation	Labor Operation Code	Nature Code	Cause Code	Time Allowance
Reprogram EPS-ECU	378501 WS	60D	5A0	0.3 hrs.

Warranty Coverage: 5 years / 60,000 miles (Canada: 8 years / 100,000 km)