


ECLIPSE CROSS FUEL SMELL CONCERN:


Breather Hose and Vacuum Pipe and Hose Assembly Replacement Procedure

REMOVAL


- 1) Remove the engine cover.

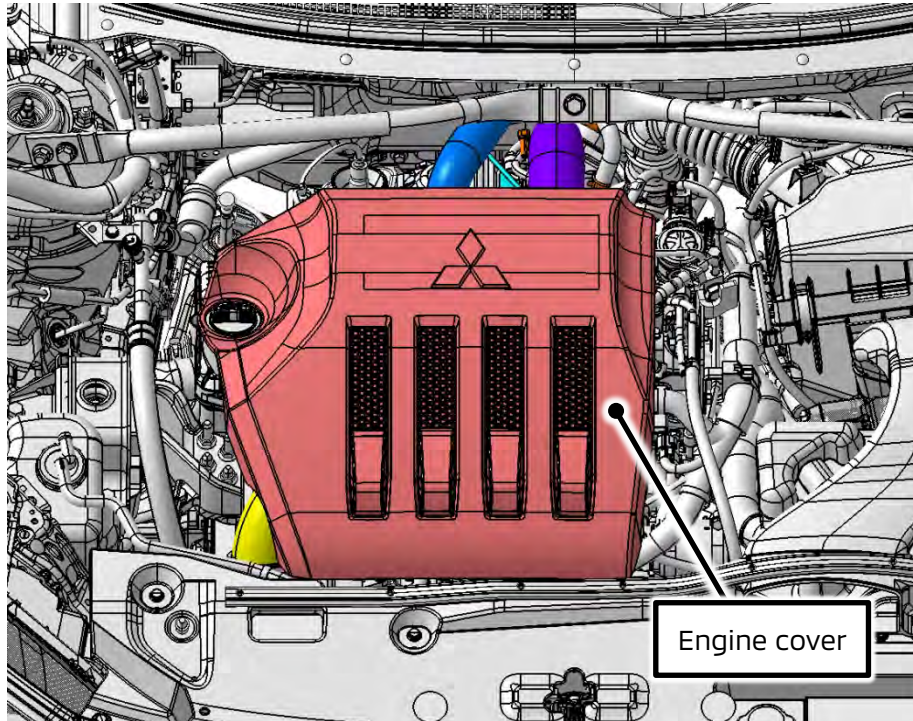


- 2) Remove the breather hose.

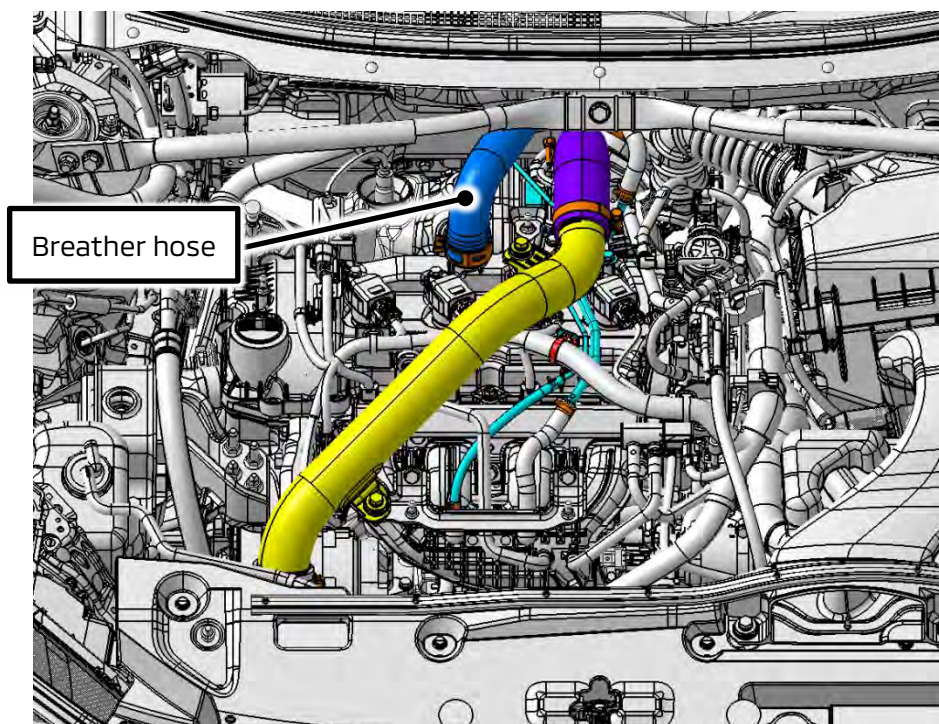



- 3) Remove the air intake pipe.
Loosen the hose clamps on both ends, then remove the 2 bolts.

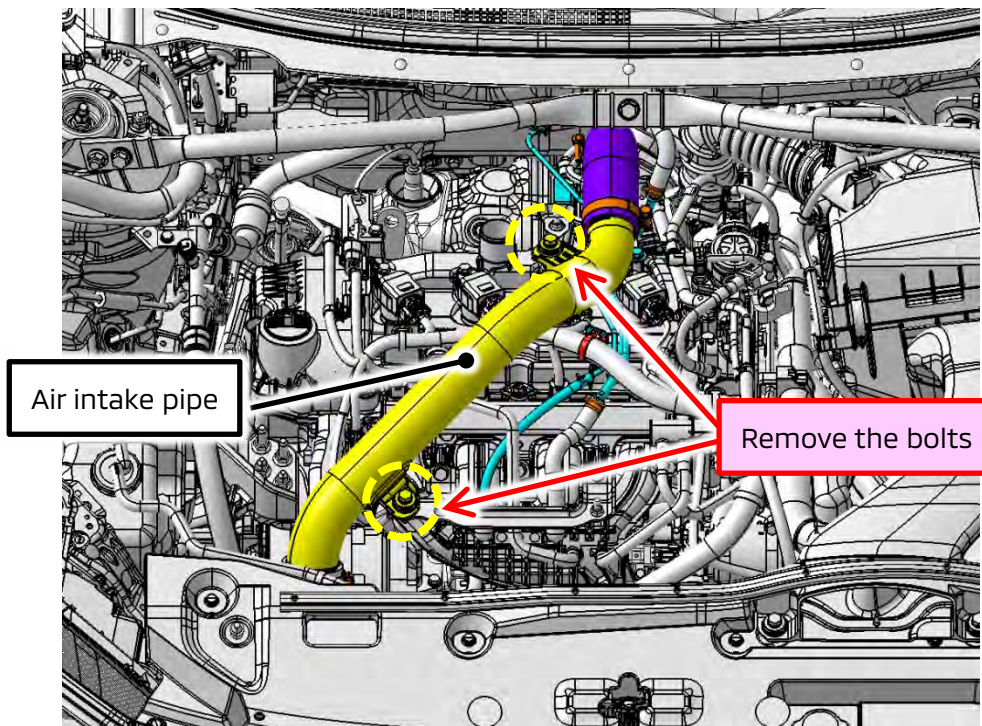

- 4) Remove the air intake hose.


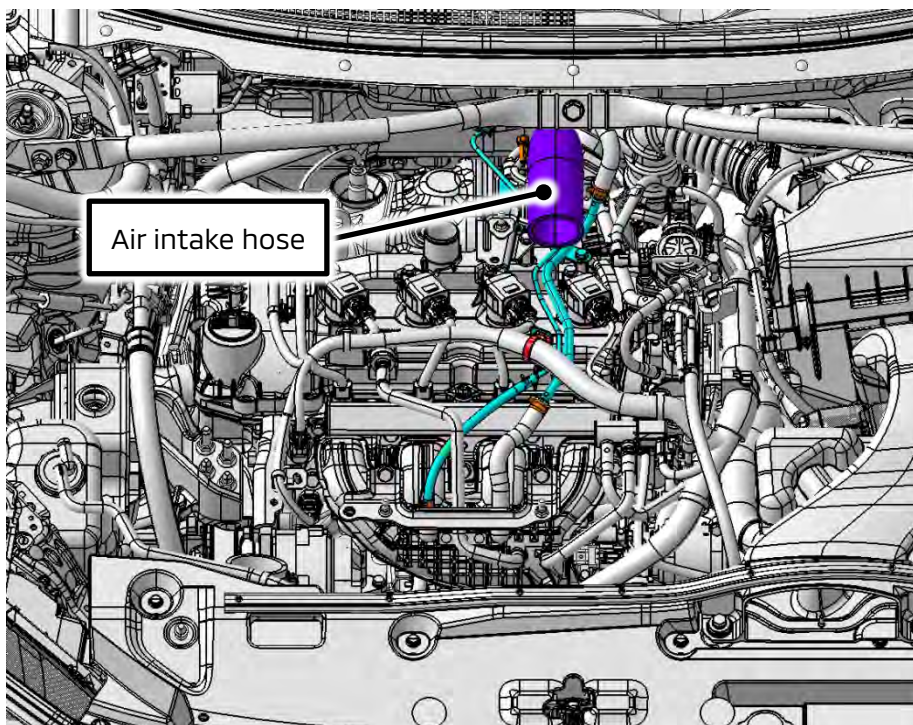


5) Remove the harness clip.

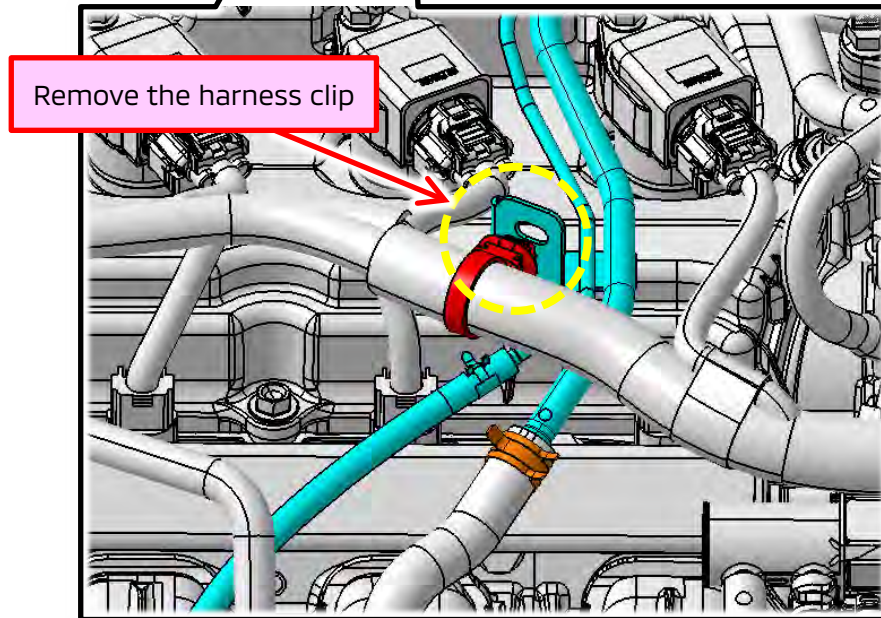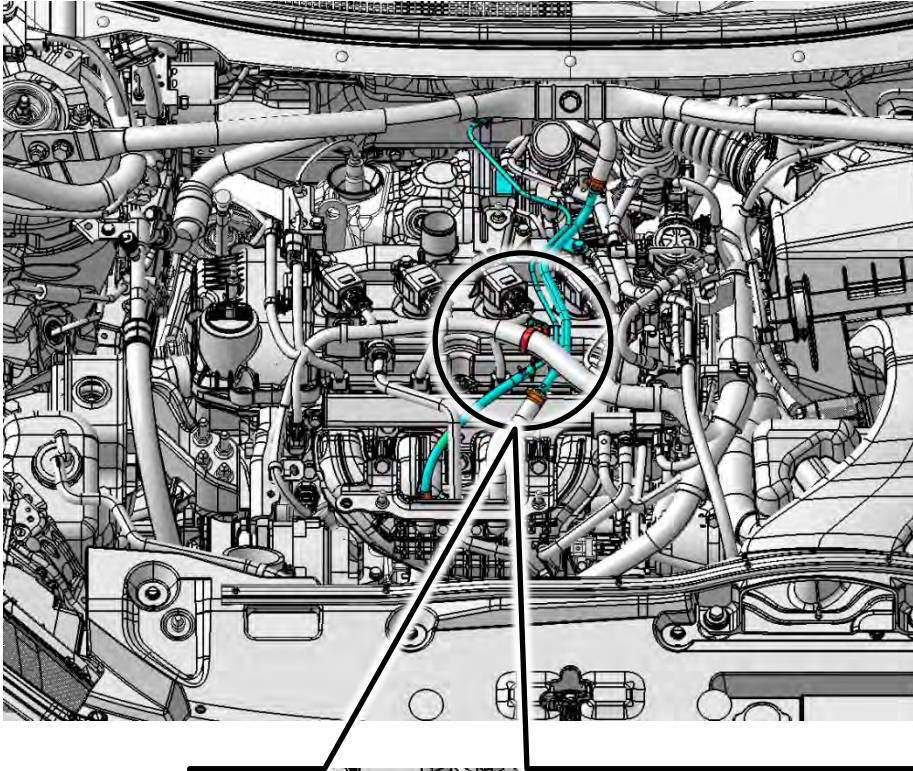

Remove the harness clip

6) Remove the vacuum pipe and hose assembly.


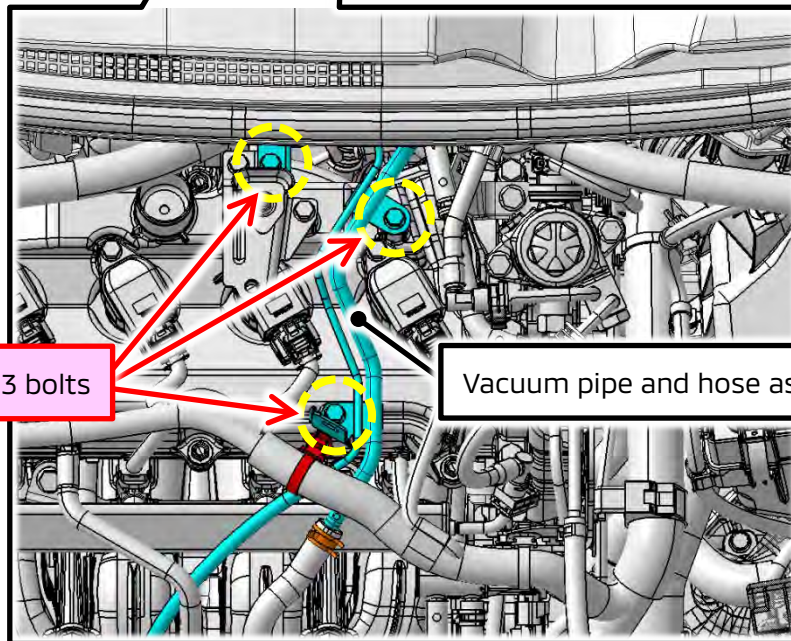
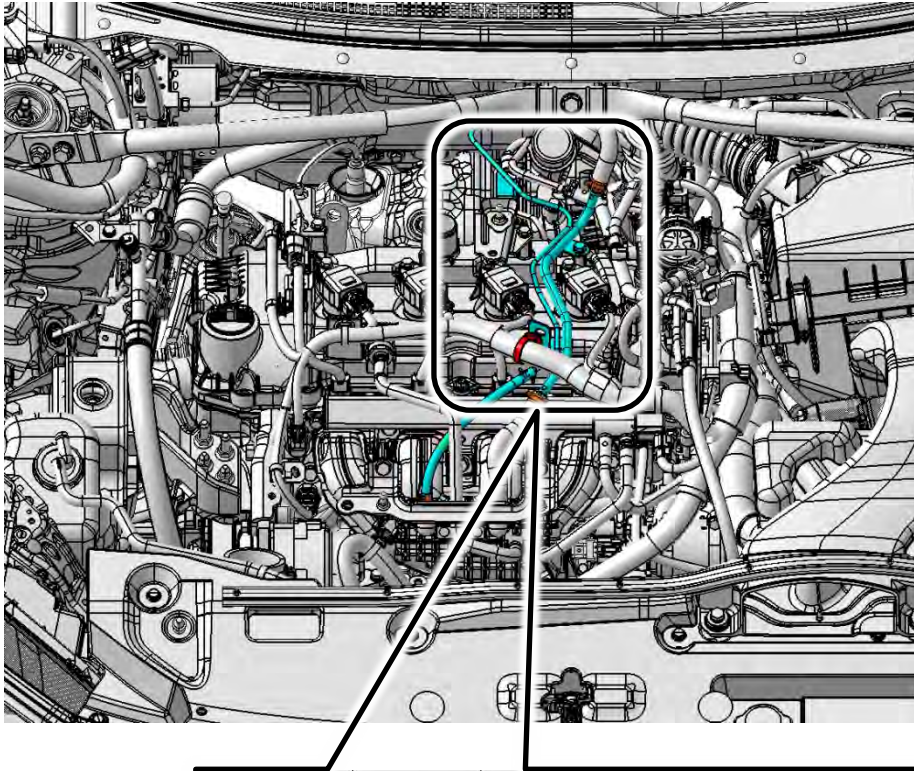


Remove the 3 bolts



Vacuum pipe and hose assembly

INSTALLATION

7-a) Attach the new vacuum pipe and hose assembly (p/n 1632A454).

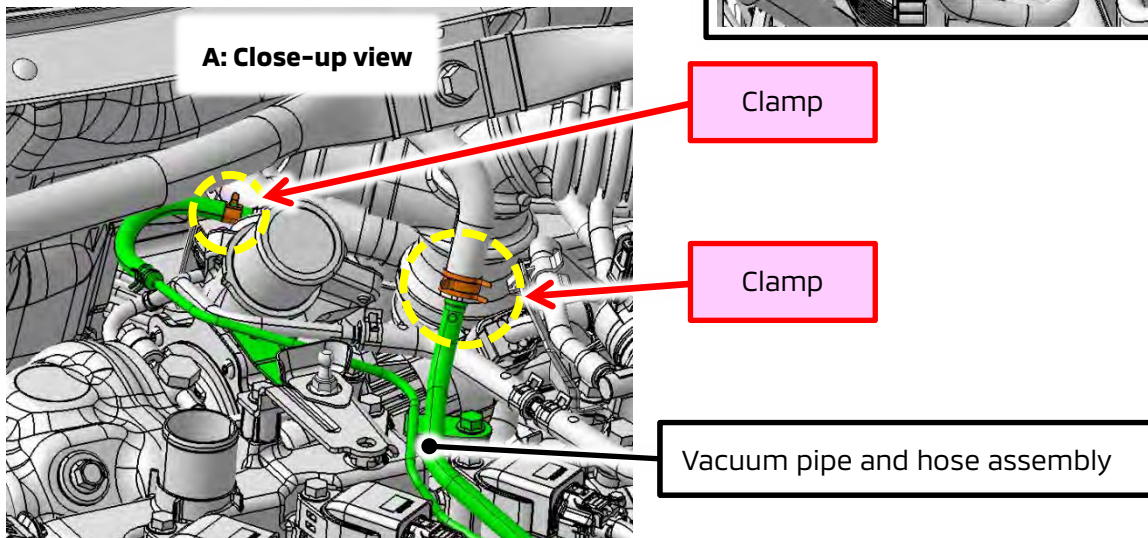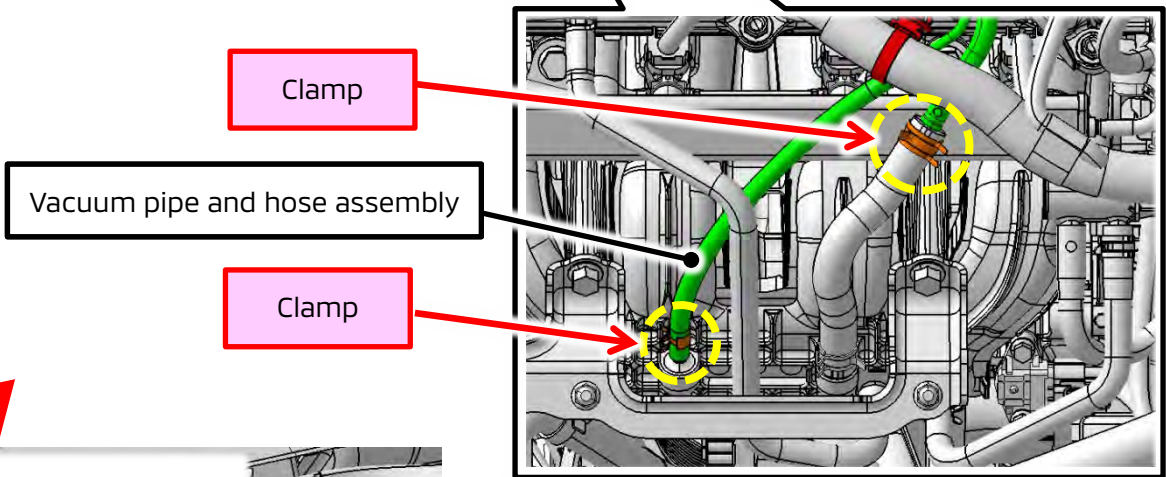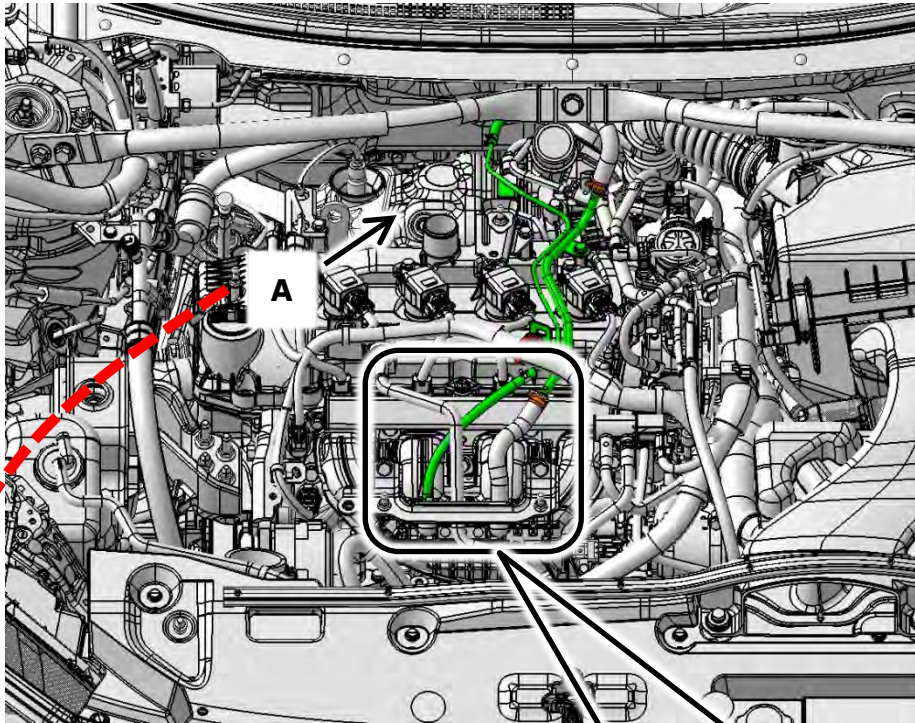


7-b) Attach the new vacuum pipe and hose assembly (p/n 1632A454).

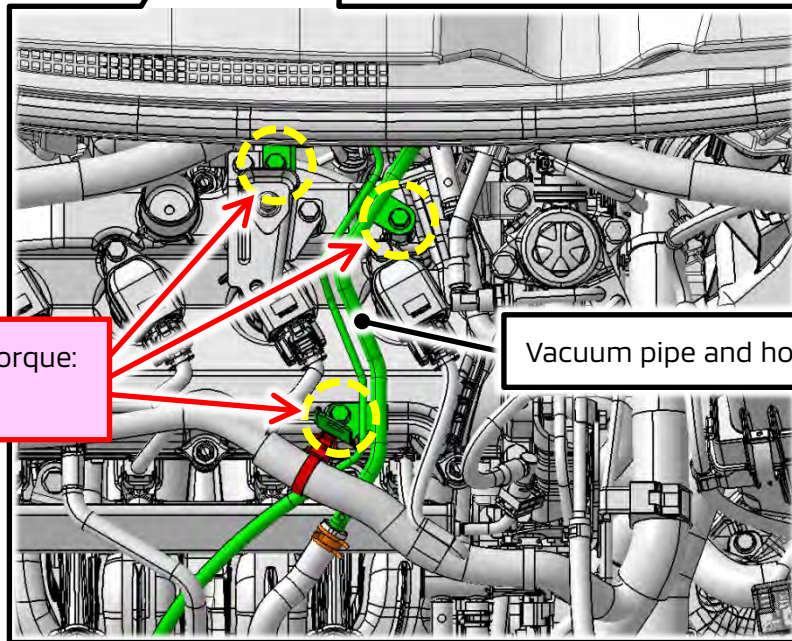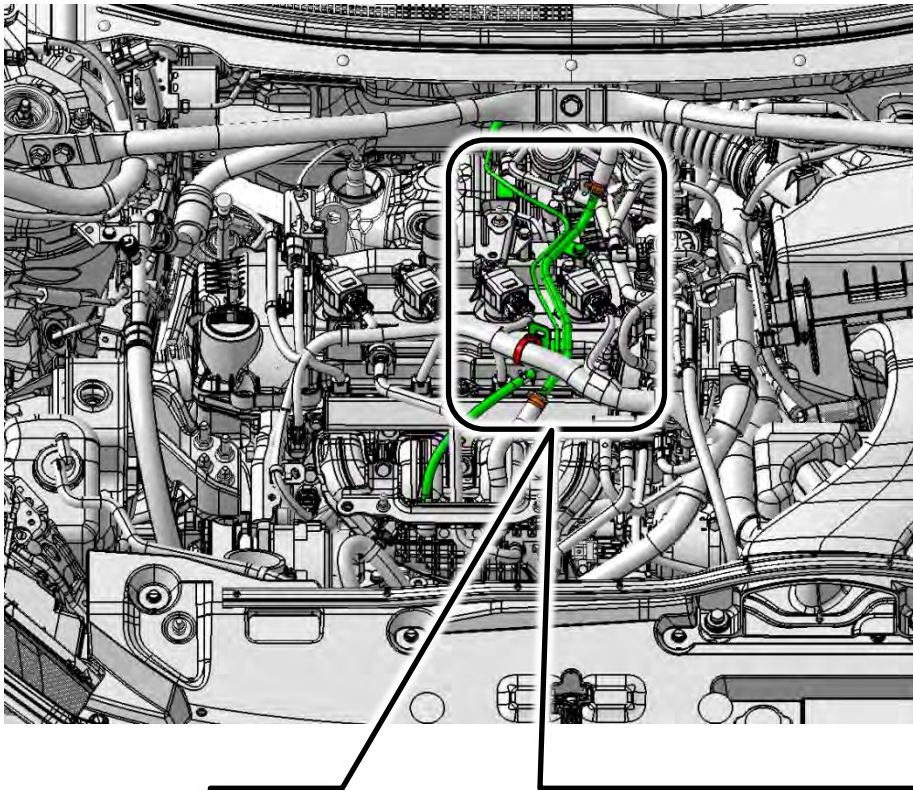


Bolt tightening torque:
8~12 N • m

Vacuum pipe and hose assembly



8) Attach the harness clip.

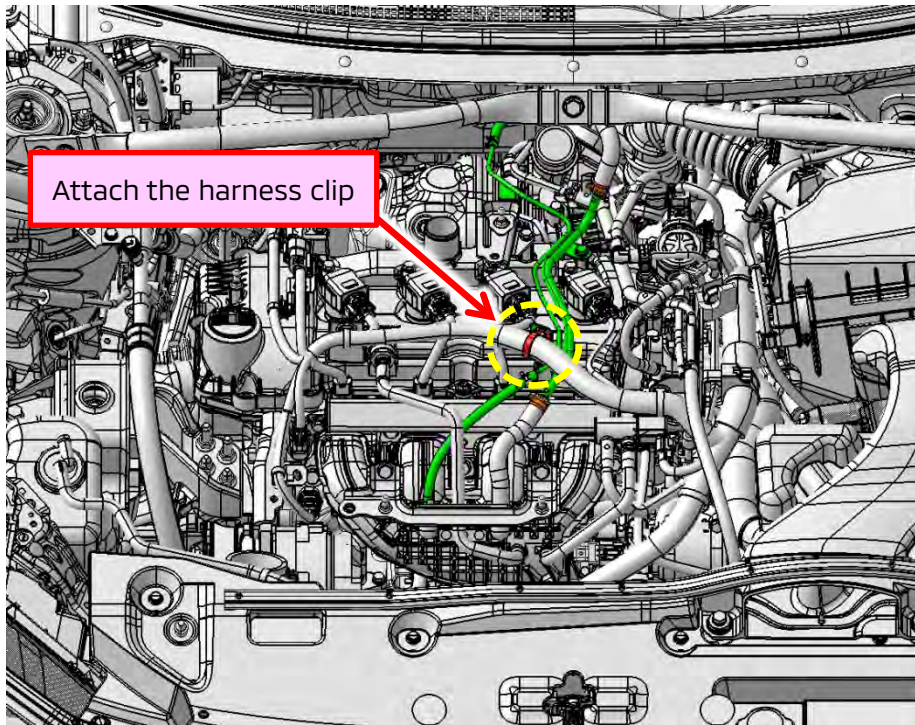


9) Attach the air intake hose.

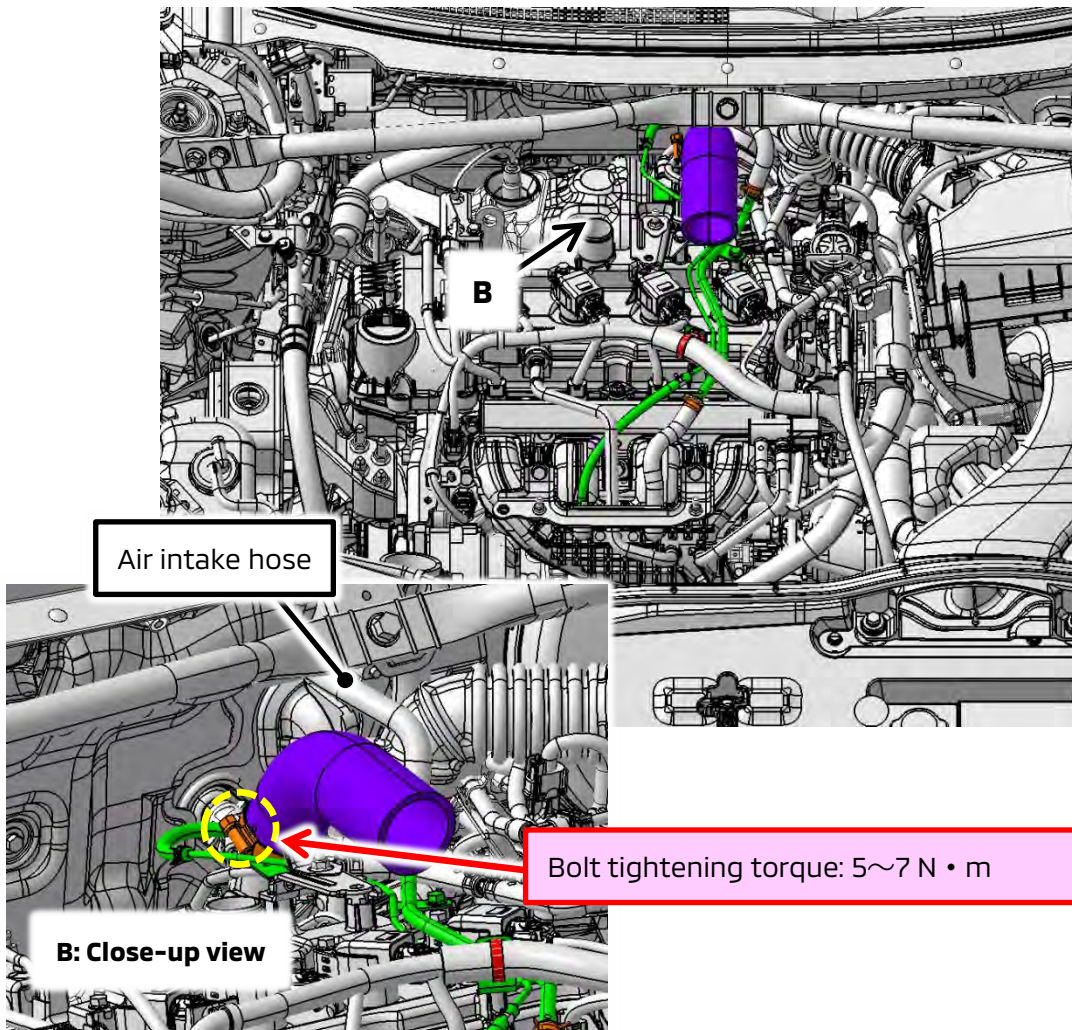


- 10) Attach the air intake pipe.
Tighten the clamps, then reinstall and tighten the 2 bolts.

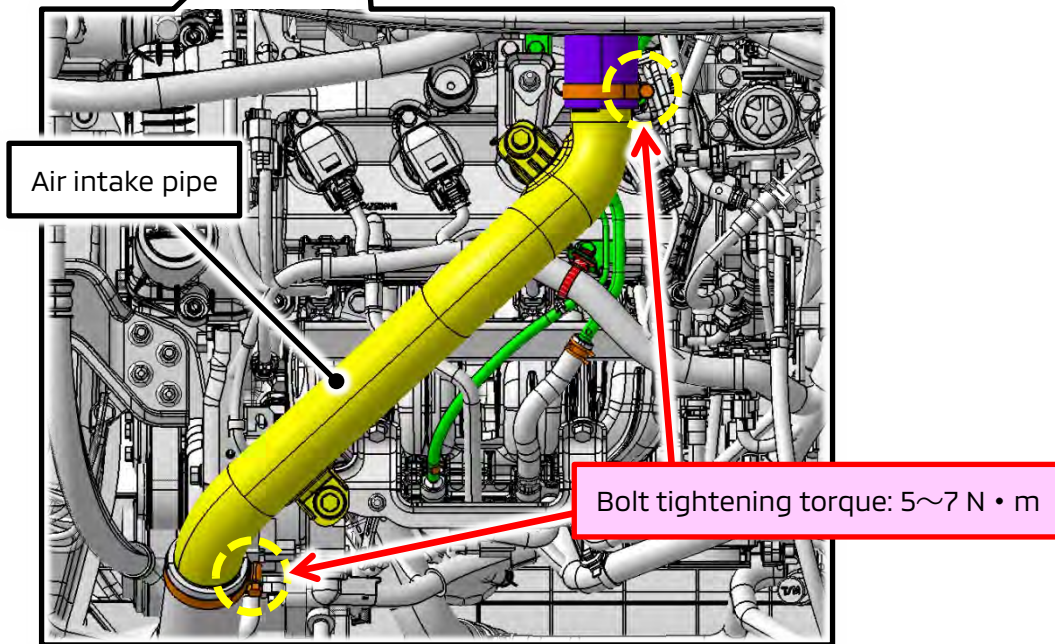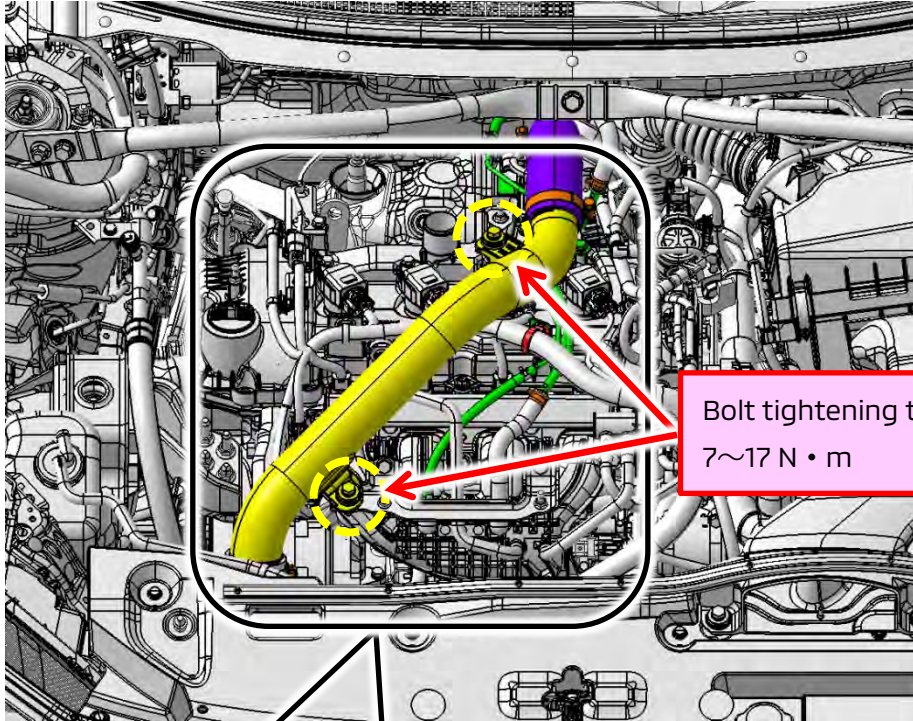


11) Attach the hose protector (p/n 1035B467) to the breather hose (p/n 1035B477) as shown.

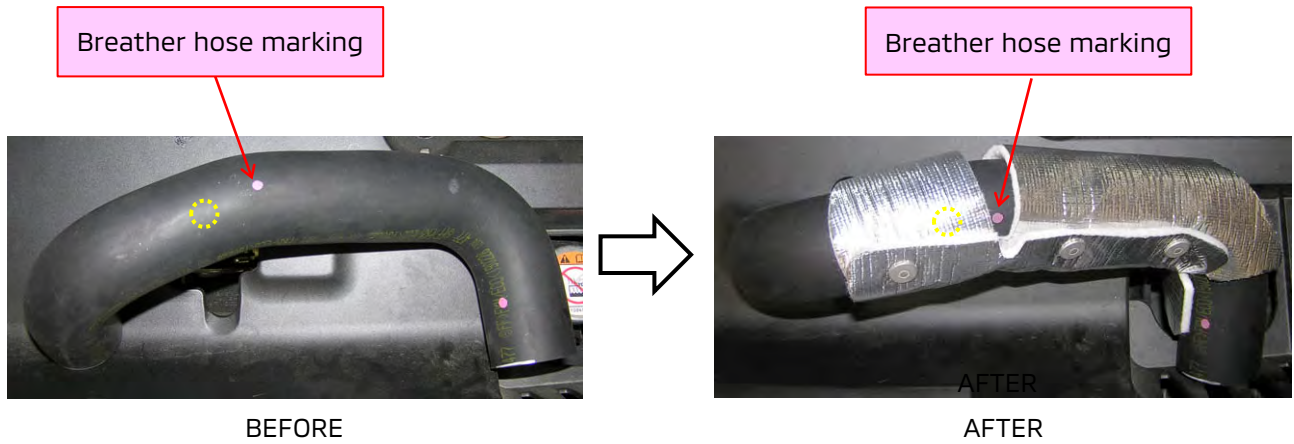


12) Attach the breather hose (p/n 1035B477) with protector attached.

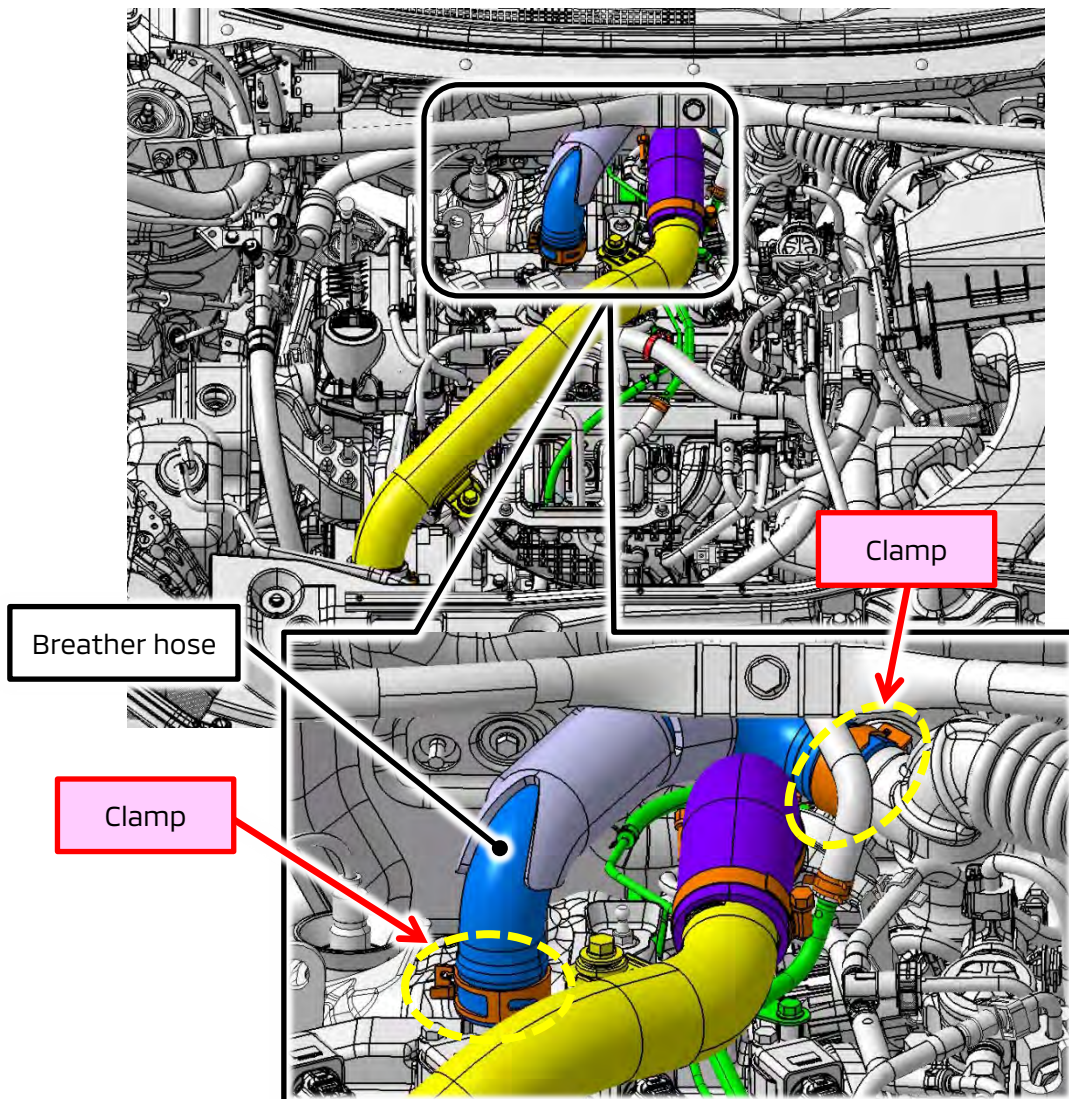

- 13) Pass hose protector A (p/n 1035B491) between the vacuum pipe bracket and the breather hose.

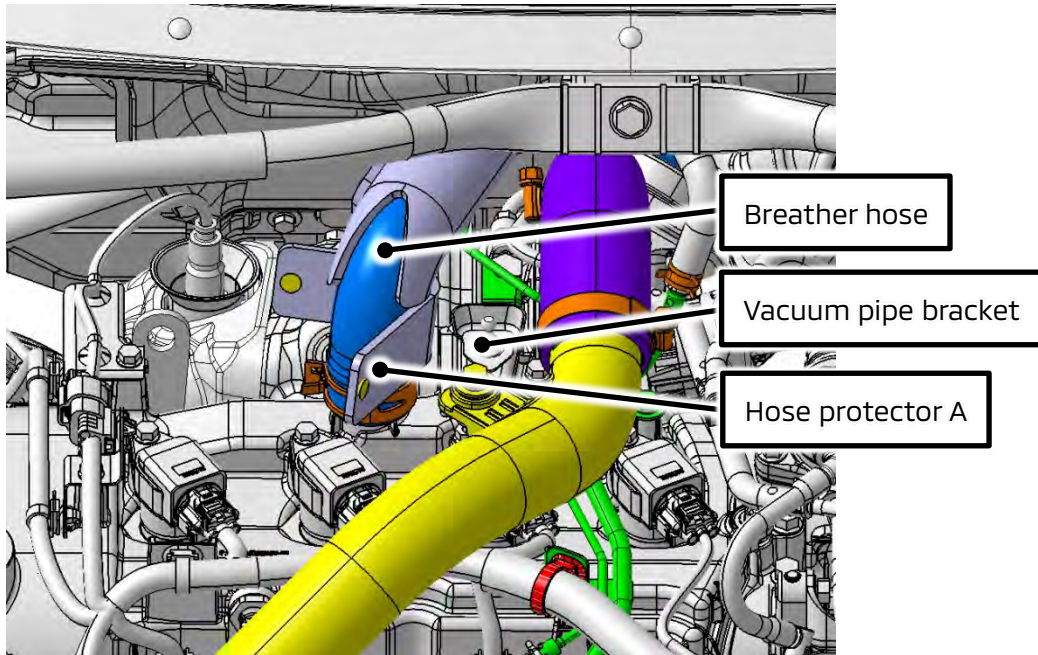

- 14) Fasten the hose protector A (p/n 1035B491) so that the button part comes in front of the engine as shown.

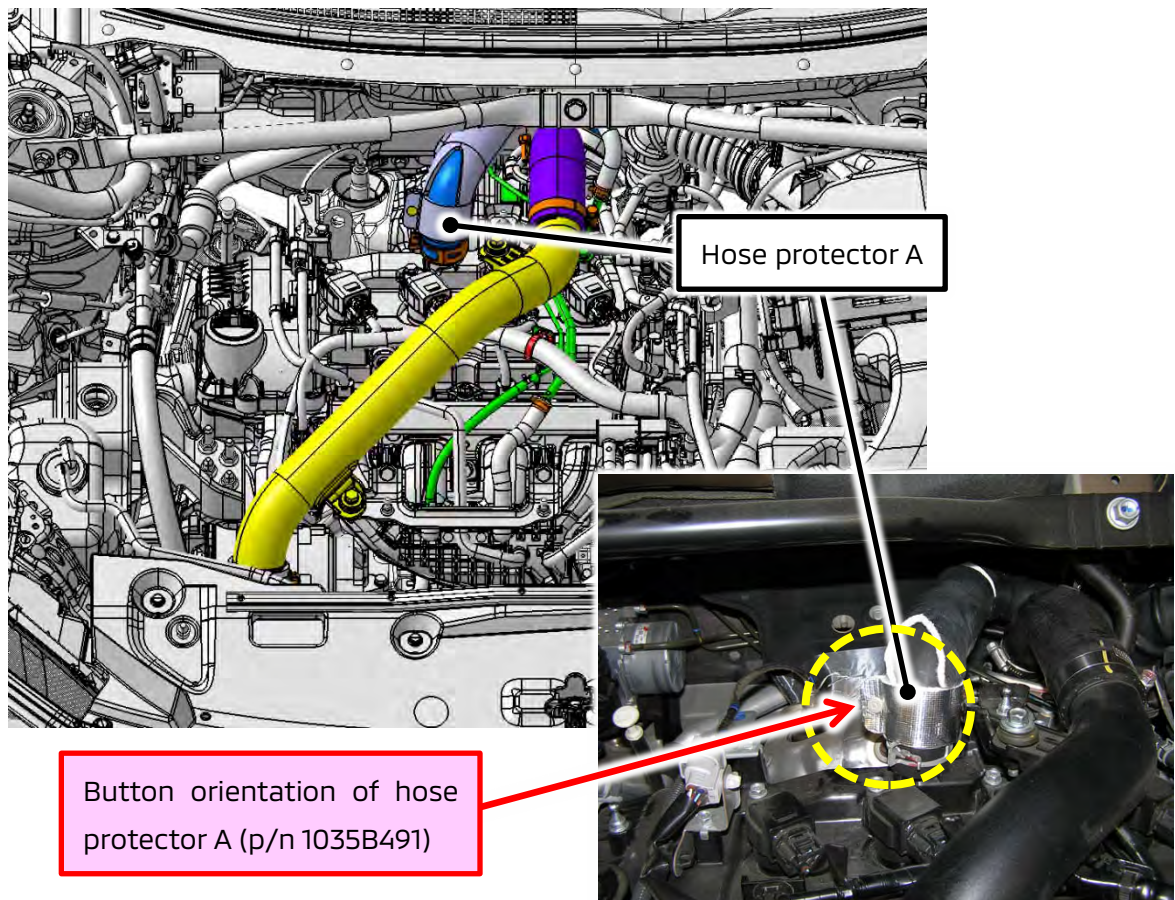

15) Reattach the engine cover.

