	ATC	Tech Tip T	-TT-0544-19	Market	May 22, 2
	ght F	Function Inoperativ	V C Section	US/	Ą
	rior		Lighting (int)		
015-2017	Camry	and Camry HV			
PPLICABLE	VEHI	CLES			
2015-2017		Camry	2015-2017	Camr	/ HV
		, ,			
	0017				
			amry HV vehicles may exhibit ir	operative	e interior lighting
sues, such	n as do	ome light inoperative when	n door is open.		
ECOMMENI	DATION	IS			
			first confirm the dome light (or (other inte	rior lights) switc
hen diagn	osing	interior lighting functions,	first confirm the dome light (or o	other inte	rior lights) switc
hen diagn	osing		first confirm the dome light (or a	other inte	rior lights) switc
/hen diagn set to illun	nosing ninate	interior lighting functions, when the door is open.			C <i>i</i>
'hen diagn set to illun or example	nosing ninate e, if the	interior lighting functions, when the door is open. customer concern is that	t the dome light does not turn of	n when th	ne doors are op
'hen diagn set to illun or example ake sure t	nosing ninate e, if the he "Inte	interior lighting functions, when the door is open. customer concern is that		n when th	ne doors are op
/hen diagn set to illun or example ake sure t ith diagnos	nosing ninate e, if the he "Inte sing.	interior lighting functions, when the door is open. customer concern is that	t the dome light does not turn of	n when th	ne doors are op
hen diagn set to illun or example ake sure t th diagnos	nosing ninate e, if the he "Inte sing.	interior lighting functions, when the door is open. customer concern is that	t the dome light does not turn of	n when th	ne doors are op
hen diagn set to illun or example ake sure t th diagnos	nosing ninate e, if the he "Inte sing.	interior lighting functions, when the door is open. customer concern is that	t the dome light does not turn of	n when th	ne doors are op
hen diagn set to illun or example ake sure t th diagnos	nosing ninate e, if the he "Inte sing.	interior lighting functions, when the door is open. customer concern is that erior Light Control" setting	t the dome light does not turn of is set to the default setting of " CONTENT all of the doors. (It will fade out immediately in	n when th ON", bef	ne doors are op ore proceeding
hen diagn set to illun or example ake sure t th diagnos uminated Entry TESTER DISPLAY ighting Time /L when ACC	bosing ninate e, if the he "Inte sing.	interior lighting functions, when the door is open. customer concern is that erior Light Control" setting	t the dome light does not turn of is set to the default setting of " CONTENT all of the doors. (It will fade out immediately in off to ACC or ON.) *1, ignition key cylinder light*2, personal light*3	n when th ON", bef	ne doors are op ore proceeding
hen diagn set to illun or example ake sure t th diagnos uminated Entry TESTER DISPLAY ighting Time /L when ACC OFF	bosing ninate e, if the he "Inte sing. v DEFAULT	interior lighting functions, when the door is open. customer concern is that erior Light Control" setting Changes the lighting time after dosing case of turning the ignition switch from Lights up the engine switch illumination and rear interior light when the ignition Lights up the engine switch illumination	t the dome light does not turn of is set to the default setting of " CONTENT all of the doors. (It will fade out immediately in off to ACC or ON.) *1, ignition key cylinder light*2, personal light*3	SETTING	RELEVANT ECU
/hen diagn set to illun or example lake sure t ith diagnos Iluminated Entry TESTER DISPLAY Lighting Time I/L when ACC OFF I/L ON W/Door Key Unlock Room Light	Default	interior lighting functions, when the door is open. customer concern is that erior Light Control" setting Changes the lighting time after closing case of turning the ignition switch from Lights up the engine switch illumination and rear interior light when the ignition Lights up the engine switch illumination and rear interior light when doors are u transmitter.	t the dome light does not turn of g is set to the default setting of " CONTENT all of the doors. (It will fade out immediately in off to ACC or ON.) *1, ignition key cylinder light*2, personal light*3 switch is turned from ACC or ON to off. *1, ignition key cylinder light*2, personal light*3 inlocked using a mechanical key or door control *1, ignition key cylinder light*2, personal light*3	SETTING SETTING 15 s, 7.5 s or 30 s ON or OFF	RELEVANT ECU
set to illun or example bake sure t ith diagnos Iluminated Entry TESTER DISPLAY	osing ninate e, if the he "Inte sing. DEFAULT 15 s ON	Changes the lighting time after closing case of turning the ignition switch illumination and rear interior light when doors are u transmitter.	t the dome light does not turn of g is set to the default setting of " CONTENT all of the doors. (It will fade out immediately in off to ACC or ON.) *1, ignition key cylinder light*2, personal light*3 switch is turned from ACC or ON to off. *1, ignition key cylinder light*2, personal light*3 inlocked using a mechanical key or door control *1, ignition key cylinder light*2, personal light*3	SETTING 15 s, 7.5 s or 30 s ON or OFF ON or OFF	RELEVANT ECU

*1: w/ Smart Key System

*2: w/o Smart Key System

*3: w/ Sliding Roof

Figure 1 – Illuminated entry customizable parameters list.

LINK REFERENCES

This Tech Tip does not contain any link references

Expires on 05/22/2020

Ver. 3.0 01/01/2019T

© 2019, Toyota Motor Sales, USA