Service Alert

Mazda North American Operations Irvine, CA 92618-2922



Subject:

2019 MAZDA3 SERVICE CAUTIONS FOR NEW AND REVISED FEATURES

Service Alert No.: SA-010/19

Last Issued: 07/12/2019

BULLETIN NOTES

This Service Alert supersedes the previously issued Service Alert(s) listed below: The changes are noted in

Previous Service Alert(s):	Date(s) Issued:
SA-010/19	06/13/19, 06/07/19,05/09/19,05/02/19, 04/25/19,04/11/19, 03/29/19, 03/21/19, 03/15/19,03/08/19, 03/06/19, 03/05/19, 02/25/19

APPLICABLE MODEL(S)/VINS

2019 Mazda3

DESCRIPTION

The new 2019 Mazda3 has new and revised features that are different from previous models, and may be difficult to understand. This Service Alert provides valuable information to support potential dealer and customer concerns.

Index

PDI fuse Apple CarPlay™ / Android Auto™ Install Kit Front Wiper Service Caution i-ACTIVSENSE Switch Traffic Sign Recognition (TSR) MAZDA CONNECT Power Function MAZDA CONNECT Center Display View In-Vehicle Digital Owner's Manual **Navigation System** SIRIUSXM Data Service Power Door Locks **Auxiliary Key** Transmitter Battery Saving Function Keyless Entry Using Auxiliary Key Rear Door Child Safety Locks Operation Link Seat & Climate Control Temperatures

Page **1** of **27**

Seat Warmer Turns OFF
Electric Parking Brake (EPB)
A/C Air Temperature Is Not Cold
Tire Pressure Monitoring System (TPMS)
Condition Based Maintenance
M-MDS (MDARS)
Part Replacement

Item	Service Information

Page 2 of 27

Fuse Block Fuse to be Installed at PDI (JM1 = Japan built) (Engine Compartment) 1. There is only one fuse removed at the factory that should be installed at PDI. It is fuse F27 (25A). The fuse is stored in the lid of the fuse box with the spare fuses. F1 F2 2. The current PDI form is wrong. It states there are two (2) fuses removed (F46 and F50) that should be installed. The form is being updated with this change. F19 F37 F21 F29 F22 F30 F38 F23 F31 F39 F24 F32 F40 F25 F33 F41 F34 F42 F43 F36 F44 Fuse to be Installed at PDI (3MZ = Mexico built) **Fuse Block** 1. There are two fuses removed at the factory that should be (Left Side) installed at PDI. They are fuse F27 (25A) and F15 (15A). 2. NOTE: On some vehicles, fuse F13 (15A) is being removed F12 instead of F15 at the factory. This causes the Commander switch to be inoperative. F11 F23 3. The F27 (25A) fuse is stored in the lid of the fuse box with the F22 F10 spare fuses. F21 F9 4. The F15 (15A) fuse is stored in the lower panel compartment on F20 the left side of the steering wheel. F8 F19 5. Go to SA-017/19 for details. F18 F7 F6 F17 F16 F4 F15 F3 15 A Apple CarPlay™ / Android Auto™ Install Kit 1. The 2019 Mazda3 Sedan (4 door base model) is not equipped with See SA-001/19 - APPLE CARPLAY™ Apple CarPlay[™] / Android Auto[™]. / ANDROID AUTO™ FREQUENTLY Apple CarPlay™ / Android Auto™ Smartphone Screen Mirroring Kit ASKED QUESTIONS (FAQ) accessory is not available for the 2019 Mazda3 Sedan (4 door base model).

Last Issued: 07/12/2019

Service Alert No.: SA-010/19

Page **3** of **27**


Front Wiper Service Caution

- 1. Wiper arm park position is located under the hood.
- 2. When servicing front wipers, front wiper service mode is required or damage to wiper arms may occur (see Service Information).
- 3. If wiper arms are replaced, M-MDS is needed for wiper arm adjustment (see Service Information)
- 4. DO NOT use wiper arms as markers when in dealer inventory.

See Owner's Manual -> Maintenance and Care > Replacing Windshield Wiper Blades


MGSS: WINDSHIELD WIPER ARM AND BLADE ADJUSTMENT

Page 4 of 27

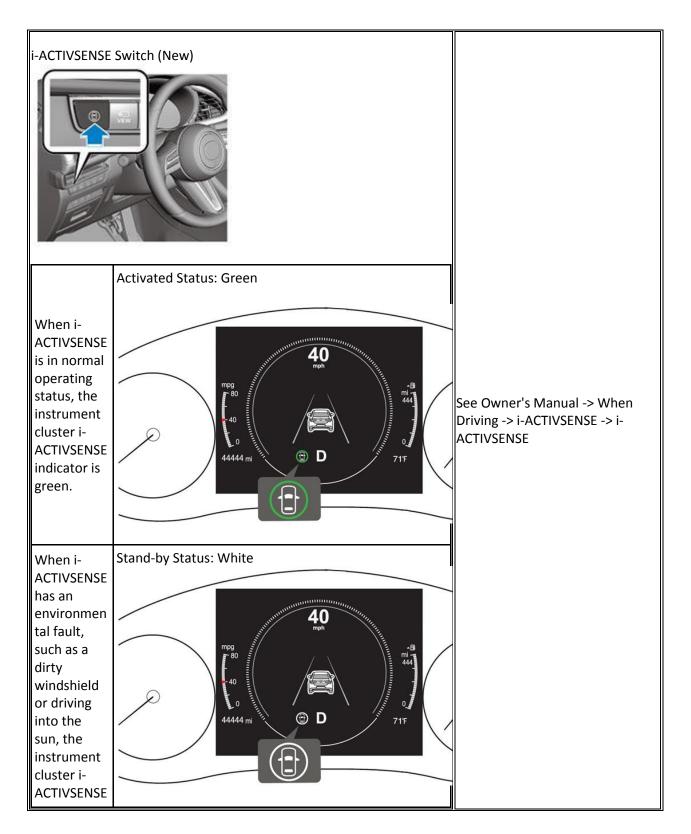

Page **5** of **27**

 Service Alert No.:
 SA-010/19
 Last Issued:
 07/12/2019

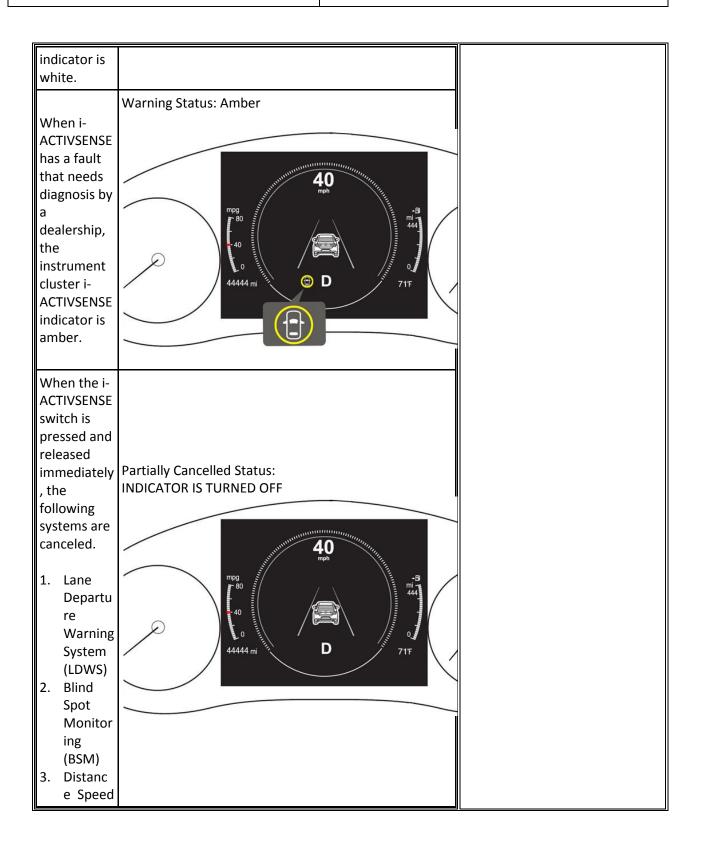


Page 6 of 27

Cross Traffic Alert (RCTA) 5. Lane- keep Assist System (LAS) To turn the system back to "Activated Status", press the i- ACTIVSENSE switch once. NOTE: If MRCC is used, the system will also return to "Activated Status". When the i- ACTIVSENSE switch is pressed and held, all systems are canceled. Fully Cancelled Status: I-ACTIVSENSE INDICATOR IS OFF SBS OFF WARNING LIGHT IS ON			
4. Rear Cross Traffic Alert (RCTA) 5. Lane- keep Assist System (LAS) To turn the system back to "Activated Status", press the i- ACTIVSENSE switch once. NOTE: If MRCC is used, the system will also return to "Activated Status". When the i- ACTIVSENSE switch on sewitch is pressed and held, all systems are tanceled. Fully Cancelled Status: I-ACTIVSENSE INDICATOR IS OFF SBS OFF WARNING LIGHT IS ON 1. Lane Departu re Warning			
Cross Traffic Alert (RCTA) 5. Lane- keep Assist System (LAS) To turn the system back to 'Activated Status", press the i- ACTIVSENSE switch once. NOTE: If MRCC is used, the system will also return to 'Activated Status". When the i- ACTIVSENSE switch is pressed and held, all systems are acanceled. I. Lane Departu re Warning			
Traffic Alert (RCTA) 5. Lane- keep Assist System (LAS) To turn the system back to 'Activated Status", press the i-ACTIVSENSE switch once. NOTE: If MRCC is used, the system will also return to 'Activated Status". When the i-ACTIVSENSE switch is pressed and held, all systems are canceled. Fully Cancelled Status: I-ACTIVSENSE INDICATOR IS OFF SBS OFF WARNING LIGHT IS ON 1. Lane Departure Warning			
Alert (RCTA) 5. Lane- keep Assist System (LAS) To turn the system back to "Activated Status", press the i- ACTIVSENSE switch once. NOTE: If MRCC is used, the system will also return to "Activated Status". When the i- ACTIVSENSE switch is pressed and held, all systems are canceled. I. Lane Departu re Warning			
(RCTA) 5. Lane- keep Assist System (LAS) To turn the system back to "Activated Status", press the i- ACTIVSENSE switch once. NOTE: If MRCC is used, the system will also return to "Activated Status". When the i- ACTIVSENSE switch is pressed and held, all systems are canceled. 1. Lane Departu re Warning			
keep Assist System (LAS) To turn the system back to "Activated Status", press the i- ACTIVSENSE switch once. NOTE: If MRCC is used, the system will also return to "Activated Status". When the i- ACTIVSENSE switch is pressed and held, all systems are tannceled. Fully Cancelled Status: I-ACTIVSENSE INDICATOR IS OFF SBS OFF WARNING LIGHT IS ON 1. Lane Departu re Warning			
keep Assist System (LAS) To turn the system back to "Activated Status", press the i- ACTIVSENSE switch once. NOTE: If MRCC is used, the system will also return to "Activated Status". When the i- ACTIVSENSE switch is pressed and held, all systems are canceled. I. Lane Departu re Warning			
Assist System (LAS) To turn the system back to "Activated Status", press the i- ACTIVSENSE switch once. NOTE: If MRCC is used, the system will also return to "Activated Status". When the i- ACTIVSENSE switch is pressed and held, all systems are canceled. 1. Lane Departu re Warning			
System (LAS) To turn the system back to "Activated Status", press the i- ACTIVSENSE switch once. NOTE: If MRCC is used, the system will also return to "Activated Status". When the i- ACTIVSENSE switch is pressed and held, all systems are canceled. I. Lane Departu re Warning			
(LAS) To turn the system back to "Activated Status", press the i- ACTIVSENSE switch once. NOTE: If MRCC is used, the system will also return to "Activated Status". When the i- ACTIVSENSE switch is pressed and held, all systems are canceled. I. Lane Departu re Warning			
To turn the system back to "Activated Status" , press the i- ACTIVSENSE switch once. NOTE: If MRCC is ussed, the system will also return to "Activated Status". When the i- ACTIVSENSE switch is pressed and held, all systems are canceled. 1. Lane Departu re Warning			
system back to "Activated Status", press the i- ACTIVSENSE switch once. NOTE: If MRCC is used, the system will salso return to "Activated Status". When the i- ACTIVSENSE switch is pressed and held, all systems are canceled. I. Lane Departu re Warning	To turn the		
to "Activated Status", press the i-ACTIVSENSE switch once. NOTE: If MRCC is used, the system will also return to to "Activated Status". When the i-ACTIVSENSE switch is pressed and held, all systems are canceled. 1. Lane Departu re Warning	system back		
Status" , press the i- ACTIVSENSE switch once. NOTE: If MRCC is used, the system will also return to "Activated Status". When the i- ACTIVSENSE switch is pressed and held, all systems are canceled. Fully Cancelled Status: I-ACTIVSENSE INDICATOR IS OFF SBS OFF WARNING LIGHT IS ON 1. Lane Departu re Warning	to		
press the i- ACTIVSENSE switch once. NOTE: If MRCC is used, the system will also return to "Activated Status". When the i- ACTIVSENSE switch is pressed and held, all systems are canceled. I. Lane Departu re Warning	"Activated		
ACTIVSENSE switch once. NOTE: If MRCC is used, the system will also return to "Activated Status". When the i- ACTIVSENSE switch is pressed and held, all systems are canceled. I. Lane Departu re Warning	Status",		
switch once. NOTE: If MRCC is used, the system will also return to "Activated Status". When the i- ACTIVSENSE switch is pressed and held, all systems are canceled. Fully Cancelled Status: I-ACTIVSENSE INDICATOR IS OFF SBS OFF WARNING LIGHT IS ON 1. Lane Departu re Warning			
NOTE: If MRCC is used, the system will also return to "Activated Status". When the i- ACTIVSENSE switch is pressed and held, all systems are canceled. Fully Cancelled Status: I-ACTIVSENSE INDICATOR IS OFF SBS OFF WARNING LIGHT IS ON 1. Lane Departu re Warning			
MRCC is used, the system will also return to "Activated Status". When the i-ACTIVSENSE switch is pressed and held, all systems are canceled. Fully Cancelled Status: I-ACTIVSENSE INDICATOR IS OFF SBS OFF WARNING LIGHT IS ON 1. Lane Departu re Warning			
sused, the system will also return to "Activated Status". When the i-ACTIVSENSE switch is pressed and held, all systems are canceled. Fully Cancelled Status: I-ACTIVSENSE INDICATOR IS OFF SBS OFF WARNING LIGHT IS ON 1. Lane Departu re Warning			
system will also return to "Activated Status". When the i- ACTIVSENSE switch is pressed and held, all systems are canceled. I. Lane Departu re Warning			
also return to "Activated Status". When the i-ACTIVSENSE switch is pressed and held, all systems are canceled. Fully Cancelled Status: I-ACTIVSENSE INDICATOR IS OFF SBS OFF WARNING LIGHT IS ON 1. Lane Departu re Warning			
TACTIVSENSE switch is pressed and held, all systems are canceled. Fully Cancelled Status: I-ACTIVSENSE INDICATOR IS OFF SBS OFF WARNING LIGHT IS ON 1. Lane Departure Warning			
"Activated Status". When the i-ACTIVSENSE switch is pressed and held, all systems are canceled. Fully Cancelled Status: I-ACTIVSENSE INDICATOR IS OFF SBS OFF WARNING LIGHT IS ON 1. Lane Departu re Warning	to		
When the i- ACTIVSENSE switch is pressed and held, all systems are canceled. Fully Cancelled Status: I-ACTIVSENSE INDICATOR IS OFF SBS OFF WARNING LIGHT IS ON 1. Lane Departure Warning			
When the i- ACTIVSENSE switch is pressed and held, all systems are canceled. Fully Cancelled Status: I-ACTIVSENSE INDICATOR IS OFF SBS OFF WARNING LIGHT IS ON 1. Lane Departure Warning			
ACTIVSENSE switch is pressed and held, all systems are canceled. 1. Lane Departure Warning Warning			
ACTIVSENSE switch is pressed and held, all systems are canceled. 1. Lane Departure Warning Warning	When the i-		
switch is pressed and held, all systems are canceled. 1. Lane Departure Warning Departure Warning	ACTIVSENSE		
pressed and held, all systems are canceled. 1. Lane Departure Warning Departure Warning	switch is		
I-ACTIVSENSE INDICATOR IS OFF SBS OFF WARNING LIGHT IS ON 1. Lane Departu re Warning	pressed and		
I-ACTIVSENSE INDICATOR IS OFF SBS OFF WARNING LIGHT IS ON 1. Lane Departu re Warning	held, all	Fully Cancelled Status:	
SBS OFF WARNING LIGHT IS ON 1. Lane Departu re Warning	systems are		
1. Lane Departu re Warning	canceled.		
Departu re Warning			
re Warning			
Warning			
- System	_		
(LDWS)			

Last Issued: 07/12/2019

Service Alert No.: SA-010/19

Page 7 of 27

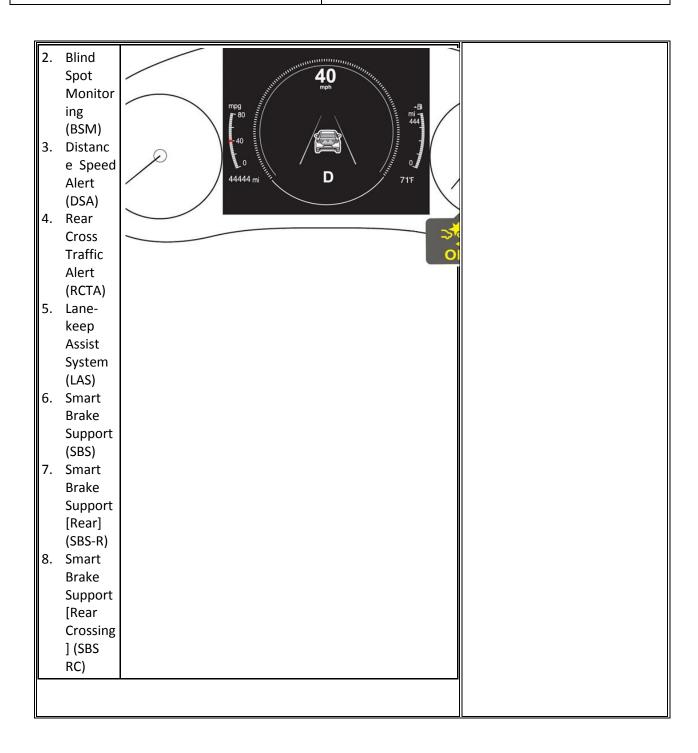

Page 8 of 27

Traffic Sign Recognition (TSR) *

Note:

- 1. TSR function is only available with a dealer installed in-vehicle navigation system accessory.
- 2. TSR function requires Forward Sensing Camera (FSC) recognition or navigation SD card map data when the vehicle is driven.**
- 3. TSR function is not displayed in the Active Driving Display.
- TSR function is disabled when Apple CarPlay[™] or Android Auto[™] is connected.


* Some models

No Function **MAZDA CONNECT** Speed Limit Alert OFF (Default Setting) Driving under the speed limit


See Owner's Manual -> When Driving -> i-ACTIVSENSE -> i-ACTIVSENSE -> Traffic Sign Recognition System (TSR)

MGSS: Traffic Sign Recognition (TSR)

Page **9** of **27**

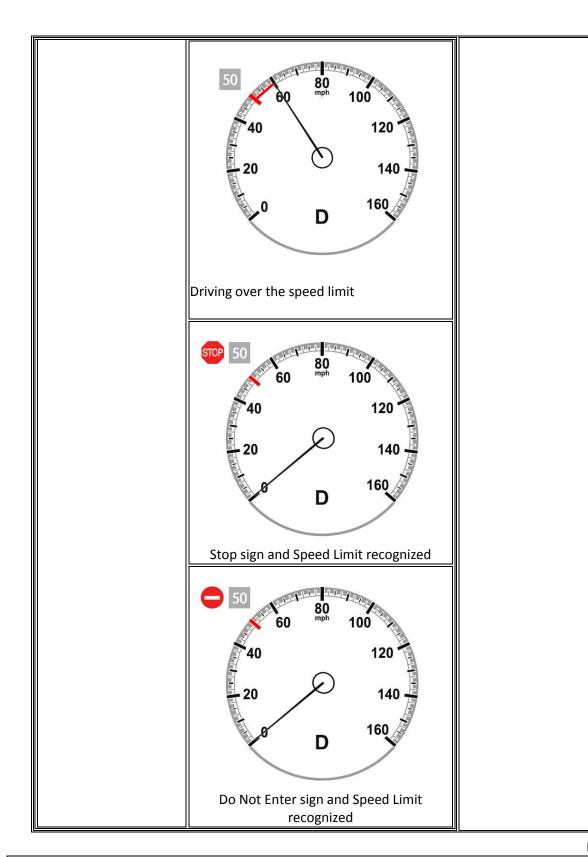

Page 10 of 27

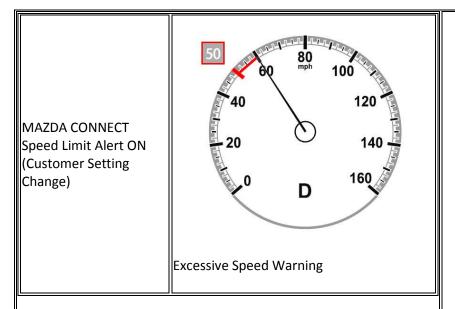

MAZDA CONNECT Speed Limit Alert Customer Settings

- 1. Speed Limit Alert Settings
 - 1. OFF
 - 2. Visual
 - 3. Visual + Audible
- 2. Speed Limit Alert Threshold
 - 1. 0 mph
 - 2. +5 mph
 - 3. +10 mph
- ** SD Card maps may contain information about the speed limits of the roads. The navigation system is able to warn driver if they exceed the current limit. This information may not be available in some areas or may not be fully correct for all roads on the map.

Page **11** of **27**

MAZDA CONNECT New Power Off Function



1. Audio Mute - Short press the volume knob (Press again to cancel)

Power Off - Press and hold the volume knob (Press and hold again to Power ON)



See Owner's Manual -> Interior Features -> Mazda Connect

MGSS: ENTERTAINMENT SYSTEM

In-vehicle Owner's Manual installation

Page **12** of **27**



Page **13** of **27**

In-Vehicle Digital Owner's Manual

The in-vehicle digital OM can be displayed on the center display while the vehicle is stopped. Customer can search descriptions and watch videos of vehicle features and functions by operating the commander switch.



NOTE:

- 1. The digital owner's manual must be installed during PDI. Due to printing deadlines and later updates to the digital manual, the content of the digital manual may differ from the printed manual.
- 2. USB memory flash drive FAT16 or FAT32 format is required for installation.
- 3. The vehicle's infotainment system will only accept file names [contents.tar] and [contents.sig]. File names with additional suffixes will not be accepted.
- The infotainment system may inadvertently be powered OFF if the diagnostic assist function buttons are not pressed correctly. Simply press and hold the volume knob to power back ON.

Page **14** of **27**

Navigation System

2019 Mazda3 is not equipped with factory installed navigation system, however, it is available as a dealer installed accessory. **NOTE:** The 2019 Mazda3 accessory navigation SD is made in Japan instead of USA. If you use a made in the USA navigation SD card (for 6th gen) in the 2019 Mazda3, it will not function.





2019 Mazda3

Except 2019 Mazda3

SIRIUSXM Data Service No Free Trial (Preferred Package and above)

- 1. Only available as a paid subscription.
- 2. 2019 Mazda3 is not equipped with factory installed navigation system, however, it is available as a dealer installed accessory.
- 3. SiriusXM Traffic Plus feature requires in-vehicle navigation SD card.

See Owner's Manual -> Interior Features -> Mazda Connect -> Appendix

SA-007/19 - SIRIUSXM DATA SERVICES

Page **15** of **27**

Power Door Locks

Doors Lock With Keys In The Vehicle When Liftgate Lock Switch Is Pressed.

(Japan built) vehicles with VINs lower than JM1BP*****1142789 (produced before May 28, 2019)




DO NOT leave keys in the vehicle. The doors will lock with keys in the vehicle when liftgate lock switch is pressed and liftgate is closed, but the liftgate will not lock in the above condition.

NOTE: This is currently under investigation.


Doors cannot be unlocked using the outside door handle touch sensor The door handle touch sensor system may not operate normally under the following conditions:

- 1. Front passenger (without key) grabs and holds the outside door handle before the driver (with key) touches the drivers outside door handle unlock touch sensor.
- 2. You touch the sensing area of the door lock touch sensor and the sensing area of the door release touch sensor at the same time.

See Owner's Manual ->
Before Driving -> Doors and Locks

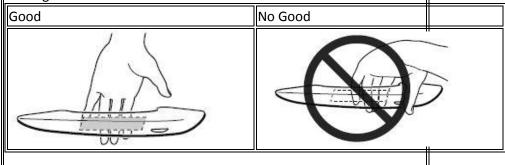


Page **16** of **27**

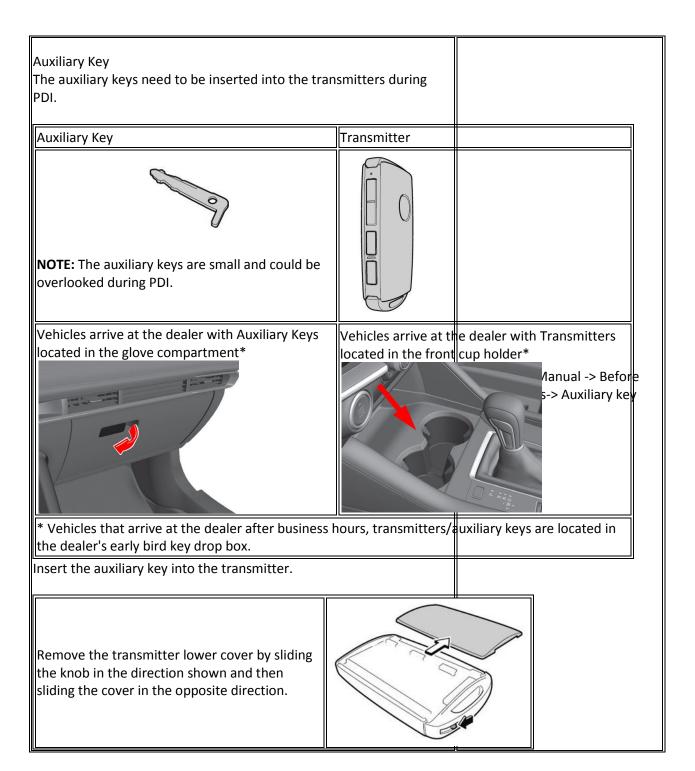

Page **17** of **27**

Insert the auxiliary key.

Install the transmitter lower cover by inserting the tabs of the lower cover into the slots of the transmitter.

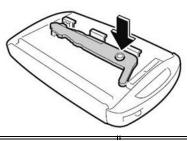





- 1. If one auxiliary key is lost, some key machines can trace cut a new replacement key.
- If both auxiliary keys are lost, key cutting machines do not recognize vehicle key code and will not cut new replacement keys. Replace the front door key cylinder set.

NOTE: If the front door key cylinder set is replaced, eMDCS system key code information will need to be changed. Contact Helpdesk by phone (949 727-6434) or email (HelpDesk@mazdausa.com) and provide:

- 1. VIN
- 2. Replacement part key code.

Transmitter Note:



Page **18** of **27**

1.	If one transmitter is lost, inform the customer to take cautions not	
	to lose the 2nd transmitter.	
2.	If both transmitters are lost, the vehicle will be disabled. Use	
	MDARS to program new transmitters.	

Last Issued: 07/12/2019

Service Alert No.: SA-010/19

Page **19** of **27**

	Last Issued: 07/12/20	019
Transmitter Battery Saving Function (Ke The new 2019 Mazda3 has a "power sav keyless entry system where some key for feature could accidentally be enabled an vehicle may be: 1. Engine does not start. 2. Engine does not start unless you hol button. 3. Doors do not unlock using the door remote. 4. Doors do not lock using the door ha remote. 5. Transmitter indicator light does not	ving" function built into the ob functions are disabled. This and some concerns with the lid the fob to the start/stop handle, but unlock with the ndle, but lock with the	Turning on the power saving function After you have turned on the power saving function according to the following procedure, the hazard warning lights and sound operate* one time. 1. Press the lock button on the transmitter 4 times within 3 seconds to turn on the operation indicator light. 2. Press the lock button continuously for 1.5 seconds or longer while the operation indicator light turns on (for 5 seconds). 3. Press any of the buttons on th transmitter to make sure that the operation indicator light does no turn on/flash. Turning off the power saving function After you have turned off the power saving function according to the following procedure, the hazard warning lights and sound

- 2. Press the lock button on the transmitter 4 times within 3 seconds to turn on the operation indicator light.
- 3. Press the lock button continuously for 1.5 seconds or longer while the operation indicator light turns on (for 5


Page 20 of 27

Service Alert No.: SA-010/19	Last Issued: 07/12/2019
	,
	seconds).
	*: with the advanced keyless function
	Also see Owner's Manual -> Before Driving -> Keys -> Power saving function

Page **21** of **27**

Keyless Entry Using Auxiliary Key

If the vehicle battery is discharged and/or the key battery is dead, vehicle entry is possible using the auxilary key.

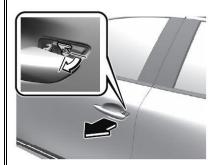

See Owner's Manual -> Before Driving -> Keys -> Auxiliary Key

Then refer to Owner's Manual -> Before Driving -> Doors and Locks -> Unlocking with Auxiliary Key

Rear Door Child Safety Locks Operation

The auxiliary key is required to enable (lock) and disable (unlock) the rear door child safety locks.



1. Auxiliary Key

2. Lock

3. Unlock

See Owner's Manual -> Before Driving -> Doors and Locks -> Rear Door Child Safety Locks

Page 22 of 27

Service Alert No.: SA-010/19 Last Issued: 07/12/2019 Seat Warmer and Heated Steering Wheel Auto Mode The driver and front passenger's seater warmers* and the heated steering wheel* can be set to be automatically controlled (turned on and off) by the climate control system, depending on the set temperature. Auto Mode Go to MAZDA CONNECT home screen and select "Settings" 2. Select "Vehicle Settings". 3. Enable "Link Seat Climate Control Temperatures". 4. Press the climate control AUTO switch. See Owner's Manual -> Essential Safety Equipment -> Link Seat Climate Control Temperatures Climate Control Auto Seat Warmer/Heated Steering Switch Setting Wheel -> Seat Warmer / Heated Steering Wheel Vehicle Settings Rain-Sensing Wipers Turn Signals * if equipped Seat Warmer Turns OFF in Manual Mode JM1 (Japan built) vehicles produced before December 17, 2018 3MZ (Mexico built) vehicles produced before March 19, 2019

- 1. The front seat warmers turn OFF after approximately 10 minutes in manual mode.
- 2. DTC B1030:13 (SEAT WARMER UNIT (LH) CIRCUIT MALFUNCTION (HEATER SIDE)) is stored.
- Front seat warmer functions after seat cool down and ignition OFF
 ON cycle.

Contact Hotline for latest repair information.

Page 23 of 27

Seat Warmer Will Not Turn ON After Previous Usage	
JM1 (Japan built) vehicles produced after	
December 17, 2018	
3MZ (Mexico built) vehicles produced after March 19, 2019	
1. DTC B1030:13 (SEAT WARMER UNIT (LH) CIRCUIT MALFUNCTION (HEATER SIDE)) is stored.	
 Front seat warmer functions after seat cool down and ignition OFF ON cycle. 	
Contact Hotline for latest repair information.	

Last Issued: 07/12/2019


Service Alert No.: SA-010/19

Page **24** of **27**

Electric Parking Brake (EPB)

Parking Brake Auto Operation

When the ignition is switched OFF, the parking brake will be applied automatically. The EPB indicator light in the instrument cluster and the EPB switch indicator light turn ON.

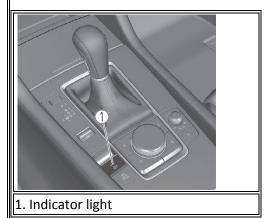

Canceling the Parking Brake Auto Operation

Parking brake auto operation can be canceled using the procedure in the Owner's Manual.

NOTE: When the ignition is cycled back ON, the parking brake auto operation is restored.

See Owner's Manual -> When Driving -> Brake -> EPB Auto operation

Parking Brake Automatic Release


If the accelerator pedal is depressed with the parking brake applied and all of the following conditions are met, the parking brake is automatically release. When the parking brake is released, the EPB indicator light in the instrument cluster and the EPB switch indicator light turn off.

A/T	M/T	
Engine is running		
Driver's door is closed		
Driver's seat belt is fastened		
Selector lever is in the D, M, or R	Shift lever is in a position other neutral	r than
position	Clutch pedal is depressed halfway	way

Page 25 of 27

A/C Air Temperature Is Not Cold

When diagnosing A/C performance complaints, use a thermometer as shown below and only compare A/C performance to another vehicle that is the same model/year/HVAC type*.

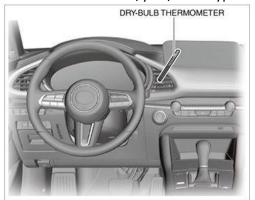

MGSS: REFRIGERANT SYSTEM PERFORMANCE TEST [(US)]

- *HVAC Types:
- 1. FULL-AUTO AIR CONDITIONER
- 2. MANUAL AIR CONDITIONER

Tire Pressure Monitoring System (TPMS) Change
The TPMS system uses a new rubber type direct TPMS. **NOTE:** The new rubber type is not reusable. If the TPMS sensor is removed from the wheel, it must be replaced.



MONITORING SYSTEM (TPMS)

MGSS: TIRE PRESSURE

New Rubber Type Old Metal Type

Page 26 of 27

Condition Based Maintenance (Except Canada) The vehicle calculates the maintenance (oil change) timing. MGSS: MAINTENANCE MONITOR OPERATION PROCEDURE 1. This function cannot be turned OFF. 2. Distance until the oil change is available in MAZDA CONNECT. 3. Reset is required after every oil change. New M-MDS (MDARS) A new M-MDS diagnostic tester (MDARS) for 7th generation vehicles (starting with the 2019 Mazda3) is used. 1. Performs more maintenance service functions 2. Performs more complicated vehicle electrical system diagnostic MGSS: BASIC KNOWLEDGE 3. Reprograms more ECU's Parts Replacement When replacing vehicle parts such as ECU's, motors, seats....etc, always refer to MGSS. Some new components may not operate if MGSS new part replacement procedure is not performed.

Page **27** of **27**