



SERVICE BULLETIN

Classification: BT19-013	Reference: NTB19-066	Date: August 28, 2019
-----------------------------	-------------------------	--------------------------

2020 GT-R NISMO; PROTECTIVE COVER REMOVAL PROCEDURE

APPLIED VEHICLES: 2020 GT-R NISMO (R35)

SERVICE INFORMATION

GT-R Nismo vehicles are transported with a special cover to protect the vehicle finish during transport.

- Please refer to the following protective cover removal Service Procedure, starting on page 2, when a protective cover needs to be removed for any reason.

Nissan Bulletins are intended for use by qualified technicians, not 'do-it-yourselfers'. Qualified technicians are properly trained individuals who have the equipment, tools, safety instruction, and know-how to do a job properly and safely. **NOTE:** If you believe that a described condition may apply to a particular vehicle, DO NOT assume that it does. See your Nissan dealer to determine if this applies to your vehicle.

SERVICE PROCEDURE

The vehicle used in the following Service Procedure is not a NISMO, and is only present to demonstrate the removal of the NISMO protective cover.

The following steps are shown from the driver side.

- Passenger side is similar.
- Remove only one side at a time unless otherwise instructed.

1. Remove the tape that attaches the protective cover to the windshield.
 - a. Remove the tape from the locations shown in Figure 1.

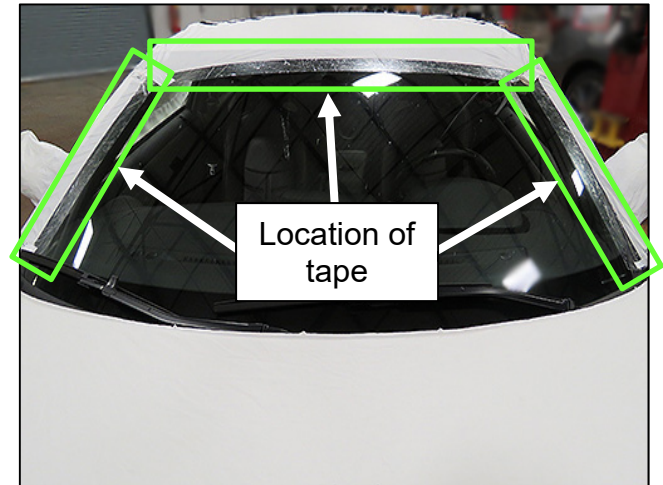


Figure 1

- b. Figure 2, Figure 3 and Figure 4 show tape removal.



Figure 2



Figure 3

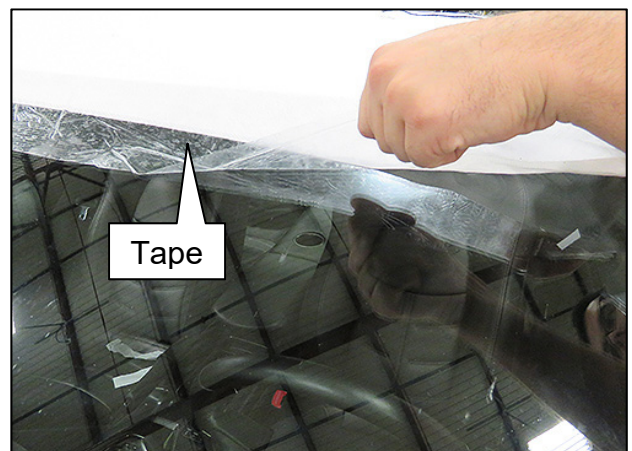


Figure 4

2. Open the driver door protective cover zipper.
 - a. Pull the zipper down to the bottom of the door,
 - b. And then toward the front of the vehicle,
 - c. And then up.

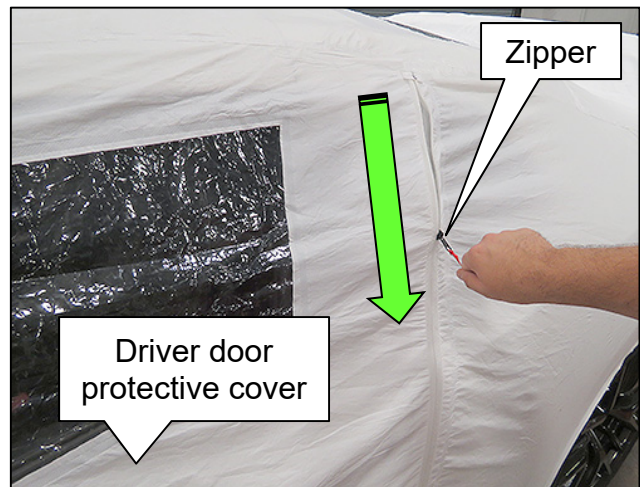


Figure 5

3. Roll up the door cover as shown in Figure 6.
 - c. Hold the door protective cover away from the door while rolling it.

NOTICE Do not let the door protective cover contact the door while rolling it up or the paint may be scratched.



Figure 6

4. Secure the door protective cover to the roof with the integral Velcro strap.

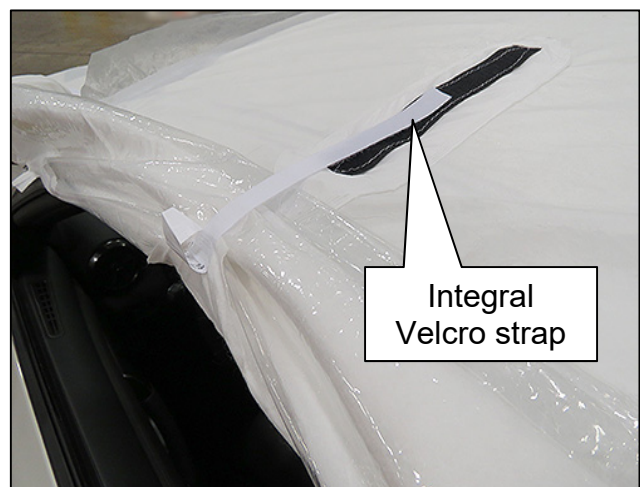


Figure 7

5. Open the driver door.
6. Remove the inner door protective cover.
 - a. Detach the two (2) protective cover tabs from the bottom edge of the kicking plate inner (see Figure 8 and Figure 9).
 - b. Remove the tape from behind the B-pillar.

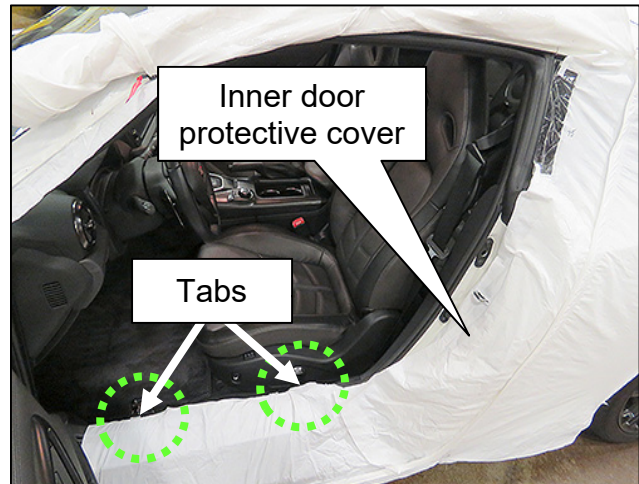


Figure 8

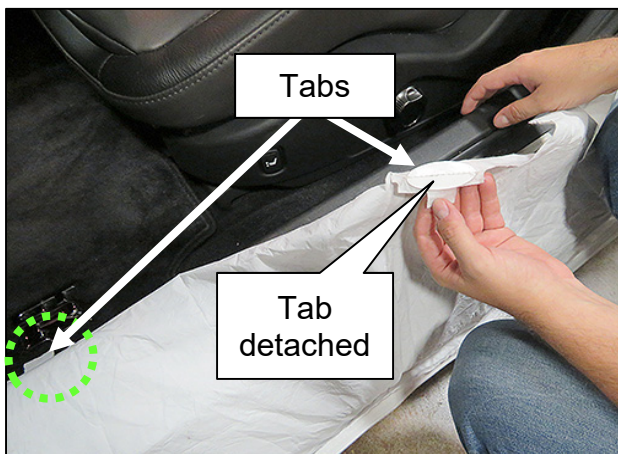


Figure 9

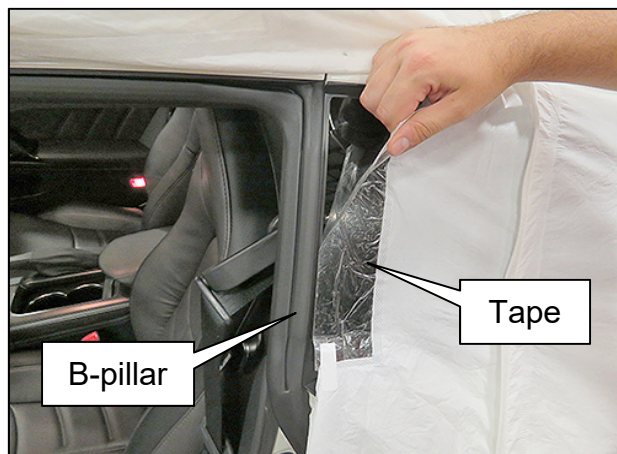


Figure 10

- Figure 11 shows the inner door protector removed.



Figure 11

7. Open the hood.

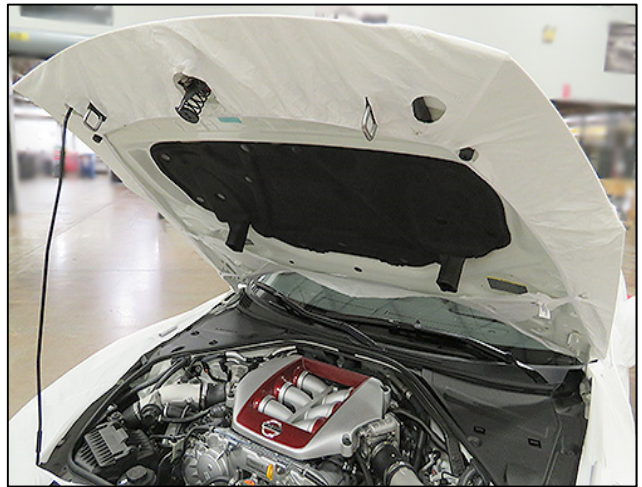


Figure 12

8. Close the driver door.
 - Confirm that the inner door protective cover is not caught between the door and the door jamb.



Figure 13

9. Unroll the door protector.

NOTICE Do not let the door protective cover contact the door while unrolling it or the paint may be scratched.

10. Zip the door protective cover back into place.

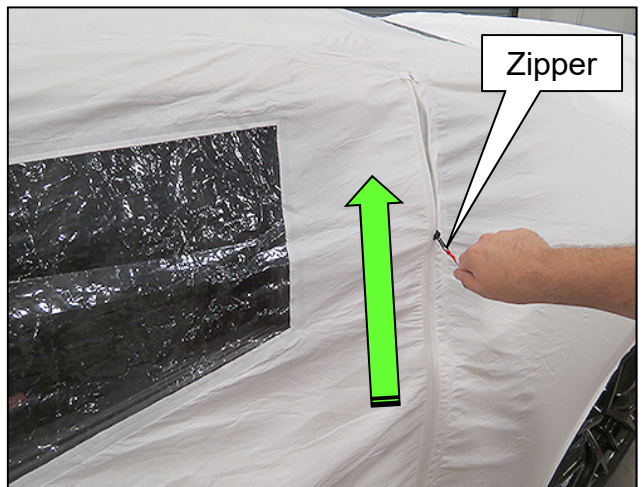


Figure 14

11. Perform steps 2-10 on the passenger side of the vehicle, and then proceed to step 12.

12. Detach the bottom corners of the wheel arch protectors for all four (4) wheels.



Figure 15



Figure 16

13. Fold all four (4) wheel arch protectors out.

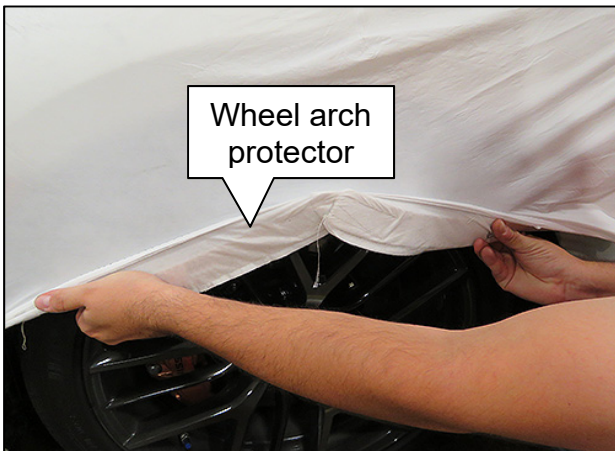


Figure 17



Figure 18

14. Remove the two (2) hooks of the protective cover from under the rear bumper fascia.

- Figure 19 is shown with the hooks already removed.

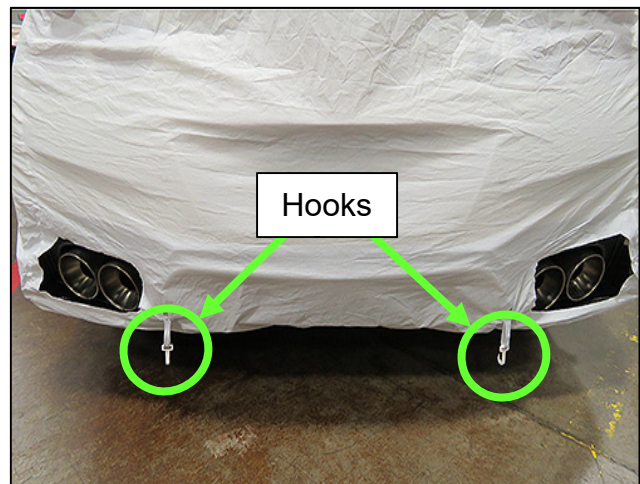


Figure 19

15. Remove the protective cover from the underside of the rear bumper fascia.

NOTICE Do not let the hooks contact the rear bumper fascia or the paint may be scratched.



Figure 20

16. Detach the four (4) hooks of the protective cover from underneath the door sill on each side of the vehicle.
 - Figure 21 is shown with the hooks already removed.

NOTICE Do not let the hooks contact the sides the vehicle or the paint may be scratched.

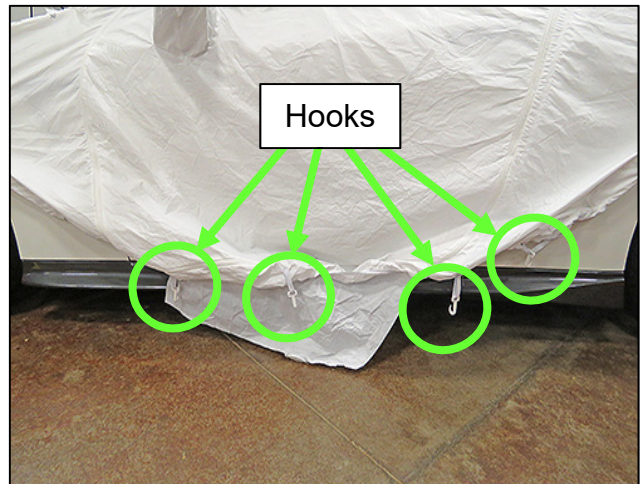


Figure 21

17. Roll the rear bumper fascia/wing part of the protective cover as shown in Figure 22.

NOTICE Only allow the inside of the cover to touch the paint or the paint may be scratched.



Figure 22

18. Roll the protective cover toward the center of the roof and retain it with the integral Velcro strap shown in Figure 24.

- Repeat on the other side.

NOTICE Only allow the inside of the cover to touch the paint or the paint may be scratched.



Figure 23

- Figure 24 shows the integral Velcro strap retaining protective cover.

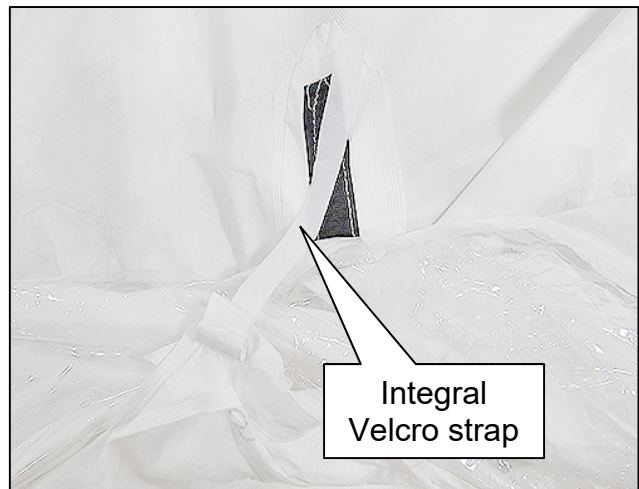


Figure 24

19. After both the driver and passenger sides have been rolled and secured, roll the entire protective cover from the rear forward, and rest it on the roof.



Figure 25

20. Remove the protective cover from the front bumper fascia as shown in Figure 26.

NOTICE Only allow the inside of the cover to touch the paint or the paint may be scratched.

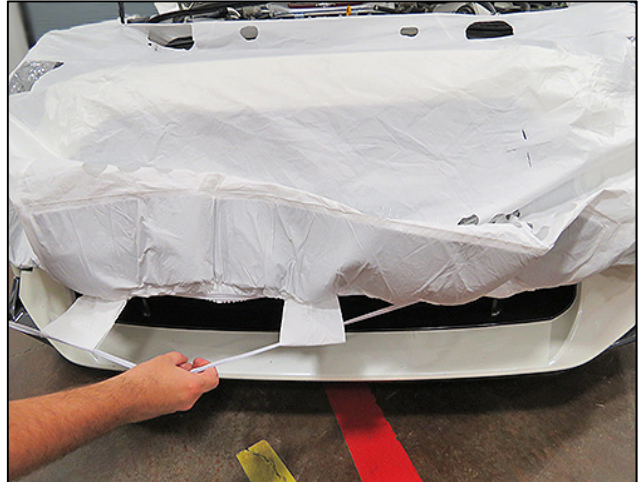


Figure 26

21. Lift the front of the protective cover up and over the open hood and then place it on the windshield.

22. Remove the protective cover from the vehicle.



Figure 27

23. Detach the two (2) driver side Velcro straps (shown in Figure 28) and then two (2) passenger side Velcro straps that retain the bottom of the hood protective cover.

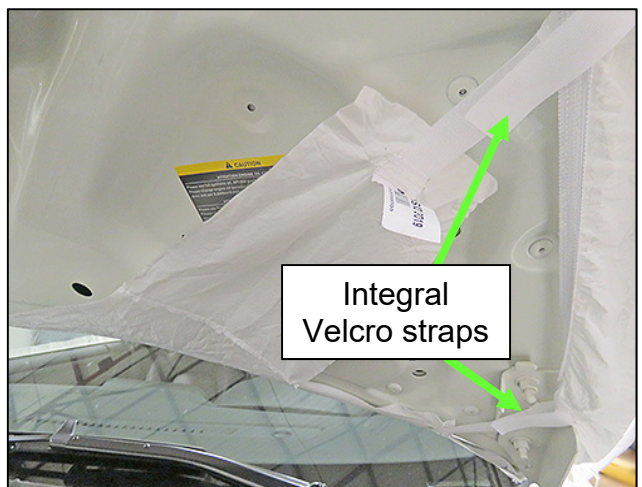


Figure 28

24. When the hood protective cover is free, roll it toward the front of the vehicle.

- Roll the Velcro straps into the cover.

NOTICE Only allow the inside of the cover to touch the paint or the paint may be scratched.



Figure 29

25. Remove the hood protector.

CLAIMS INFORMATION

Additional time has already been added to the PDI flat rate time for the removal of the protective cover.

AMENDMENT HISTORY

PUBLISHED DATE	REFERENCE	DESCRIPTION
August 28, 2019	NTB19-066	Original bulletin published