Service Alert

Mazda North American Operations Irvine, CA 92618-2922



Subject:

2019-2020 MAZDA3 SERVICE CAUTIONS FOR NEW AND REVISED FEATURES

Service Alert No.: SA-010/19

Last Issued: 09/16/2019

BULLETIN NOTES

This Service Alert supersedes the previously issued Service Alert(s) listed below: The changes are noted in Red.

Previous Service Alert(s):	Date(s) Issued:
SA-010/19	08/14/19, 08/06/19, 07/19/19, 07/12/19, 06/13/19, 06/07/19,05/09/19,05/02/19, 04/25/19,04/11/19, 03/29/19, 03/21/19, 03/15/19,03/08/19, 03/06/19, 03/05/19, 02/25/19

APPLICABLE MODEL(S)/VINS

2019-2020 Mazda3

DESCRIPTION

The 2019-2020 Mazda3 has new and revised features that are different from previous models, and may be difficult to understand. This Service Alert provides valuable information to support potential dealer and customer concerns.

Index

PDI fuse

Apple CarPlay™ / Android Auto™ Install Kit
Blind Spot Monitoring System (BSM)
Front Wiper Service Caution
i-ACTIVSENSE Switch
Traffic Sign Recognition (TSR)
MAZDA CONNECT Power Function
MAZDA CONNECT Center Display View
In-Vehicle Digital Owner's Manual
Navigation System
SIRIUSXM Data Service
Power Door Locks
Auxiliary Key

Page **1** of **29**

Transmitter Battery Saving Function
Keyless Entry Using Auxiliary Key
Rear Door Child Safety Locks Operation
Theft-Deterrent System
Link Seat & Climate Control Temperatures
Seat Warmer Turns OFF
Electric Parking Brake (EPB)
A/C Air Temperature Is Not Cold
Tire Pressure Monitoring System (TPMS)
Condition Based Maintenance
M-MDS (MDARS)
Part Replacement

Item	Service Information

Page 2 of 29

Fuse Block Fuse to be Installed at PDI (JM1 = Japan built) (Engine Compartment) 1. There is only one fuse removed at the factory that should be installed at PDI. It is fuse F27 (25A). The fuse is stored in the lid of the fuse box with the spare fuses. F1 F2 2. The current PDI form is wrong. It states there are two (2) fuses removed (F46 and F50) that should be installed. The form is being updated with this change. F19 F37 F21 F29 F22 F30 F38 F23 F31 F39 F24 F32 F40 F25 F33 F41 F34 F42 F43 F36 F44 Fuse to be Installed at PDI (3MZ = Mexico built) Fuse Block 1. There are two fuses removed at the factory that should be (Left Side) installed at PDI. They are fuse F27 (25A) and F15 (15A). 2. NOTE: On some vehicles, fuse F13 (15A) is being removed F12 instead of F15 at the factory. This causes the Commander switch to be inoperative. F11 F23 3. The F27 (25A) fuse is stored in the lid of the fuse box with the F22 F10 spare fuses. F21 F9 4. The F15 (15A) fuse is stored in the lower panel compartment on F20 the left side of the steering wheel. F8 F19 5. Go to SA-017/19 for details. F18 F7 F6 F17 F16 F4 F15 F3 15 A Apple CarPlay™ / Android Auto™ Install Kit 1. The Mazda3 sedan (4 door base model) is not equipped with See SA-001/19 - APPLE CARPLAY™ Apple CarPlay[™] / Android Auto[™]. / ANDROID AUTO™ FREQUENTLY 2. Apple CarPlay™ / Android Auto™ Smartphone Screen Mirroring Kit ASKED QUESTIONS (FAQ) accessory is not available for the Mazda3 sedan (4 door base model).

Last Issued: 09/16/2019


Service Alert No.: SA-010/19

Page **3** of **29**

Blind Spot Monitoring (BSM) System

- 1. BSM system indicates vehicle on the opposite side.
- 2. i-ACTIVSENSE indicator ring will not turn green
- 3. Rear Cross Traffic Alert (RCTA) does not work
- 4. Rear side radar sensor aiming may fail
- 5. TPMS DTC(s) stored

This may be caused by BSM rear side radar sensor(s) installed facing the wrong direction.

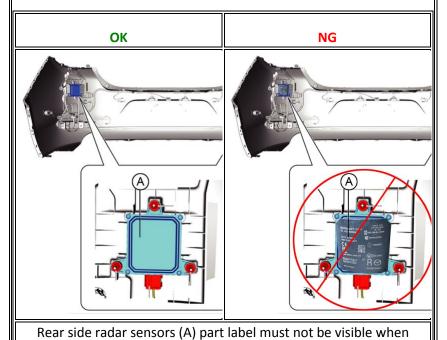

installed.


Front Wiper Service Caution

- 1. Wiper arm park position is located under the hood.
- 2. When servicing front wipers, front wiper service mode is required or damage to wiper arms may occur (see Service Information).
- If wiper arms are replaced, M-MDS is needed for wiper arm adjustment (see Service Information)
- 4. DO NOT use wiper arms as markers when in dealer inventory.


See Owner's Manual -Maintenance and Care Replacing Windshield Wiper Blades

MGSS: WINDSHIELD WIPER ARM AND BLADE ADJUSTMENT

Page **4** of **29**

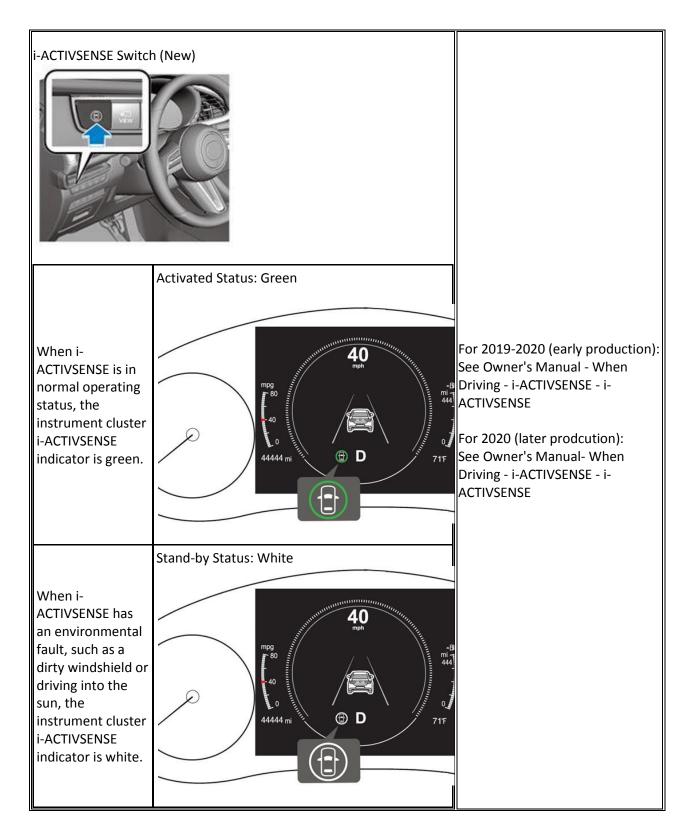

Page 5 of 29

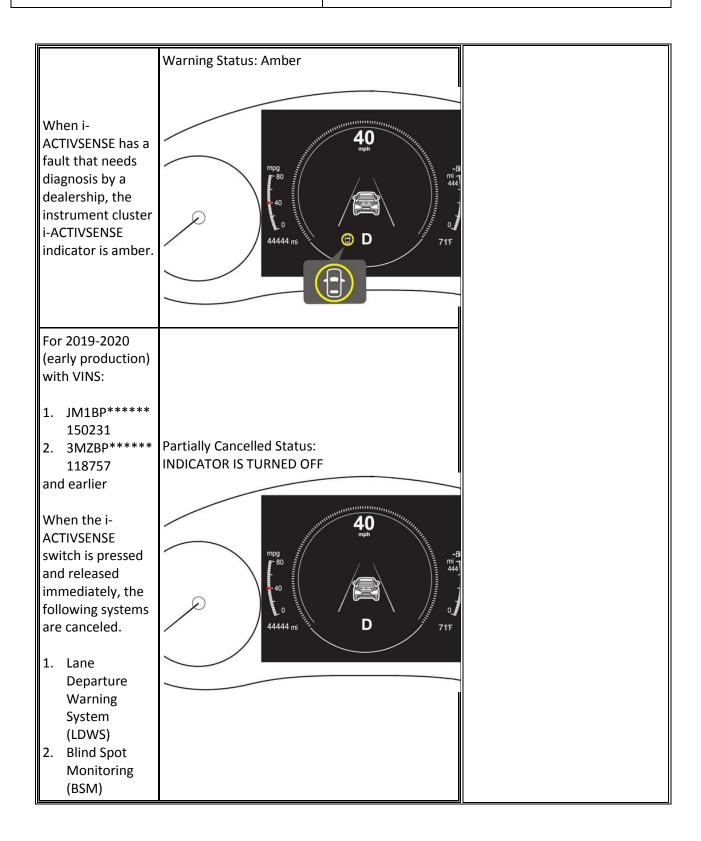

Page 6 of 29

3. Distance Speed Alert (DSA) 4. Rear Cross Traffic Alert (RCTA) 5. Lane-keep **Assist System** (LAS) To turn the system back to "Activated Status", press the i-ACTIVSENSE switch once. NOTE: If MRCC is used, the system will also return to "Activated Status". For 2019-2020 (early production) with VINS: **Fully Cancelled Status:** 1. JM1BP** I-ACTIVSENSE INDICATOR IS OFF 150231 SBS OFF WARNING LIGHT IS ON 2. 3MZBP**** 118757 and earlier When the i-**ACTIVSENSE** switch is pressed and held, all systems are canceled. D 44444 mi 71°F 1. Lane Departure Warning System (LDWS) 2. Blind Spot Monitoring (BSM)

Last Issued: 09/16/2019

Service Alert No.: SA-010/19

Page 7 of 29

3. Distance Speed Alert (DSA) 4. Rear Cross Traffic Alert (RCTA) 5. Lane-keep **Assist System** (LAS) 6. Smart Brake Support (SBS) 7. Smart Brake Support [Rear] (SBS-R) 8. Smart Brake Support [Rear Crossing] (SBS RC) For 2020 (later production) with VINS: Cancelled Status: 1. JM1BP***** I-ACTIVSENSE OFF INDICATOR IS ILLUMINATED 150232 2. 3MZBP***** 118758 and later When the i-**ACTIVSENSE** switch is pressed, the following systems are canceled and the D 71°F i-ACTIVSENSE OFF indicator turns illuminates. 1. Lane Departure Warning System

Last Issued: 09/16/2019

Service Alert No.: SA-010/19

(LDWS)

Page 8 of 29

2.	Blind Spot		
	Monitoring		
	(BSM)		
3.	Distance		
	Speed Alert		
	(DSA)		
4.	Rear Cross		
	Traffic Alert		
	(RCTA)		
5.	Lane-keep		
	Assist System		
	(LAS)		
	turn the system		
	k to "Activated		
	tus", press the		
	CTIVSENSE		
	tch once.		
	NOTE: If MRCC is		
	used, the system		
	l also return to		
"Ac	tivated Status".		

Last Issued: 09/16/2019


Service Alert No.: SA-010/19

Page **9** of **29**

Traffic Sign Recognition (TSR) *

NOTE:


- 1. TSR function is only available with a dealer installed in-vehicle navigation system accessory.
- 2. TSR function requires Forward Sensing Camera (FSC) recognition or navigation SD card map data when the vehicle is driven.**
- 3. TSR function is not displayed in the Active Driving Display.
- TSR function is disabled when Apple CarPlay[™] or Android Auto[™] is connected.
- * Some models

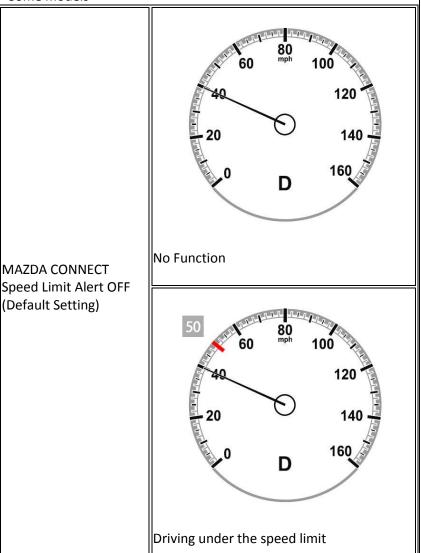


See Owner's Manual - When Driving - i-ACTIVSENSE - i-ACTIVSENSE - Traffic Sign Recognition System (TSR)

MGSS: Traffic Sign Recognition (TSR)

Page **10** of **29**

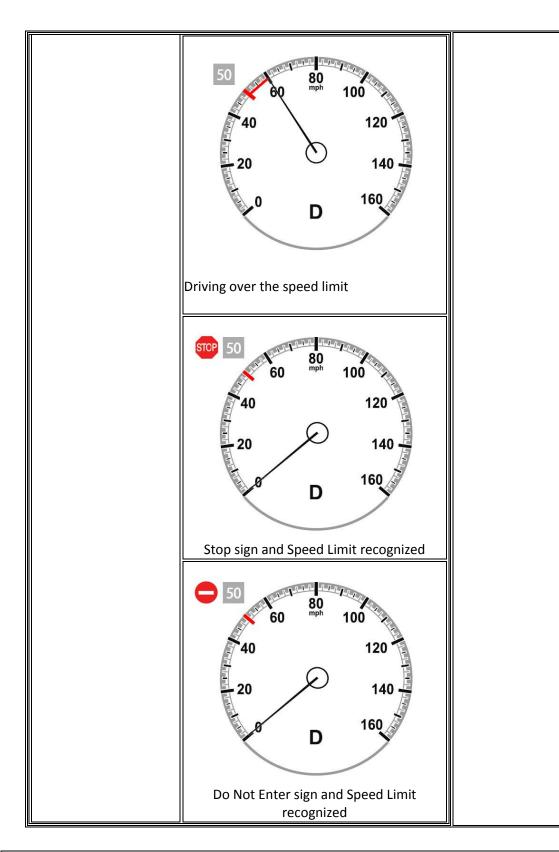

Page 11 of 29

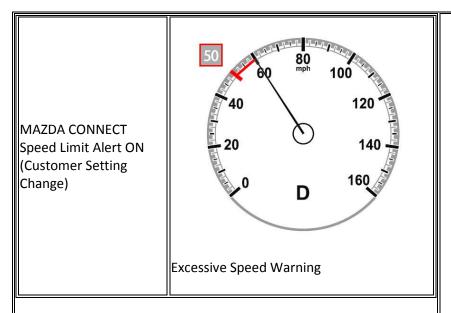

MAZDA CONNECT Speed Limit Alert Customer Settings

- 1. Speed Limit Alert Settings
 - 1. OFF
 - 2. Visual
 - 3. Visual + Audible
- 2. Speed Limit Alert Threshold
 - 1. 0 mph
 - 2. +5 mph
 - 3. +10 mph
- ** SD Card maps may contain information about the speed limits of the roads. The navigation system is able to warn driver if they exceed the current limit. This information may not be available in some areas or may not be fully correct for all roads on the map.

Page **12** of **29**

MAZDA CONNECT New Power Off Function



1. Audio Mute - Short press the volume knob (Press again to cancel)

Power Off - Press and hold the volume knob (Press and hold again to Power ON)



See Owner's Manual -Interior Features - Mazda Connect

MGSS: ENTERTAINMENT SYSTEM

In-vehicle Owner's Manual installation

Page **13** of **29**



Page **14** of **29**

In-Vehicle Digital Owner's Manual

The in-vehicle digital OM can be displayed on the center display while the vehicle is stopped. Customer can search descriptions and watch videos of vehicle features and functions by operating the commander switch.



NOTE:

- 1. The digital owner's manual must be installed during PDI. Due to printing deadlines and later updates to the digital manual, the content of the digital manual may differ from the printed manual.
- 2. USB memory flash drive FAT16 or FAT32 format is required for installation.
- 3. The vehicle's infotainment system will only accept file names [contents.tar] and [contents.sig]. File names with additional suffixes will not be accepted.
- 4. The infotainment system may inadvertently be powered OFF if the diagnostic assist function buttons are not pressed correctly. Simply press and hold the volume knob to power back ON.

Page **15** of **29**

Navigation System

The 2019-2020 Mazda3 is not equipped with factory installed navigation system, however, it is available as a dealer installed accessory.

NOTE: The 2019-2020 Mazda3 accessory navigation SD is made in Japan instead of USA. If using a made in the USA navigation SD card (for 2014-2018 Mazda3) in the 2019-2020 Mazda3, it will not function.





2019 Mazda3

Except 2019 Mazda3

SIRIUSXM Data Service No Free Trial (Preferred Package and above)

- 1. Only available as a paid subscription.
- 2. The 2019-2020 Mazda3 is not equipped with a factory installed navigation system, however, it is available as a dealer installed accessory.
- 3. SiriusXM Traffic Plus feature requires in-vehicle navigation SD card.

See Owner's Manual - Interior Features - Mazda Connect -Appendix

SA-007/19 - SIRIUSXM DATA SERVICES

Page **16** of **29**

Power Door Locks

Doors Lock With Keys In The Vehicle When Liftgate Lock Switch Is Pressed.

(Japan built) vehicles with VINs lower than JM1BP*****1142789 (produced before May 28, 2019)




DO NOT leave keys in the vehicle. The doors will lock with the keys in the vehicle when the liftgate lock switch is pressed and the liftgate is closed, but the liftgate will not lock in the above condition.

NOTE: This is currently under investigation.


Doors cannot be unlocked using the outside door handle touch sensor The door handle touch sensor system may not operate normally under the following conditions:

- 1. The front passenger (without key) grabs and holds the outside door handle before the driver (with key) touches the drivers outside door handle unlock touch sensor.
- 2. The driver touches the sensing area of the door lock touch sensor and the sensing area of the door release touch sensor at the same time.

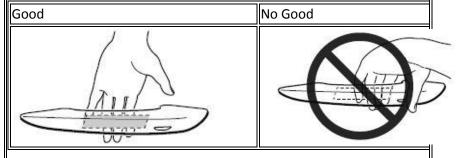

See Owner's Manual -Before Driving - Doors and Locks


Page **17** of **29**

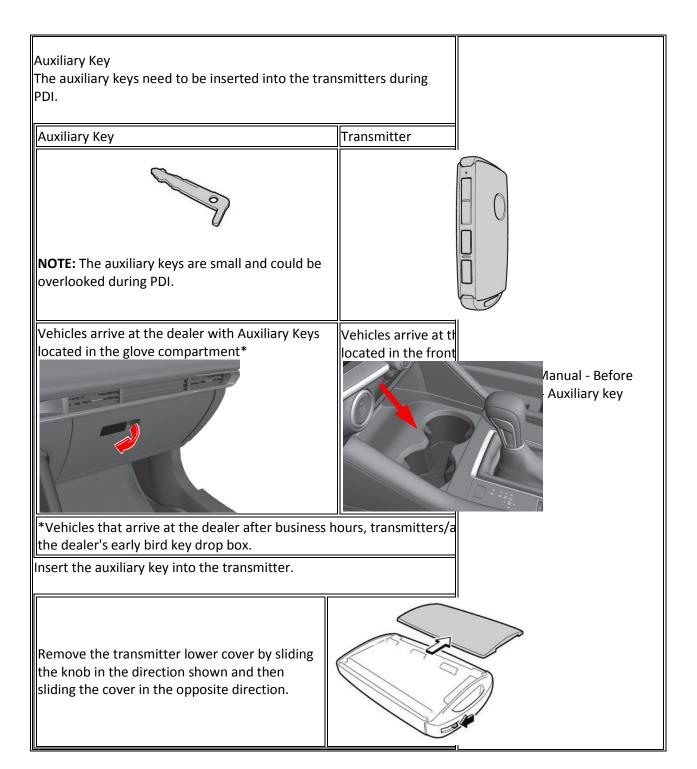


Page **18** of **29**

Insert the auxiliary key.

Install the transmitter lower cover by inserting the tabs of the lower cover into the slots of the transmitter.

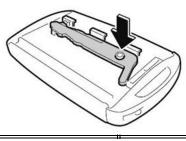

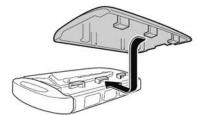



- 1. If one auxiliary key is lost, some key machines can trace cut a new replacement key.
- If both auxiliary keys are lost, key cutting machines do not recognize vehicle key code and will not cut new replacement keys. Replace the front door key cylinder set.

NOTE: If the front door key cylinder set is replaced, eMDCS system key code information will need to be changed. Contact Helpdesk by phone (949 727-6434) or email (HelpDesk@mazdausa.com) and provide:

- 1. VIN
- 2. Replacement part key code.

Transmitter Note:



Page **19** of **29**

1.	If one transmitter is lost, inform the customer to take cautions not	
	to lose the 2nd transmitter.	
2.	If both transmitters are lost, the vehicle will be disabled. Use	
	MDARS to program new transmitters.	
_	. •	
3.	Replacement battery type is CR2032 (3V, 225mAh), which is	
	different then previous 6th generation transmitter battery type	
	CR2025 (3V, 160mAh). If the wrong battery is installed, the	

Last Issued: 09/16/2019

Service Alert No.: SA-010/19

transmitter might not work properly (malfunction).

Page **20** of **29**

ervice Alert No.: SA-010/19		ast Issued: 09/16/2019
		Turning on the power saving function After you have turned on the power saving function according to the following procedure, the hazard warning lights and sound operate* one time. 1. Press the lock button on the transmitter 4 times within 3 seconds to turn on the operation indicator light. 2. Press the lock button continuously for 1.5 seconds or
The	ansmitter Battery Saving Function (Key Fob) e Mazda3 has a "power saving" function built int stem where <u>some</u> key fob functions are disabled. cidentally be enabled and some concerns with th Engine does not start.	. This feature could 3. Press any of the buttons on th
2.	Engine does not start unless you hold the fob to button.	
3. 4. 5.	Doors do not unlock using the door handle, but remote. Doors do not lock using the door handle, but lo remote. Transmitter indicator light does not turn on/fla	function After you have turned off the power saving function according
		1. Press any of the buttons on the transmitter to make sure that the operation indicator light does not turn on/flash.

2. Press the lock button on the transmitter 4 times within 3 seconds to turn on the operation indicator light.

3. Press the lock button continuously for 1.5 seconds or longer while the operation indicator light turns on (for 5

Page **21** of **29**

Service Alert No.: SA-010/19	Last Issued: 09/16/2019
	•
	seconds).
	*: with the advanced keyless function
	Also see Owner's Manual - Before Driving - Keys - Power saving function

Page **22** of **29**

Keyless Entry Using Auxiliary Key

If the vehicle battery is discharged and/or the key battery is dead, vehicle entry is possible using the auxiliary key.



See Owner's Manual -Before Driving - Keys - Auxiliary Key

Then refer to Owner's Manual -Before Driving - Doors and Locks -Unlocking with Auxiliary Key

Rear Door Child Safety Locks Operation

The auxiliary key is required to enable (lock) and disable (unlock) the rear door child safety locks.



- 1. Auxiliary Key
 - 2. Lock
 - 3. Unlock

See Owner's Manual -Before Driving - Doors and Locks -Rear Door Child Safety Locks

Page 23 of 29



Page **24** of **29**

Service Alert No.: SA-010/19 Last Issued: 09/16/2019 Seat Warmer and Heated Steering Wheel Auto Mode The driver and front passenger's seater warmers* and the heated steering wheel* can be set to be automatically controlled (turned on and off) by the climate control system, depending on the set temperature. Auto Mode Go to MAZDA CONNECT home screen and select "Settings" 2. Select "Vehicle Settings". 3. Enable "Link Seat Climate Control Temperatures". 4. Press the climate control AUTO switch. See Owner's Manual -Essential Safety Equipment - Seat Link Seat Climate Control Temperatures Climate Control Auto Warmer/Heated Steering Wheel Switch Setting Seat Warmer / Heated Steering Wheel Vehicle Settings Rain-Sensing Wipers Turn Signals Link Seat & Climate Control Temperatures * if equipped Seat Warmer Turns OFF in Manual Mode JM1 (Japan built) vehicles produced before December 17, 2018 3MZ (Mexico built) vehicles produced before March 19, 2019 1. The front seat warmers turn OFF after approximately 10 minutes

- The front seat warmers turn OFF after approximately 10 minutes in manual mode.
- 2. DTC B1030:13 (SEAT WARMER UNIT (LH) CIRCUIT MALFUNCTION (HEATER SIDE)) is stored.
- Front seat warmer functions after seat cool down and ignition OFF
 ON cycle.

Contact Hotline for latest repair information.

Page **25** of **29**

Seat Warmer Will Not Turn ON After Previous Usage	
JM1 (Japan built) vehicles produced after December 17, 2018	
3MZ (Mexico built) vehicles produced after March 19, 2019	
DTC B1030:13 (SEAT WARMER UNIT (LH) CIRCUIT MALFUNCTION (HEATER SIDE)) is stored.	
 Front seat warmer functions after seat cool down and ignition OFF ON cycle. 	
Contact Hotline for latest repair information.	

Last Issued: 09/16/2019


Service Alert No.: SA-010/19

Page **26** of **29**

Electric Parking Brake (EPB)

Parking Brake Auto Operation

When the ignition is switched OFF, the parking brake will be applied automatically. The EPB indicator light in the instrument cluster and the EPB switch indicator light turn ON.

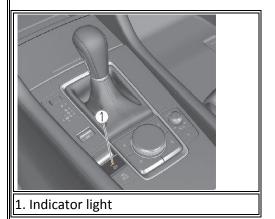

Canceling the Parking Brake Auto Operation

Parking brake auto operation can be canceled using the procedure in the Owner's Manual.

NOTE: When the ignition is cycled back ON, the parking brake auto operation is restored.

Parking Brake Automatic Release

If the accelerator pedal is depressed with the parking brake applied and all of the following conditions are met, the parking brake is automatically release. When the parking brake is released, the EPB indicator light in the instrument cluster and the EPB switch indicator light turn off.


M/T		
Driver's door is closed		
Driver's seat belt is fastened		
Shift lever is in a position othe neutral		
Clutch pedal is depressed half		

See Owner's Manual - When Driving - Brake - EPB Auto operation

Page **27** of **29**

A/C Air Temperature Is Not Cold

When diagnosing A/C performance complaints, use a thermometer as shown below and only compare A/C performance to another vehicle that is the same model/year/HVAC type*.

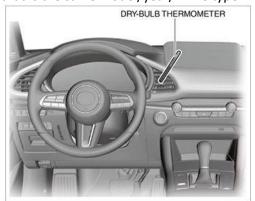

MGSS: REFRIGERANT SYSTEM PERFORMANCE TEST [(US)]

- *HVAC Types:
- 1. FULL-AUTO AIR CONDITIONER
- 2. MANUAL AIR CONDITIONER

Tire Pressure Monitoring System (TPMS) Change
The TPMS system uses a new rubber type direct TPMS. **NOTE:** The new rubber type is not reusable. If the TPMS sensor is removed from the wheel, it must be replaced.



New Rubber Type Old Metal Type

MGSS: TIRE PRESSURE MONITORING SYSTEM (TPMS)

Page **28** of **29**

Condition Based Maintenance (Except Canada) The vehicle calculates the maintenance (oil change) timing. MGSS: MAINTENANCE MONITOR OPERATION PROCEDURE 1. This function cannot be turned OFF. 2. Distance until the oil change is available in MAZDA CONNECT. 3. Reset is required after every oil change. New M-MDS (MDARS) A new M-MDS diagnostic tester (MDARS) for 7th generation vehicles (starting with the 2019 Mazda3) is used. 1. Performs more maintenance service functions 2. Performs more complicated vehicle electrical system diagnostic MGSS: BASIC KNOWLEDGE 3. Reprograms more ECU's Parts Replacement When replacing vehicle parts such as ECU's, motors, seats....etc, always refer to MGSS. Some new components may not operate if MGSS new part replacement procedure is not performed.

Page **29** of **29**