

## **Audi Technical Update**

Summer 2019

# Agenda

## **01. Body**

1.1 Examples of customer misuse


## **02. Chassis**

2.1 Wheel change mode/jacking mode

## **03. Electrical**

3.1 Alexa in the Audi e-tron quattro

3.2 myAudi map update for MIB2+

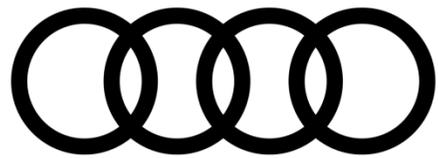

**Chassis**

## 2.1 Wheel change mode/jacking mode

### Topic:

- › Before lifting the vehicle, jacking mode must always be activated in the MMI. This includes all Audi models with adaptive suspension.

### Reason:

- › If the vehicle is not fitted with the original level sensors, it is possible that the suspension electronics will not register that the vehicle is being raised, and the system will therefore not be automatically deactivated.

### Possible consequences:


- › The system might regulate the height of the vehicle (e.g. build up pressure) when this is not wanted.

### Procedure:

- › MMI → Car → Systems → Service & checks → Air suspension: wheel change.



Example of a defective level sensor.

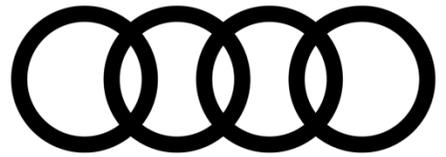

**Thank you!**