



NUMBER: 22-003-19 REV. A

GROUP: 22 - Tires and Wheels

DATE: October 29, 2019

This bulletin is supplied as technical information only and is not an authorization for repair. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise, without written permission of FCA US LLC.

This bulletin supersedes Service Bulletin 22-003-19, dated September 05, 2019, which should be removed from your files. All revisions are highlighted with **asterisks**** and include removal of M1 vehicles and LOPs.**

This Service Bulletin is also being released as Rapid Response Transmittal (RRT) 19-065, dated September 05, 2019. All applicable Sold and Un-Sold RRT VINs have been loaded. To verify this RRT service action is applicable to the vehicle, use VIP or perform a VIN search in DealerCONNECT/Service Library. All repairs are reimbursable within the provisions of warranty.

SUBJECT:

Spare Wheel Missing the Anti-theft Screw

OVERVIEW:

This bulletin involves inspecting and installing the spare wheel anti-theft screw, if required.

MODELS:

2019 - 2020 (B1) Jeep Renegade (Brazil)

NOTE: This bulletin applies to vehicles within the following markets/countries: LATAM.

NOTE: This bulletin applies to vehicles built on or after September 25, 2018 (MDH 0925XX) and on or before June 12, 2019 (MDH 0612XX).

SYMPTOM/CONDITION:

The customer/dealer may notice:

- The vehicle is missing the spare wheel anti-theft screws for the spare wheel.

DIAGNOSIS:

If a customer's VIN is listed in VIP or your RRT VIN list, perform the repair. **This RRT only applies to vehicles on the RRT VIN list.**

PARTS REQUIRED:

Qty.	Part No.	Description
1 (AR)	52155810 (LATAM) 68496196AA (MOPAR)	Wheel Lock (Alloy Spare Wheel)

REPAIR PROCEDURE:

1. Open the trunk and remove the spare wheel cover (Fig. 1) .



Fig. 1
Spare Wheel Cover

2. Does the vehicle have the anti-theft screw (Fig. 3) ?
 - YES>>> This bulletin has been completed. Use inspect LOP ****(22-25-05-96)**** to close the active RRT.
 - NO>>> Install the anti-theft screw for the spare wheel. Proceed to [Step 3](#).
3. Remove the existing spare wheel retaining screw (Fig. 2) .



Fig. 2
Existing Spare Wheel Retainer Screw

4. Install the new anti-theft spare wheel retaining screw by aligning the screw arrows with the arrow on the wrench, and thread the screw until the end (Fig. 3) .



Fig. 3
Spare Wheel Anti-theft Retainer Screw

5. Remove the anti-theft wrench and give it to the customer after repair has been performed.

NOTE: Inform the customer that:

- No excess force is required to attach the spare wheel.
- Store the wrench in the bag ring that comes with the kit and secure it in a place known to the vehicle users.
- Periodically check that the key is in the chosen location.
- The kit has a warning sticker available that the vehicle has an anti-theft screw to be placed on the rear glass (Fig. 4) .



Fig. 4
Warning Sticker

POLICY:

Reimbursable within the provisions of the warranty.

TIME ALLOWANCE:

Labor Operation No:	Description	Skill Category	Amount
**22-25-05-96	Anti-theft Spare Wheel Retainer - Inspect only (0 - Introduction)	4 - Chassis	0.2 Hrs.
22-25-05-97	Anti-theft Spare Wheel Retainer - Inspect and Replace (0 - Introduction)	4 - Chassis	0.2 Hrs.**

FAILURE CODE:

ZZ	Service Action
----	----------------