

C/S FURNACE WILL IGNITE AND RUN TIL SET TEMP IS REACHED. THEN WHEN TEMP DROPS LOWER THAN SET TEMP, FURNACE WILL ATTEMPT TO START, FAN COMES ON BUT NO IGNITION OCCURS. FURNACE WONT RE-LIGHT AFTER TEMP DROP. SAIL SWITCH BAD, HAD TO DISASSEMBLE BENCH TO REMOVE FURNACE, CHANGED SAIL SWITCH & BOARD, FIRST BOARD WAS BAD, HAD TO REMOVE & REINSTALL FURNACE TO CHANGE BOARD, REINSTALLED FURNACE, CHECKED. 4.0 parts used: 1 sail switch 1.50 hours approved to help. Warranty part and labor is through Atwood on this at 800-825-4328.