



Countries: CANADA, UNITED STATES Document ID: IK1600255
 Availability: ISIS, FleetISIS, IsSIR Revision: 2
 Major System: CAB / SLEEPER / HOOD Created: 12/3/2019
 Current Language: English Last Modified: 12/9/2019
 Other Languages: NONE Author: Erik Wass
 Viewed: 153

[Less Info](#)

Hide Details

Coding Information

Copy Link 	Copy Relative Link 	Bookmark View My Bookmarks	Add to Favorites 	Print 	Provide Feedback 	Helpful 3	Not Helpful 2
---------------	------------------------	---------------------------------------------------	----------------------	-----------	----------------------	------------------	----------------------

Title: Incorrect Turn Signal Cancellation Feature

Applies To: MV

CHANGE LOG

Please refer to the change log text box below for recent changes to this article:

12/03/2019 - Initial Article Release

DESCRIPTION

The purpose of this document is to inform and guide the user through replacing auto cancelling (turn signals) clock springs with NON-cancelling (turn signal) clock springs, for units originally ordered with the non-cancelling feature. NOTE: There are no safety concerns or component malfunctions present. This applies to units built with the opposite feature that the end user originally ordered.

SYMPTOMS

DTC/Light	Description
N/A	N/A

SPECIAL TOOLS / SOFTWARE

Tool Description	Tool Number	Comments	Instructions
N/A	N/A	N/A	N/A

SERVICE PARTS INFORMATION

Kit Description	Part Number	Qty. Required	Notes

Spring, Contact, Clock Spring, 10 Wire Without Canceler	2592604C91	1	
---------------------------------------------------------	------------	---	--

DIAGNOSTIC STEPS

N/A

REPAIR STEPS

WARNING! To prevent property damage, personal injury, and / or death, park vehicle on a hard, flat surface, turn the engine off, set the parking brake, and install wheel chocks to prevent the vehicle from moving in either direction.

WARNING! To prevent property damage, personal injury, and / or death, if the vehicle must be raised, do not work under the vehicle supported only by jacks. Jacks can slip or fall over.

WARNING! To prevent personal injury and / or death, always wear safe eye protection when performing vehicle maintenance.

WARNING! To prevent property damage, personal injury, and / or death, keep flames or sparks away from vehicle and do not smoke while servicing the vehicle's batteries. Batteries expel explosive gases.

WARNING! To prevent property damage, personal injury, and / or death, remove the ground cable from the negative terminal of the battery box before disconnecting any electrical components. Always connect the ground cable last.

1. Bring vehicle into shop and park on a flat surface
2. Shift transmission into park or neutral, set parking brake and install wheel chocks
3. Refer to the [MV Truck Service Manual](#) for proper removal and installation procedures for steering wheel/clock spring assemblies.
4. Remove existing clock spring assembly with self-cancelling turn signal feature
5. Install new clock spring part number with non-cancelling turn signal feature
6. Remove wheel chocks
7. Return vehicle back to service

WARRANTY INFORMATION

Repair	SRT
Clock Spring (steering wheel controls), Replace	A08-8002A

Warranty Claim Coding:

Group: 8000 - Electrical

Noun: 800 - Clock Spring

OTHER RESOURCES

[Master Service Information Site](#)

 Hide Details

Feedback Information

Viewed: 152
Helpful: 3
Not Helpful: 2

No Feedback Found

Copyright © 2020 Navistar, Inc.