

Description

When replacing the ORC crash sensor on a McLaren GT, it is important that the correct procedure is followed as outlined in this article.

Document Information

This document is uncontrolled when printed. Before use, check the Knowledge Base within the McLaren Retailer Portal to verify that this is the current version.

Vehicles affected: P22: GT

Location: Interior – Interior Restraints

Concern: Crash Sensor Replacement

Condition: N/A

Diagnostic Trouble Codes

N/A

Measure

It is important to follow the correct procedure when you remove and install a new crash sensor. Failure to do so can cause a fault code that will not clear.

The procedure is as follows:

- Turn the ignition OFF
- Replace the defective ORC sensor
- Turn the ignition ON
- Read the Diagnostic Trouble Codes (DTC)
- Clear all the Occupant Restraint Control DTC's
- Turn the ignition OFF

If the DTCs are not cleared on the first ignition cycle, the fault will not be able to be cleared until the sensor is swapped with a new one again. As a result, the sensor will not be usable with that specific ORC ECU.

MTI Updates Information

N/A

This document is uncontrolled when printed. Before use, check the Knowledge Base within the McLaren Retailer Portal to verify that this is the current version.