

# Condition

### ATTENTION:

THIS IS A TECH TIP, NOT A TECHNICAL BULLETIN. TECH TIPS ARE NOT ASSOCIATED WITH WARRANTY CLAIMING.

### **Applicable Vehicles**

Model(s)	Year	Eng. Code	Trans. Code	VIN Range From	VIN Range To
Passat	2012-2020	All	All	All	All

Revision Table			
Instance Number	Published Date	Version Number	Reason For Update
2052992/2	01/24/20	57-18-04TT	To include additional model year applicability.
2052992/1	11/16/18	TT 57-18-04	Original publication.

# **Technical Background**

Quick reference information and description of remote start cancellation codes:

## Service

#### Some questions to be asked first are:

- 1. Is the Low fuel light on or fuel gauge below 1/4 tank full?
- 2. Are all buttons being pressed fast enough in the correct order? Press lock button once, and then remote start button twice within 3 seconds
- 3. Is a door, hood, or trunk open?

Usually the answer to one of these questions is yes.

#### Also, things to note:

- The remote start (RS) has 10 minute duration.
- You get 2 cycles (of 10 minutes), then you have to start the car normally to re-set.
- If all is well, the parking lights will flash with every fob stroke (so one time on the lock, and then twice on the RS button will result in three times parking lights flashing...).
- The range is approx. 50 feet, close enough to see the visual confirmations such as parking lights.



# 57-18-04TT - Remote Start Diagnosis and Cancellation Codes Reference for Release date: 01/24/2020 the -J519- Vehicle Electrical System Control Module

# (To make the chart clear, the third column means the function, such as trunk switch, wipers or sunroof, is disabled (not that the RS is disabled).

	RS starts	RS stops	function (not RS) disabled
low fuel light illuminated	no	8	.0
door open	no		
door function during RS	15	yes	3 <sup>8</sup>
trunk open	no		29 72
trunk switch function during RS			yes
window open	yes		
window function during RS			yes
sunroof open	yes		Сü
sunroof function during RS			yes
hood open	no	-	
fuel flap open	yes	1	Ch.
radio function during RS			no (radio functions)
press accelerator during RS	.0	yes	
press brake during RS	17	yes	3 <sup>9</sup>
wiper function during RS			yes
turn signal function during RS			yes
lights function during RS			yes
lock function during RS		yes	
unlock function during RS		yes	- (C



 57-18-04TT - Remote Start Diagnosis and Cancellation Codes Reference for
 Release date:
 01/24/2020

 the -J519- Vehicle Electrical System Control Module
 01/24/2020
 01/24/2020

J519 MVB 150 - 154 Field 4	J519 - Vehicle Electrical System Control Module Remote Start Cancellation Codes MVB information MVB 150 is the current reason for deactivation MVBs 151, 152, 153 & 154 are historic
Reason code	Description of reason code
1	Remote Starter Timer Expired
2	No Can Bit to ECM Remote Start
3	(Remote) Unlock Button Pressed
4	(Remote) Panic Button Pressed
5	(Remote) Trunk Unlock Button Pressed
6	(Remote) Remote start button pressed
7	Central locking (door lock motor not in locked position)
8	Trunk Opened
9	Hood Opened
10	DWA (unknown)
11	Terminal "S" Active
12	No engine RPMs
13	Park position not recognized
14	Vehicle Speed Greater than Zero
15	MIL Lamp Engine DTC
16	Hazards Active / Emergency Flashers
17	Number of Remote Starts Exceeded
18	Panic Alarm Active
19	Crash Signal Detected
20	CAN signal active
21	Automatic Transmission
22	Terminal "15" Active
23	G85 Steering Angle
24	Engine Speed Greater than "0" (running)
25	DTC 3861
26	DTC 576
27	Driver Door Open
28	Passenger Door Open
29	Driver Rear Door Open
30	Passenger Rear Door Open
31	Actuator test (remote start)
32	Brake Lamp Switch Active
33	Driver Front Door Unlock Switch Activated
34	Driver Front Door Lock Switch Activated
35	Passenger Front Door Unlock Switch Activated



#### 57-18-04TT - Remote Start Diagnosis and Cancellation Codes Reference for the -J519- Vehicle Electrical System Control Module 01/24/2020

36       Passenger Front Door Lock Switch Activated         37       Driver Rear Door Lock Switch Activated         38       Driver Rear Door Lock Switch Activated         40       Passenger Rear Door Lock Switch Activated         41       Unlock Switch in Center Console Activated         42       Lock Switch in Center Console Activated         43       Start / Stop Switch Activated         44       Lock Switch in Center Console Activated         43       Start / Stop Switch Activated         128       Terminal "S" Hardwire Output Short to Ground (DTC)         130       Terminal "15" Hardwire Relay Output Short to Ground (DTC)         131       Terminal "50" HW Short to power         133       Terminal "50" HW Short to Ground         134       Terminal "30" Right (DTC)         135       Terminal "30" Right (DTC)         138       ROM (DTC)         139       Watchdog Triggering Fault         140       Deactivate interrupt called for         141       Processor Overload         142       Control Unit Defective (00003)         143       Failure / Faulty Signal From Passenger Door (DTC, Lock / Unlock / Open)         144       Failure / Faulty Signal From Passenger Rear Door (DTC, Lock / Unlock / Open)         144       F		
38       Driver Rear Door Lock Switch Activated         39       Passenger Rear Door Unlock Switch Activated         40       Passenger Rear Door Lock Switch Activated         41       Unlock Switch in Center Console Activated         42       Lock Switch in Center Console Activated         43       Start / Stop Switch Activated         128       Terminal "S" Hardwire Output Short to Ground (DTC)         130       Terminal "15" Hardwire Relay Output Short to Ground (DTC)         131       Terminal "15" Hardwire Relay Output Implausible Signal to KL15 Condition Input         132       Terminal "50" HW Short to ground         133       Terminal "50" HW Short to Ground         134       Terminal "30" left (DTC)         135       Terminal "30" left (DTC)         136       Internal Controller Failure (RAM)         137       RAM (DTC)         138       ROM (DTC)         139       Watchdog Triggering Fault         140       Deactivate interrupt called for         141       Processor Overload         142       Control Unit Defective (00003)         143       Failure / Faulty Signal From Driver Door (DTC, Lock / Unlock / Open)         144       Failure / Faulty Signal From Passenger Door (DTC, Lock / Unlock / Open)         145	36	Passenger Front Door Lock Switch Activated
39       Passenger Rear Door Unlock Switch Activated         40       Passenger Rear Door Lock Switch Activated         41       Unlock Switch in Center Console Activated         42       Lock Switch in Center Console Activated         43       Starl / Stop Switch Activated         43       Starl / Stop Switch Activated         43       Starl / Stop Switch Activated         43       Terminal "15" Hardwire Output Short to Ground (DTC)         129       Terminal "15" Hardwire Qutput Short to Ground (DTC)         130       Terminal "15" Hardwire Relay Output Implausible Signal to KL15 Condition Input         131       Terminal "30" Hort to Ground         132       Terminal "30" Hort to Ground         133       Terminal "30" Right (DTC)         134       Terminal "30" Right (DTC)         135       Terminal "30" Right (DTC)         136       Internal Controller Failure (RAM)         137       RAM (DTC)         138       ROM (DTC)         139       Watchdog Triggering Fault         140       Deactivate interrupt called for         141       Processor Overload         142       Control Unit Defective (00003)         143       Failure / Faulty Signal From Dassenger Door (DTC, Lock / Unlock / Open)	37	Driver Rear Door Unlock Switch Activated
40       Passenger Rear Door Lock Switch Activated         41       Unlock Switch in Center Console Activated         42       Lock Switch in Center Console Activated         43       Starl / Stop Switch Activated         128       Terminal "S" Hardwire input Fault (DTC)         129       Terminal "15" Hardwire Output Short to Ground (DTC)         130       Terminal "15" Hardwire Relay Output Short to Ground (DTC)         131       Terminal "5" Hordwire Relay Output Implausible Signal to KL15 Condition Input         132       Terminal "30" Hight OTC)         133       Terminal "30" Right (DTC)         134       Terminal "30" Right (DTC)         135       Terminal "30" Right (DTC)         136       Internal Controller Failure (RAM)         137       RAM (DTC)         138       ROM (DTC)         139       Watchdog Triggering Fault         140       Deactivate interrupt called for         141       Processor Overload         142       Control Unit Defective (00003)         143       Failure / Faulty Signal From ECM (MSG for Remote Start)         144       Failure / Faulty Signal From Passenger Door (DTC, Lock / Unlock / Open)         144       Failure / Faulty Signal From Passenger Rear Door (DTC, Lock / Unlock / Open)         1	38	Driver Rear Door Lock Switch Activated
41       Unlock Switch in Center Console Activated         42       Lock Switch in Center Console Activated         43       Start / Stop Switch Activated         128       Terminal "S" Hardwire input Fault (DTC)         129       Terminal "15" Hardwire Relay Output Short to Ground (DTC)         130       Terminal "15" Hardwire Relay Output Implausible Signal to KL15 Condition Input         132       Terminal "50" HW Short to ground         133       Terminal "30" left (DTC)         134       Terminal "30" left (DTC)         135       Terminal "30" Right (DTC)         136       Internal Controller Failure (RAM)         137       RAM (DTC)         138       ROM (DTC)         139       Watchdog Triggering Fault         140       Deactivate interrupt called for         141       Processor Overload         142       Control Unit Defective (00003)         143       Failure / Faulty Signal From Driver Door (DTC, Lock / Unlock / Open)         144       Failure / Faulty Signal From Passenger Door (DTC, Lock / Unlock / Open)         144       Failure / Faulty Signal From Passenger Door (DTC, Lock / Unlock / Open)         145       Failure / Faulty Signal From Passenger Rav Door (DTC, Lock / Unlock / Open)         146       Failure / Faulty Signal Gateway Engin	39	Passenger Rear Door Unlock Switch Activated
42       Lock Switch in Center Console Activated         43       Start / Stop Switch Activated         128       Terminal "5" Hardwire input Fault (DTC)         129       Terminal "15" Hardwire Qutput Short to Ground (DTC)         130       Terminal "15" Hardwire Relay Output Short to Ground (DTC)         131       Terminal "15" Hardwire Relay Output Implausible Signal to KL15 Condition Input         132       Terminal "50" HW Short to Ground         133       Terminal "30" Right (DTC)         134       Terminal "30" Right (DTC)         135       Terminal "30" Right (DTC)         136       Internal Controller Failure (RAM)         137       RAM (DTC)         138       ROM (DTC)         139       Watchdog Triggering Fault         140       Deactivate interrupt called for         141       Processor Overload         142       Control Unit Defective (00003)         143       Failure / Faulty Signal From ECM (MSG for Remote Start)         144       Failure / Faulty Signal From Driver Door (DTC, Lock / Unlock / Open)         145       Failure / Faulty Signal From Driver Rear Door (DTC, Lock / Unlock / Open)         146       Failure / Faulty Signal From Driver Rear Door (DTC, Lock / Unlock / Open)         147       Failure / Faulty Signal Gateway Engine D	40	Passenger Rear Door Lock Switch Activated
43       Start / Stop Switch Activated         128       Terminal "S" Hardwire input Fault (DTC)         129       Terminal "15" Hardwire Relay Output Short to Ground (DTC)         130       Terminal "15" Hardwire Relay Output Implausible Signal to KL15 Condition Input         131       Terminal "15" Hardwire Relay Output Implausible Signal to KL15 Condition Input         132       Terminal "50" HW Short to Ground         133       Terminal "50" HW Short to Ground         134       Terminal "30" Right (DTC)         135       Terminal "30" Right (DTC)         136       Internal Controller Failure (RAM)         137       RAM (DTC)         138       ROM (DTC)         139       Watchdog Triggering Fault         140       Deactivate interrupt called for         141       Processor Overload         142       Control Unit Defective (00003)         143       Failure / Faulty Signal From ECM (MSG for Remote Start)         144       Failure / Faulty Signal From Driver Door (DTC, Lock / Unlock / Open)         145       Failure / Faulty Signal From Passenger Door (DTC, Lock / Unlock / Open)         146       Failure / Faulty Signal From Passenger Rear Door (DTC, Lock / Unlock / Open)         147       Failure / Faulty Signal Gateway Engine DTC / RPM         150	41	Unlock Switch in Center Console Activated
128       Terminal "S" Hardwire input Fault (DTC)         129       Terminal "15" Hardwire Output Short to Ground (DTC)         130       Terminal "15" Hardwire Relay Output Short to Ground (DTC)         131       Terminal "50" HW Short to power         132       Terminal "50" HW Short to Ground         133       Terminal "50" HW Short to Ground         134       Terminal "50" HW Short to Ground         135       Terminal "30" left (DTC)         136       Internal Controller Failure (RAM)         137       RAM (DTC)         138       ROM (OTC)         139       Watchdog Triggering Fault         140       Deactivate interrupt called for         141       Processor Overload         142       Control Unit Defective (00003)         143       Failure / Faulty Signal From ECM (MSG for Remote Start)         144       Failure / Faulty Signal From Driver Door (DTC, Lock / Unlock / Open)         145       Failure / Faulty Signal From Priver Rear Door (DTC, Lock / Unlock / Open)         146       Failure / Faulty Signal From Priver Rear Door (DTC, Lock / Unlock / Open)         147       Failure / Faulty Signal Gateway Engine DTC / RPM         148       Failure / Faulty Signal Gateway Engine DTC / Speed / Brake / Selector Lever)         149       Failure / Faulty	42	Lock Switch in Center Console Activated
129Terminal "15" Hardwire Output Short to Ground (DTC)130Terminal "15" Hardwire Relay Output Implausible Signal to KL15 Condition Input131Terminal "50" HW Short to power133Terminal "50" HW Short to Ground134Terminal "30" left (DTC)135Terminal "30" left (DTC)136Internal Controller Failure (RAM)137RAM (DTC)138ROM (DTC)139Watchdog Triggering Fault140Deactivate interrupt called for141Processor Overload142Control Unit Defective (00003)143Failure / Faulty Signal From Driver Door (DTC, Lock / Unlock / Open)144Failure / Faulty Signal From Driver Rear Door (DTC, Lock / Unlock / Open)145Failure / Faulty Signal From Passenger Door (DTC, Lock / Unlock / Open)148Failure / Faulty Signal From Rear Door (DTC, Lock / Unlock / Open)149Failure / Faulty Signal From Rear Door (DTC, Lock / Unlock / Open)149Failure / Faulty Signal From Rear Door (DTC, Lock / Unlock / Open)145Failure / Faulty Signal From Rear Door (DTC, Lock / Unlock / Open)147Failure / Faulty Signal From Rear Door (DTC, Lock / Unlock / Open)148Failure / Faulty Signal Gateway Engine DTC / RPM150Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)151Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)153Low Battery / CAN BUS Voltage154Failure / Faulty Signal From Airbag (DTC / Crash Signal)	43	Start / Stop Switch Activated
130       Terminal "15" Hardwire Relay Output Short to Ground (DTC)         131       Terminal "15" Hardwire Relay Output Implausible Signal to KL15 Condition Input         132       Terminal "50" HW Short to power         133       Terminal "50" HW Short to Ground         134       Terminal "30" left (DTC)         135       Terminal "30" Right (DTC)         136       Internal Controller Failure (RAM)         137       RAM (DTC)         138       ROM (DTC)         139       Watchdog Triggering Fault         140       Deactivate interrupt called for         141       Processor Overload         142       Control Unit Defective (00003)         143       Failure / Faulty Signal From ECM (MSG for Remote Start)         144       Failure / Faulty Signal From Driver Door (DTC, Lock / Unlock / Open)         145       Failure / Faulty Signal From Passenger Rear Door (DTC, Lock / Unlock / Open)         146       Failure / Faulty Signal From Rear Lid (Lock / Unlock / Open)         147       Failure / Faulty Signal Gateway Engine DTC / RPM         150       Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)         151       Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)         152       Failure / Faulty Signal Gateway Steering Angle Sensor (	128	Terminal "S" Hardwire input Fault (DTC)
131       Terminal "15" Hardwire Relay Output Implausible Signal to KL15 Condition Input         132       Terminal "50" HW Short to power         133       Terminal "50" HW Short to Ground         134       Terminal "30" left (DTC)         135       Terminal "30" Right (DTC)         136       Internal Controller Failure (RAM)         137       RAM (DTC)         138       ROM (DTC)         139       Watchdog Triggering Fault         140       Deactivate interrupt called for         141       Processor Overload         142       Control Unit Defective (00003)         143       Failure / Faulty Signal From ECM (MSG for Remote Start)         144       Failure / Faulty Signal From Driver Door (DTC, Lock / Unlock / Open)         145       Failure / Faulty Signal From Passenger Door (DTC, Lock / Unlock / Open)         146       Failure / Faulty Signal From Passenger Rear Door (DTC, Lock / Unlock / Open)         147       Failure / Faulty Signal From Passenger Rear Door (DTC, Lock / Unlock / Open)         148       Failure / Faulty Signal From Passenger Rear Door (DTC, Lock / Unlock / Open)         149       Failure / Faulty Signal From Passenger Rear Door (DTC, Lock / Unlock / Open)         148       Failure / Faulty Signal Gateway Engine DTC / RPM         150       Failure / Faulty Signal G	129	Terminal "15" Hardwire Output Short to Ground (DTC)
132       Terminal "50" HW Short to power         133       Terminal "50" HW Short to Ground         134       Terminal "30" left (DTC)         135       Terminal "30" Right (DTC)         136       Internal Controller Failure (RAM)         137       RAM (DTC)         138       ROM (DTC)         139       Watchdog Triggering Fault         140       Deactivate interrupt called for         141       Processor Overload         142       Control Unit Defective (00003)         143       Failure / Faulty Signal From ECM (MSG for Remote Start)         144       Failure / Faulty Signal From Driver Door (DTC, Lock / Unlock / Open)         145       Failure / Faulty Signal From Passenger Door (DTC, Lock / Unlock / Open)         146       Failure / Faulty Signal From Passenger Rear Door (DTC, Lock / Unlock / Open)         147       Failure / Faulty Signal From Rear Lid (Lock / Unlock / Open)         148       Failure / Faulty Signal Gateway Engine DTC / RPM         150       Failure / Faulty Signal Gateway Body (DTC / Speed / Brake / Selector Lever)         151       Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)         152       Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)         153       Low Battery / CAN BUS Vottage	130	Terminal "15" Hardwire Relay Output Short to Ground (DTC)
133       Terminal "50" HW Short to Ground         134       Terminal "30" left (DTC)         135       Terminal "30" Right (DTC)         136       Internal Controller Failure (RAM)         137       RAM (DTC)         138       ROM (DTC)         139       Watchdog Triggering Fault         140       Deactivate interrupt called for         141       Processor Overload         142       Control Unit Defective (00003)         143       Failure / Faulty Signal From ECM (MSG for Remote Start)         144       Failure / Faulty Signal From Driver Door (DTC, Lock / Unlock / Open)         145       Failure / Faulty Signal From Passenger Door (DTC, Lock / Unlock / Open)         146       Failure / Faulty Signal From Passenger Rear Door (DTC, Lock / Unlock / Open)         147       Failure / Faulty Signal From Rear Lid (Lock / Unlock / Open)         148       Failure / Faulty Signal From Rear Lid (Lock / Unlock / Open)         149       Failure / Faulty Signal Gateway Engine DTC / RPM         150       Failure / Faulty Signal Gateway Body (DTC / Speed / Brake / Selector Lever)         151       Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)         152       Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)         153       Low Battery / C	131	Terminal "15" Hardwire Relay Output Implausible Signal to KL15 Condition Input
134       Terminal "30" left (DTC)         135       Terminal "30" Right (DTC)         136       Internal Controller Failure (RAM)         137       RAM (DTC)         138       ROM (DTC)         139       Watchdog Triggering Fault         140       Deactivate interrupt called for         141       Processor Overload         142       Control Unit Defective (00003)         143       Failure / Faulty Signal From ECM (MSG for Remote Start)         144       Failure / Faulty Signal From Driver Door (DTC, Lock / Unlock / Open)         145       Failure / Faulty Signal From Passenger Door (DTC, Lock / Unlock / Open)         146       Failure / Faulty Signal From Passenger Rear Door (DTC, Lock / Unlock / Open)         147       Failure / Faulty Signal From Rear Lid (Lock / Unlock / Open)         148       Failure / Faulty Signal Gateway Engine DTC / RPM         150       Failure / Faulty Signal Gateway Body (DTC / Speed / Brake / Selector Lever)         151       Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)         152       Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)         153       Low Battery / CAN BUS Voltage         154       Failure / Faulty Signal From Airbag (DTC / Crash Signal)	132	Terminal "50" HW Short to power
135       Terminal "30" Right (DTC)         136       Internal Controller Failure (RAM)         137       RAM (DTC)         138       ROM (DTC)         139       Watchdog Triggering Fault         140       Deactivate interrupt called for         141       Processor Overload         142       Control Unit Defective (00003)         143       Failure / Faulty Signal From ECM (MSG for Remote Start)         144       Failure / Faulty Signal From Driver Door (DTC, Lock / Unlock / Open)         145       Failure / Faulty Signal From Passenger Door (DTC, Lock / Unlock / Open)         146       Failure / Faulty Signal From Passenger Door (DTC, Lock / Unlock / Open)         147       Failure / Faulty Signal From Passenger Rear Door (DTC, Lock / Unlock / Open)         148       Failure / Faulty Signal From Rear Lid (Lock / Unlock / Open)         149       Failure / Faulty Signal Gateway Engine DTC / RPM         150       Failure / Faulty Signal Gateway Body (DTC / Speed / Brake / Selector Lever)         151       Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)         152       Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)         153       Low Battery / CAN BUS Voltage         154       Failure / Faulty Signal From Airbag (DTC / Crash Signal) </td <td>133</td> <td>Terminal "50" HW Short to Ground</td>	133	Terminal "50" HW Short to Ground
136       Internal Controller Failure (RAM)         137       RAM (DTC)         138       ROM (DTC)         139       Watchdog Triggering Fault         140       Deactivate interrupt called for         141       Processor Overload         142       Control Unit Defective (00003)         143       Failure / Faulty Signal From ECM (MSG for Remote Start)         144       Failure / Faulty Signal From Driver Door (DTC, Lock / Unlock / Open)         145       Failure / Faulty Signal From Passenger Door (DTC, Lock / Unlock / Open)         146       Failure / Faulty Signal From Passenger Rear Door (DTC, Lock / Unlock / Open)         147       Failure / Faulty Signal From Rear Lid (Lock / Unlock / Open)         148       Failure / Faulty Signal Gateway Engine DTC / RPM         150       Failure / Faulty Signal Gateway Body (DTC / Speed / Brake / Selector Lever)         151       Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)         152       Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)         153       Low Battery / CAN BUS Voltage         154       Failure / Faulty Signal From Airbag (DTC / Crash Signal)	134	Terminal "30" left (DTC)
137       RAM (DTC)         138       ROM (DTC)         139       Watchdog Triggering Fault         140       Deactivate interrupt called for         141       Processor Overload         142       Control Unit Defective (00003)         143       Failure / Faulty Signal From ECM (MSG for Remote Start)         144       Failure / Faulty Signal From Driver Door (DTC, Lock / Unlock / Open)         145       Failure / Faulty Signal From Passenger Door (DTC, Lock / Unlock / Open)         146       Failure / Faulty Signal From Passenger Rear Door (DTC, Lock / Unlock / Open)         147       Failure / Faulty Signal From Passenger Rear Door (DTC, Lock / Unlock / Open)         148       Failure / Faulty Signal From Rear Lid (Lock / Unlock / Open)         149       Failure / Faulty Signal Gateway Engine DTC / RPM         150       Failure / Faulty Signal Gateway Body (DTC / Speed / Brake / Selector Lever)         151       Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)         152       Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)         153       Low Battery / CAN BUS Voltage         154       Failure / Faulty Signal From Airbag (DTC / Crash Signal)	135	Terminal "30" Right (DTC)
138       ROM (DTC)         139       Watchdog Triggering Fault         140       Deactivate interrupt called for         141       Processor Overload         142       Control Unit Defective (00003)         143       Failure / Faulty Signal From ECM (MSG for Remote Start)         144       Failure / Faulty Signal From Driver Door (DTC, Lock / Unlock / Open)         145       Failure / Faulty Signal From Passenger Door (DTC, Lock / Unlock / Open)         146       Failure / Faulty Signal From Driver Rear Door (DTC, Lock / Unlock / Open)         147       Failure / Faulty Signal From Passenger Rear Door (DTC, Lock / Unlock / Open)         148       Failure / Faulty Signal From Rear Lid (Lock / Unlock / Open)         149       Failure / Faulty Signal Gateway Engine DTC / RPM         150       Failure / Faulty Signal Gateway Body (DTC / Speed / Brake / Selector Lever)         151       Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)         152       Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)         153       Low Battery / CAN BUS Voltage         154       Failure / Faulty Signal From Airbag (DTC / Crash Signal)	136	Internal Controller Failure (RAM)
139       Watchdog Triggering Fault         140       Deactivate interrupt called for         141       Processor Overload         142       Control Unit Defective (00003)         143       Failure / Faulty Signal From ECM (MSG for Remote Start)         144       Failure / Faulty Signal From Driver Door (DTC, Lock / Unlock / Open)         145       Failure / Faulty Signal From Passenger Door (DTC, Lock / Unlock / Open)         146       Failure / Faulty Signal From Passenger Rear Door (DTC, Lock / Unlock / Open)         147       Failure / Faulty Signal From Passenger Rear Door (DTC, Lock / Unlock / Open)         148       Failure / Faulty Signal From Rear Lid (Lock / Unlock / Open)         149       Failure / Faulty Signal Gateway Engine DTC / RPM         150       Failure / Faulty Signal Gateway Body (DTC / Speed / Brake / Selector Lever)         151       Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)         152       Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)         153       Low Battery / CAN BUS Voltage         154       Failure / Faulty Signal From Airbag (DTC / Crash Signal)	137	RAM (DTC)
140       Deactivate interrupt called for         141       Processor Overload         142       Control Unit Defective (00003)         143       Failure / Faulty Signal From ECM (MSG for Remote Start)         144       Failure / Faulty Signal From Driver Door (DTC, Lock / Unlock / Open)         145       Failure / Faulty Signal From Driver Door (DTC, Lock / Unlock / Open)         146       Failure / Faulty Signal From Driver Rear Door (DTC, Lock / Unlock / Open)         147       Failure / Faulty Signal From Passenger Rear Door (DTC, Lock / Unlock / Open)         148       Failure / Faulty Signal From Rear Lid (Lock / Unlock / Open)         149       Failure / Faulty Signal Gateway Engine DTC / RPM         150       Failure / Faulty Signal Gateway Body (DTC / Speed / Brake / Selector Lever)         151       Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)         152       Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)         153       Low Battery / CAN BUS Voltage         154       Failure / Faulty Signal From Airbag (DTC / Crash Signal)	138	ROM (DTC)
141       Processor Overload         142       Control Unit Defective (00003)         143       Failure / Faulty Signal From ECM (MSG for Remote Start)         144       Failure / Faulty Signal From Driver Door (DTC, Lock / Unlock / Open)         145       Failure / Faulty Signal From Passenger Door (DTC, Lock / Unlock / Open)         146       Failure / Faulty Signal From Driver Rear Door (DTC, Lock / Unlock / Open)         147       Failure / Faulty Signal From Passenger Rear Door (DTC, Lock / Unlock / Open)         148       Failure / Faulty Signal From Rear Lid (Lock / Unlock / Open)         149       Failure / Faulty Signal Gateway Engine DTC / RPM         150       Failure / Faulty Signal Gateway Body (DTC / Speed / Brake / Selector Lever)         151       Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)         152       Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)         153       Low Battery / CAN BUS Voltage         154       Failure / Faulty Signal From Airbag (DTC / Crash Signal)	139	Watchdog Triggering Fault
142Control Unit Defective (00003)143Failure / Faulty Signal From ECM (MSG for Remote Start)144Failure / Faulty Signal From Driver Door (DTC, Lock / Unlock / Open)145Failure / Faulty Signal From Passenger Door (DTC, Lock / Unlock / Open)146Failure / Faulty Signal From Driver Rear Door (DTC, Lock / Unlock / Open)147Failure / Faulty Signal From Passenger Rear Door (DTC, Lock / Unlock / Open)148Failure / Faulty Signal From Rear Lid (Lock / Unlock / Open)149Failure / Faulty Signal Gateway Engine DTC / RPM150Failure / Faulty Signal Gateway Body (DTC / Speed / Brake / Selector Lever)151Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)153Low Battery / CAN BUS Voltage154Failure / Faulty Signal From Airbag (DTC / Crash Signal)	140	Deactivate interrupt called for
143Failure / Faulty Signal From ECM (MSG for Remote Start)144Failure / Faulty Signal From Driver Door (DTC, Lock / Unlock / Open)145Failure / Faulty Signal From Passenger Door (DTC, Lock / Unlock / Open)146Failure / Faulty Signal From Driver Rear Door (DTC, Lock / Unlock / Open)147Failure / Faulty Signal From Passenger Rear Door (DTC, Lock / Unlock / Open)148Failure / Faulty Signal From Rear Lid (Lock / Unlock / Open)149Failure / Faulty Signal Gateway Engine DTC / RPM150Failure / Faulty Signal Gateway Body (DTC / Speed / Brake / Selector Lever)151Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)153Low Battery / CAN BUS Voltage154Failure / Faulty Signal From Airbag (DTC / Crash Signal)	141	Processor Overload
144       Failure / Faulty Signal From Driver Door (DTC, Lock / Unlock / Open)         145       Failure / Faulty Signal From Passenger Door (DTC, Lock / Unlock / Open)         146       Failure / Faulty Signal From Driver Rear Door (DTC, Lock / Unlock / Open)         147       Failure / Faulty Signal From Passenger Rear Door (DTC, Lock / Unlock / Open)         148       Failure / Faulty Signal From Rear Lid (Lock / Unlock / Open)         149       Failure / Faulty Signal Gateway Engine DTC / RPM         150       Failure / Faulty Signal Gateway Body (DTC / Speed / Brake / Selector Lever)         151       Failure / Faulty Signal Gateway Cluster / Kombi (DTC / Speed)         152       Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)         153       Low Battery / CAN BUS Voltage         154       Failure / Faulty Signal From Airbag (DTC / Crash Signal)	142	Control Unit Defective (00003)
145Failure / Faulty Signal From Passenger Door (DTC, Lock / Unlock / Open)146Failure / Faulty Signal From Driver Rear Door (DTC, Lock / Unlock / Open)147Failure / Faulty Signal From Passenger Rear Door (DTC, Lock / Unlock / Open)148Failure / Faulty Signal From Rear Lid (Lock / Unlock / Open)149Failure / Faulty Signal Gateway Engine DTC / RPM150Failure / Faulty Signal Gateway Body (DTC / Speed / Brake / Selector Lever)151Failure / Faulty Signal Gateway Cluster / Kombi (DTC / Speed)152Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)153Low Battery / CAN BUS Voltage154Failure / Faulty Signal From Airbag (DTC / Crash Signal)	143	Failure / Faulty Signal From ECM (MSG for Remote Start)
145Failure / Faulty Signal From Passenger Door (DTC, Lock / Unlock / Open)146Failure / Faulty Signal From Driver Rear Door (DTC, Lock / Unlock / Open)147Failure / Faulty Signal From Passenger Rear Door (DTC, Lock / Unlock / Open)148Failure / Faulty Signal From Rear Lid (Lock / Unlock / Open)149Failure / Faulty Signal Gateway Engine DTC / RPM150Failure / Faulty Signal Gateway Body (DTC / Speed / Brake / Selector Lever)151Failure / Faulty Signal Gateway Cluster / Kombi (DTC / Speed)152Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)153Low Battery / CAN BUS Voltage154Failure / Faulty Signal From Airbag (DTC / Crash Signal)	144	Failure / Faulty Signal From Driver Door (DTC, Lock / Unlock / Open)
147       Failure / Faulty Signal From Passenger Rear Door (DTC, Lock / Unlock / Open)         148       Failure / Faulty Signal From Rear Lid (Lock / Unlock / Open)         149       Failure / Faulty Signal Gateway Engine DTC / RPM         150       Failure / Faulty Signal Gateway Body (DTC / Speed / Brake / Selector Lever)         151       Failure / Faulty Signal Gateway Cluster / Kombi (DTC / Speed)         152       Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)         153       Low Battery / CAN BUS Voltage         154       Failure / Faulty Signal From Airbag (DTC / Crash Signal)	145	Failure / Faulty Signal From Passenger Door (DTC, Lock / Unlock / Open)
148Failure / Faulty Signal From Rear Lid (Lock / Unlock / Open)149Failure / Faulty Signal Gateway Engine DTC / RPM150Failure / Faulty Signal Gateway Body (DTC / Speed / Brake / Selector Lever)151Failure / Faulty Signal Gateway Cluster / Kombi (DTC / Speed)152Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)153Low Battery / CAN BUS Voltage154Failure / Faulty Signal From Airbag (DTC / Crash Signal)	146	
148Failure / Faulty Signal From Rear Lid (Lock / Unlock / Open)149Failure / Faulty Signal Gateway Engine DTC / RPM150Failure / Faulty Signal Gateway Body (DTC / Speed / Brake / Selector Lever)151Failure / Faulty Signal Gateway Cluster / Kombi (DTC / Speed)152Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)153Low Battery / CAN BUS Voltage154Failure / Faulty Signal From Airbag (DTC / Crash Signal)	147	Failure / Faulty Signal From Passenger Rear Door (DTC, Lock / Unlock / Open)
149       Failure / Faulty Signal Gateway Engine DTC / RPM         150       Failure / Faulty Signal Gateway Body (DTC / Speed / Brake / Selector Lever)         151       Failure / Faulty Signal Gateway Cluster / Kombi (DTC / Speed)         152       Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)         153       Low Battery / CAN BUS Voltage         154       Failure / Faulty Signal From Airbag (DTC / Crash Signal)	148	
150       Failure / Faulty Signal Gateway Body (DTC / Speed / Brake / Selector Lever)         151       Failure / Faulty Signal Gateway Cluster / Kombi (DTC / Speed)         152       Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)         153       Low Battery / CAN BUS Voltage         154       Failure / Faulty Signal From Airbag (DTC / Crash Signal)	149	
151       Failure / Faulty Signal Gateway Cluster / Kombi (DTC / Speed)         152       Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)         153       Low Battery / CAN BUS Voltage         154       Failure / Faulty Signal From Airbag (DTC / Crash Signal)	150	Failure / Faulty Signal Gateway Body (DTC / Speed / Brake / Selector Lever)
152       Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)         153       Low Battery / CAN BUS Voltage         154       Failure / Faulty Signal From Airbag (DTC / Crash Signal)	151	
153     Low Battery / CAN BUS Voltage       154     Failure / Faulty Signal From Airbag (DTC / Crash Signal)	152	Failure / Faulty Signal Gateway Steering Angle Sensor (DTC / Steering Angle)
154 Failure / Faulty Signal From Airbag (DTC / Crash Signal)	153	



Transaction No:	205

57-18-04TT - Remote Start Diagnosis and Cancellation Codes Reference for Release date: 01/24/2020 the -J519- Vehicle Electrical System Control Module

## **Additional Information**

© 2020 Volkswagen Group of America, Inc. All rights reserved. Information contained in this document is based on the latest information available at the time of printing and is subject to the copyright and other intellectual property rights of Volkswagen Group of America, Inc., its affiliated companies and its licensors. All rights are reserved to make changes at any time without notice. No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, nor may these materials be modified or reposted to other sites, without the prior expressed written permission of the publisher.