

1. Furnace is not igniting-blows for 30 seconds and turns off. Internal short in furnace control board. Need to remove furnace, R&R control board and bench test furnace then reinstall.

Please contact Atwood at 800-825-4328 for warranty part and labor.