

## Technical product information

<b>Topic</b>	New Continental GT and GTC - Front Passenger Safety Belt Presenter Does Not Deploy
<b>Market area</b>	United States E05 Bentley USA and rest America (6E05)
<b>Brand</b>	Bentley
<b>Transaction No.</b>	2058512/2
<b>Level</b>	EH
<b>Status</b>	Approval
<b>Release date</b>	

### New customer code

Object of complaint	Complaint type	Position
occupant protection, pedestrian protection -> belts -> three-point belt guide	component / consumables -> damaged	
occupant protection, pedestrian protection -> operation, control -> extend belt hand-over device	functionality -> without function / defect	
occupant protection, pedestrian protection -> operation, control -> feed out seat belt	functionality -> without function / defect	

### New workshop code

Object of complaint	Complaint type	Position
occupant protection, pedestrian protection -> belts -> belt hand-over device -> belt hand-over device drive	functionality -> faulty	left
occupant protection, pedestrian protection -> belts -> belt hand-over device -> belt hand-over device drive	functionality -> faulty	right

## Vehicle data

### New Continental GT and GTC

#### Sales types


Type	MY	Brand	Designation	Engine code	Gearbox code	Final drive code
3S3*	2020	E		*	*	*
3S4*	2020	E		*	*	*

## Documents

Document name
<a href="#">master.xml</a>

## Customer statement / workshop findings

Front Passenger Safety Belt Presenter does not deploy when expected.

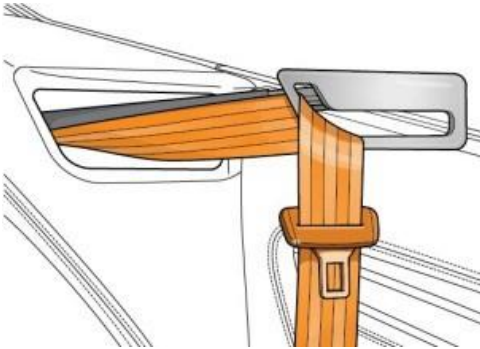

## Technical background

Under investigation.

## Production change

Under investigation.

## Measure

Check for Diagnostic Trouble Codes (DTC's) relating to the Front Passenger Safety Belt Presenter, if DTC's are not evident conduct the following process.

Note: There are various situations in which the Front Driver and Passenger Safety Belt Presenters will deploy. This TPI is specifically designed to only check and prove the functionality of the Front Passenger Safety Belt Presenter. Conduct this specific test process as follows.

- Ensure the vehicle is unoccupied, Driver and Passenger doors are closed, vehicle unlocked and the ignition switched "off".
- Open Driver's door and sit in Driver's seat.
- Close Driver's door.
- Driver's Safety Belt Presenter will deploy.
- Switch "on" vehicle ignition.
- Have a second person open the Passenger door.
- Have the second person sit in the Passenger seat.
- Close Passenger door.
- Passenger Safety Belt Presenter deploys.

If the vehicle conforms to the logic above no further action is required, this is normal functionality.