Mazda North American Operations Irvine, CA 92618-2922



Subject: OIL PRESSURE WARNING LIGHT OR CHECK ENGINE LIGHT ON WITH DTC P0524 AND/OR P055F AND NO DRIVABILITY CONCERN OR MECHANICAL NOISE	Service Alert No.: SA-055/20
	Last Issued: 07/09/2020

BULLETIN NOTES

This service alert supersedes the previously issued service alert listed below. The changes are noted in Red text.

Previous Service Alert:	Date(s) Issued:
SA-055/20	06/22/20
SA-041/19	09/20/19

APPLICABLE MODEL(S)/VINS

2018-2019 CX-5 2018-2019 Mazda 6 2019-2020 Mazda 3

Exclude 2020 CX-30 SEE

DESCRIPTION

If a customer comes in with the following concerns:

- OIL PRESSURE WARNING light and/or the CHECK ENGINE light ON.
- DTC P055F and/or P0524 stored.
- No driveability concern or engine mechanical noise.
- Outside the VIN range in TSB 01-020/18.

Perform the following inspection:

1. Inspect the engine oil.

Is it above MIN on the dipstick and in good condition using an OEM filter?

Yes, Proceed to step 2.

Page 1 of 2

CONSUMER NOTICE: The information and instructions in this bulletin are intended for use by skilled technicians. Mazda technicians utilize the proper tools/ equipment and take training to correctly and safely maintain Mazda vehicles. These instructions should not be performed by "do-it-yourselfers." Customers should not assume this bulletin applies to their vehicle or that their vehicle will develop the described concern. To determine if the information applies, customers should contact their nearest authorized Mazda dealership. Mazda North American Operations reserves the right to alter the specifications and contents of this bulletin without obligation or advance notice. All rights reserved. No part of this bulletin may be reproduced in any form or by any means, electronic or mechanical---including photocopying and recording and the use of any kind of information storage and retrieval system ---without permission in writing. No, Correct condition then go to step 2.

2. Perform engine oil pressure inspection using the DataLogger PIDs. **NOTE**:

- It is critical to keep RPM within the specified range when measuring the oil pressure.
- Use an external cooling fan or turn on the heater and set the fan speed to high to maintain engine coolant/oil temperature.
- Document your pressure readings and RPM on the repair order and warranty claim.

Oil pressure (reference value)	
Lo: 135-165 kPa {1.38-1.68 kgf/cm2, 19.6-23.9 psi} [1,500 - 1,600 rpm]*	
Hi: 225-275 kPa {2.30-2.80 kgf/cm2, 32.7-39.8 psi} [4,500 - 4,600 rpm]*	
Oil temperature: 80-90 °C {176-194 °F}, Coolant temperature: 80-90 °C {176-194 °F}	

M-MDS DATALOGGER PIDs

EOP: Engine oil pressure [kPa, Bar, psi]

- RPM: Engine Speed [rpm]
- ECT: Engine Coolant temperature [°C, °F]
- OIL_TEMP: Engine Oil temperature [°C, °F]
- 3. Contact Hotline for assistance.

Page 2 of 2

CONSUMER NOTICE: The information and instructions in this bulletin are intended for use by skilled technicians. Mazda technicians utilize the proper tools/ equipment and take training to correctly and safely maintain Mazda vehicles. These instructions should not be performed by "do-it-yourselfers." Customers should not assume this bulletin applies to their vehicle or that their vehicle will develop the described concern. To determine if the information applies, customers should contact their nearest authorized Mazda dealership. Mazda North American Operations reserves the right to alter the specifications and contents of this bulletin without obligation or advance notice. All rights reserved. No part of this bulletin may be reproduced in any form or by any means, electronic or mechanical---including photocopying and recording and the use of any kind of information storage and retrieval system ---without permission in writing.

© 2020 Mazda North American Operations, U.S.A.