

Table 2. Required Dealer Action 2002-2003 VRSC Models

SERVICE MANUAL PART NO.	SECTION	REMEDY
99501-02, 99501-02A, 99501-03	4.2 FUEL PUMP/FILTERS/FUEL LEVEL SENDER ASSEMBLY:SUC-TION SIDE FUEL FILTER	Add note. "Do not remove suction side fuel filter from fuel pump."
	4.2 FUEL PUMP/FILTERS/FUEL LEVEL SENDER ASSEMBLY:FUEL PUMP:Removal	Cross out step 2. "Pull the suction side filter off the inlet port. The retain-ing ring remains on the fuel pump."
	4.2 FUEL PUMP/FILTERS/FUEL LEVEL SENDER ASSEMBLY:FUEL PUMP:Installation	Cross out step 6. "Press a new suction side filter (4) onto the strainer inlet at the bottom of the fuel pump (5)."

Table 3. Required Dealer Action 2004-2005 VRSC Models

SERVICE MANUAL PART NO.	SECTION	REMEDY
99501-04, 99501-05	4.2 FUEL PUMP/FILTERS/FUEL LEVEL SENDER ASSEMBLY:SUC-TION SIDE FUEL FILTER	Add note. "Replace suction side fuel filter and fuel pump as an assembly. Do not remove suction side fuel filter from fuel pump."
	4.2 FUEL PUMP/FILTERS/FUEL LEVEL SENDER ASSEMBLY:FUEL PUMP:Removal	Cross out step 2. "Pull the suction side filter off the inlet port. The retain-ing ring remains on the fuel pump."
	4.2 FUEL PUMP/FILTERS/FUEL LEVEL SENDER ASSEMBLY:FUEL PUMP:Installation	Cross out step 6. "Press a new suction side filter (4) onto the strainer inlet at the bottom of the fuel pump (5)."

Table 4. Required Dealer Action 2006 VRSC Models

MODEL YEAR	SECTION	REMEDY
99501-06, 99501-06A	4.2 FUEL PUMP/FILTER/SENDER ASSEMBLY (VRSCA/VRSCD):SUC-TION SIDE FUEL FILTER	Add note. "Replace suction side fuel filter and fuel pump as an assembly. Do not remove suction side fuel filter from fuel pump."
	4.2 FUEL PUMP/FILTER/SENDER ASSEMBLY (VRSCA/VRSCD):FUEL PUMP:Re-moval	Cross out step 2. "Pull the suction side filter off the inlet port. The retain-ing ring remains on the fuel pump."
	4.2 FUEL PUMP/FILTER/SENDER ASSEMBLY (VRSCA/VRSCD):FUEL PUMP:In-stallation	Cross out step 6. "Press a new suction side filter (4) onto the strainer inlet at the bottom of the fuel pump (5)."
	4.3 FUEL PUMP/FILTER/SENDER ASSEMBLY (VRSCR):SUC-TION SIDE FUEL FILTER	Add note. "Replace suction side fuel filter and fuel pump as an assembly. Do not remove suction side fuel filter from fuel pump."
	4.3 FUEL PUMP/FILTER/SENDER ASSEMBLY (VRSCR):FUEL PUMP:Removal	Cross out step 2. "Pull the suction side filter off the inlet port. The retain-ing ring remains on the fuel pump."
	4.3 FUEL PUMP/FILTER/SENDER ASSEMBLY (VRSCR):FUEL PUMP:Installation	Cross out step 6. "Press a new suction side filter (4) onto the strainer inlet at the bottom of the fuel pump (5)."