

Snow Chains

Information: **Instructions for assembly and use**

Model Year: **As of 2014**

Restrictions: **NOT** approved for use on the front axle!

NOT approved for use with 20-inch and/or 21-inch winter and all-weather tires (all-season tires)!

ONLY approved for winter/all-weather complete wheels on the rear axle with the following dimensions:

- 18-inch winter/all-weather complete wheel (255/55 R18 M+S on 9J x 18 RO 21 rim)
- 19-inch winter/all-weather complete wheel (255/50 R19 M+S on 9J x 19 RO 21 rim)



Figure 1

Notes: Snow chains:

- have been tested and approved for the rear axle of the Macan (95B ⇒ *Figure 1*).
- can be installed easily in the narrow wheel housing on the rear axle using the spring steel clip.
- can be repaired by retail outlets if necessary.

Parts Info: **95B.044.600.15** ⇒ Snow chains, set

Parts List:

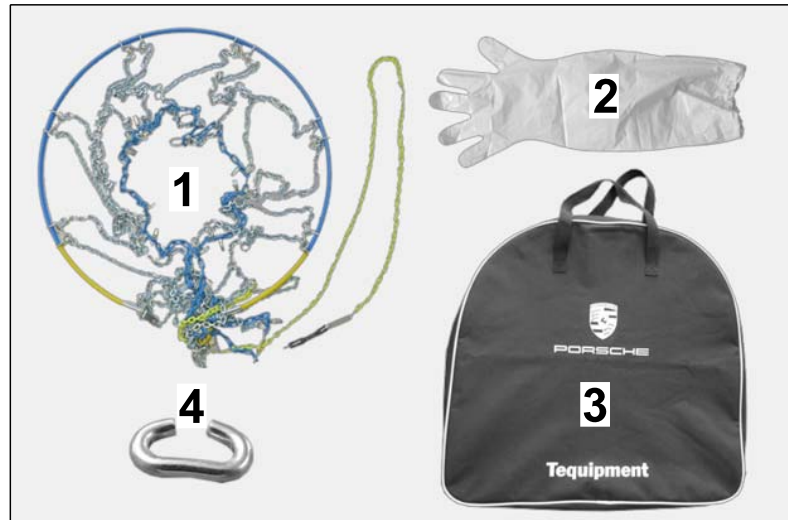


Figure 2

----	2 x	Snow chain ⇒ Figure 2-1-
----	2 x	Installing glove ⇒ Figure 2-2-
----	1 x	Bag ⇒ Figure 2-3-
----	2 x	Chain link (for temporary repairs) ⇒ Figure 2-4-
----	1 x	Instructions for assembly and use (not shown)

Technical Data:

- Min. spring steel clip diameter (closed): approx. 530 mm/ 20.87 in
- Max. spring steel clip diameter (opening dimension): approx. 600 mm/ 23.62 in (for installing: approx. 900 mm/ 35.43 in)
- Own weight: approx. 3440 g/ 7.58 lbs ea.
- **Permitted top speed (v_{max}): 50 km/h (30 mph)**

Note: Observe the relevant legal regulations in the various countries!

Your Porsche partner will be happy to provide you with information about the current approval status.

**DANGER**

Driving with snow chains

- **Danger of injury**
 - **Risk of material damage**
- ⇒ **Snow chains may ONLY be used for driving on snow-covered and icy roads.**
- ⇒ **On partly snow-covered roads: Drive much more slowly.**
- ⇒ **Driving with snow chains in off-road areas has NOT been tested and approved.**
- ⇒ **Allow for change in vehicle handling (see also Owner's Manual).**

- ⇒ Avoid spinning wheels installed with snow chains.
- ⇒ Observe recommended maximum speed of 30 MPH (50 km/h) on roads that are well covered with snow.
- ⇒ Immediately after installing and after driving a short distance (150–300 ft/50 – 100 m): Check that snow chains are perfectly centered and re-tension if necessary.
- ⇒ After a distance of 12 miles (20 km) and after test emergency braking: Check that snow chains are installed correctly and check for signs of wear.
- ⇒ If the installed snow chain hits/touches against a curb: Check that the snow chain is installed correctly and check for signs of wear.
- ⇒ Before starting EVERY trip: Check that the snow chain is installed/positioned correctly on the wheel.
- ⇒ When towing a trailer, follow the instructions in the Owner's Manual and observe all road traffic laws.

 **WARNING**

Installing/removing snow chains

- Danger of injury
- Risk of damage to the wheel housing, fender and other vehicle parts
- ⇒ Learn how to handle snow chains by installing/removing them when dry as a test.
- ⇒ AFTER installation: Check clearance of the wheel WITH snow chain in extreme positions (compressed).
- ⇒ Always install/remove snow chains on level ground.
- ⇒ Always install/remove snow chains when the vehicle is stationary and secured as described in the Owner's Manual.
- ⇒ As soon as the wheel installed with the chain moves: Keep ALL parts of the body (fingers, hands and hair) a safe distance away.
- ⇒ When tightening and loosening the tensioner: Keep ALL parts of the body (fingers, hands and hair) a safe distance away.
- ⇒ For greater visibility and for your own safety when installing/removing snow chains, wear a Hi-vis jacket (e.g. from PORSCHE EQUIPMENT).
- ⇒ Read the Installation and Conversion Instructions carefully and follow these instructions exactly during installation/removal.
- ⇒ Observe the specified tire pressure (see Owner's Manual). Reducing the tire pressure for installation/removal is NOT permitted.
- ⇒ Observe the snow chains' substantial own weight.

 **WARNING****Using snow chains**

- Danger of injury
 - Risk of material damage
- ⇒ Snow chains may **ONLY** be used if the vehicle and tire and rim combination have been approved by Porsche for the use of snow chains.
- ⇒ Incorrect and improper use of snow chains, e.g. pulling, lifting or other actions, is **NOT** permitted! After installing snow chains correctly, **ONLY** use them for driving on suitable surfaces.
- ⇒ The use of one snow chain is **NOT** permitted. **ALWAYS** use snow chains on the left and right side of the vehicle when installing them on the rear axle.
- ⇒ Visually check previously used snow chains before installing. Damaged or broken snow chains must **NEVER** be used. This applies even if the wire diameter of a chain link is more than half worn in just a small area.
- ⇒ Broken chain elements can be repaired at retail outlets. **ONLY** use genuine spare parts for repairs.
- ⇒ After use: Clean/wash snow chains and leave them to dry. Store snow chains away from damaging chemicals.

**Information**

For further information/instructions for using snow chains, see "Tires and wheels" ⇒ "Using snow chains" in the Macan Driver's Manual.

**Information**

Please inform the customer of this accordingly.

Installing:

- 1 Preparatory work
 - 1.1 Check whether the installed tire/wheel combination on the rear axle is listed/approved in the Manufacturer's Certificate (⇒ "Macan" Driver's Manual, section on "Tires and wheels")
 - 1.2 **ONLY** for vehicles with adaptive air suspension with levelling system and height adjustment including Porsche Active Suspension Management (PASM = I-no. 1BK):
Check chassis setup.

For installing the snow chain, set the chassis height to "High" if necessary (⇒ "Macan" Driver's Manual, section on "Porsche Active Suspension Management (PASM) with air suspension and levelling system"). Check chassis setup.
 - 1.3 Remove snow and ice from around the wheel housings on the rear axle.
 - 1.4 Unpack snow chain and read instructions carefully.
 - 1.5 Check previously used snow chain for damage/breaks.

The wire diameter must **NOT** be worn by more than half at any point!

2 Install snow chain

2.1 Position snow chain on the wheel



Information

The other pictures show a symbolic representation of the snow chain and do **NOT** correspond to the snow chains supplied! They may have a different color and different individual components.

However, this does **NOT** affect how they are installed/removed or how they work.

2.1.1 Hold the snow chain at the ends of the spring steel clips.

- 1 – End of spring steel clip
- 2 – Chain net
- 3 – Locking plate
- 4 – Tensioning chain
- 5 – Bungee cord with hook

Arrange the chain net in such a way that it hangs down correctly at the clip (⇒ *Figure 3*).

Turn entwined parts of the chain back over the clip if necessary.

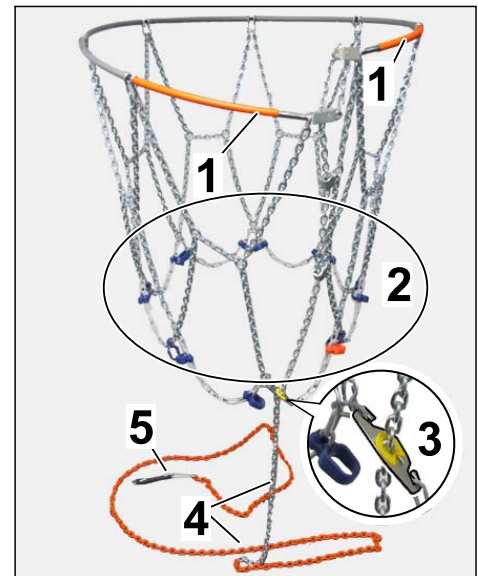


Figure 3

2.1.2 Position snow chain in front of the wheel with the opening facing downwards.

- 1 – Spring steel clip
- 2 – Chain net
- 3 – Plastic corner

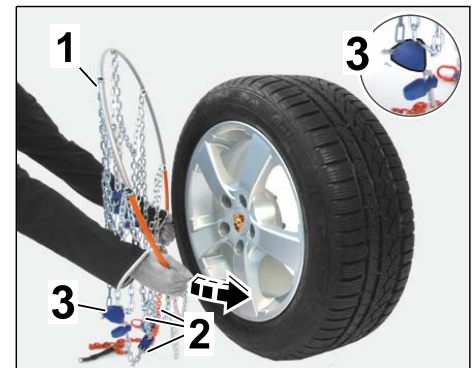


Figure 4

- 2.1.3 Pull the ends of the spring steel clip the maximum distance apart ⇒ *Figure 5 -A-*.

1 – End of spring steel clip

Guide snow chain over the wheel from above (⇒ *Figure 5 -B-*).

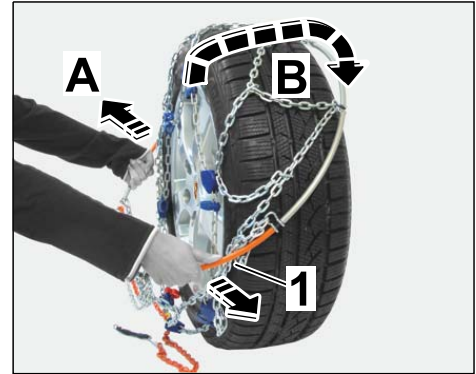


Figure 5

- 2.1.4 Guide the ends of the spring steel clip at the bottom of the wheel behind the wheel (⇒ *Figure 6 -C-*).

1 – End of spring steel clip

2 – Chain bar

- 2.1.5 Carefully let the ends of the spring steel clip go so that the spring steel clip springs together.

- 2.1.6 Arrange the chain net and make sure that no bars of the chain are caught in the tread (⇒ *Figure 6 -inset-*).

- 2.2 Tension snow chain on the wheel

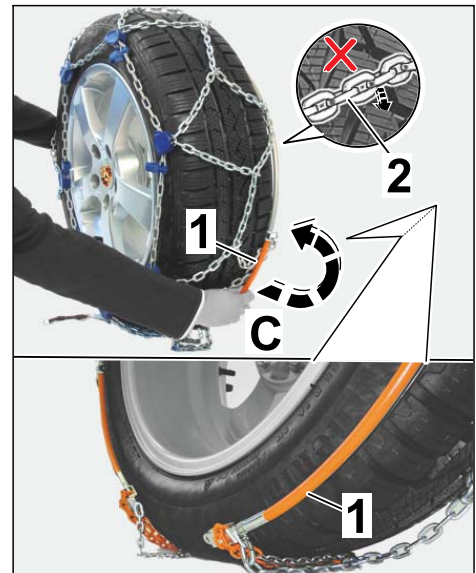


Figure 6

- 2.2.1 Drive forward or back to turn the wheel by approx. 1/4 (⇒ *Figure 7 -Arrows-*).

1 – Tensioning chain

2 – Locking plate

The tensioning chain (⇒ *Figure 7 -1-*) must **NOT** be under the wheel.

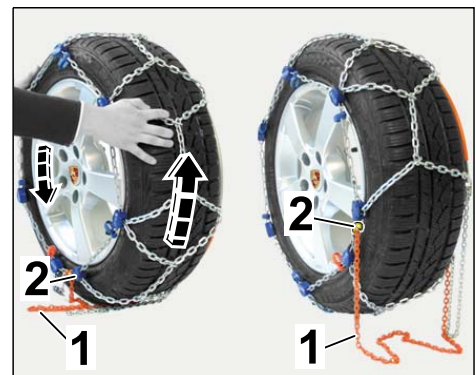


Figure 7

2.2.2 Check that the tensioning chain is running parallel at the tensioning point and deflection roller (end of spring steel clip on inside of wheel) ⇒ *Figure 8-A-* and is **2NOT** twisted ⇒ *Figure 8-B-*.

- 1 - Tensioning chain
- 2 - Deflection roller (end of spring steel clip)
- 3 - Tensioning point
- A - Tensioning chain routing: "OK"
- B - Tensioning chain routing: "NOT OK"

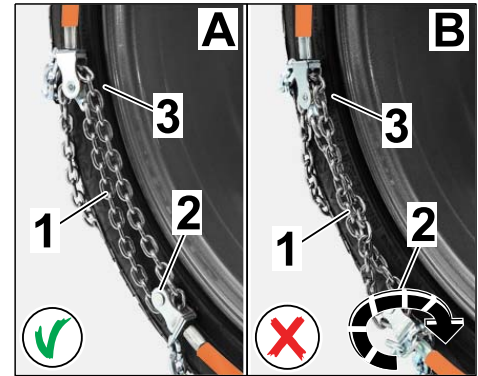


Figure 8

Turn deflection roller for spring steel clip if necessary (⇒ *Figure 8-B, arrow-*).

2.2.3 Guide chain link of the tensioning chain out of the lock in the slot on the locking plate (⇒ *Figure 9-A-*).

- 1 - Chain link
- 2 - Lock in slot on locking plate
- 3 - Locking plate

To do this, press the chain link past the lock in the slot on the locking plate (⇒ *Figure 9-2-*).

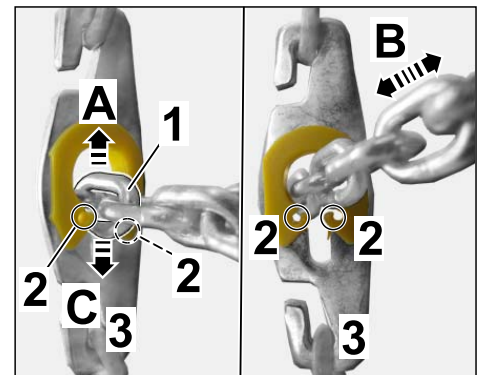


Figure 9

2.2.4 Grasp tensioning chain in the wheel running surface area and pull it firmly ⇒ *Figure 10-A-*.

- 1 - Tensioning chain
- 2 - Ends of spring steel clip

The spring steel clip on the inside of the wheel closes (⇒ *Figure 10-B-*).



Figure 10

2.2.5 Pull the tensioning chain tightly through the locking plate (⇒ *Figure 11-C-*).

- 1 – Tensioning chain
- 2 – Locking plate with lock
- 3 – Chain link
- 4 – Slot on locking plate

Check that the colored part of the tensioning chain (⇒ *Figure 11-X-*) is pulled completely through the locking plate.

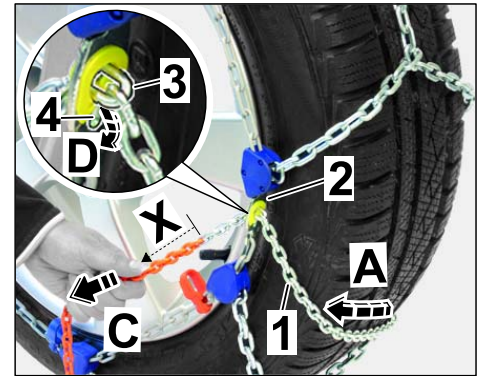


Figure 11

Engage chain link of the tensioning chain in the slot and lock on the locking plate (⇒ *Figure 11-D-* or ⇒ *Figure 9-C-*).

2.3 Secure the snow chain on the wheel

2.3.1 Guide tensioning chain after the locking plate to the yellow steel eyelet first (⇒ *Figure 12*).

- 1 – Tensioning chain
- 2 – Steel eyelet (yellow)
- 3 – Bungee cord with hook

2.3.2 Feed bungee cord with hook through the yellow steel eyelet ⇒ *Figure 12-inset, arrow-*).



Figure 12

2.3.3 Feed the rest of the tensioning chain in a circle (⇒ *Figure 13-A-* over the complete wheel through the remaining steel eyelets.

- 1 – Bungee cord with hook
- 2 – Chain link on outer chain

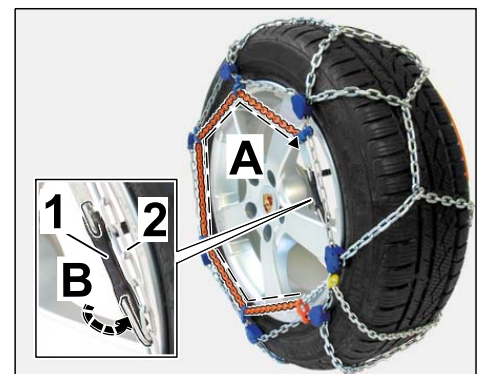


Figure 13

2.3.4 If the tensioning chain does not end at the last steel eyelet: Feed the tensioning chain through the steel eyelets again ⇒ *Figure 14 -A-*.

- 1 – Last steel eyelet
- 2 – Tensioning chain
- 3 – Bungee cord with hook

2.3.5 Engage hook of the bungee cord slightly tensioned into a chain link on the outer chain (⇒ *Figure 13 -B-* or ⇒ *Figure 14 -B-*).

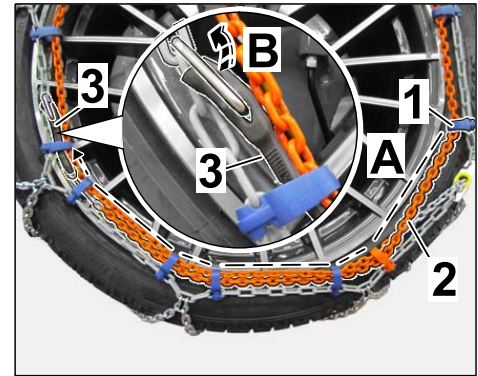


Figure 14

2.4 Check that the snow chain is installed correctly on the wheel (⇒ *Figure 15*)

- 1 – Area marked in red – tensioning chain
- 2 – Slot on locking plate
- 3 – Deflection roller/tensioning point

- The area marked in red on the tensioning chain must be pulled completely through the slot on the locking plate. The distance between the area marked in red and the slot on the locking plate (dimension X ⇒ *Figure 15 -X-*) can vary depending on the tire size.

- Position of deflection roller/tensioning points (inside of wheel ⇒ *Figure 15 -3-*): Must **NOT** be lying on the running surface of the tire or touching the road.

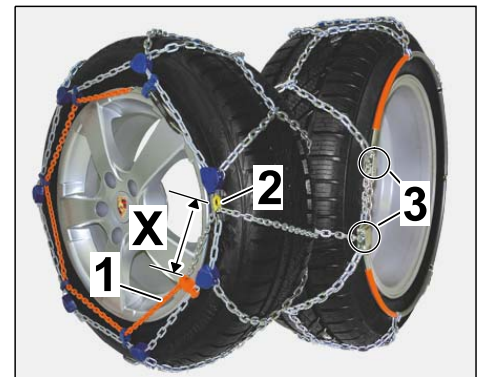


Figure 15

3 Remove snow chain

3.1 **ONLY** for vehicles with adaptive air suspension with levelling system and height adjustment including Porsche Active Suspension Management (PASM = I-no. 1BK):
Check chassis setup.

For removing the snow chain, set the chassis height to "High" if necessary (⇒ "Macan" Driver's Manual, section on "Porsche Active Suspension Management (PASM) with air suspension and levelling system"). Check chassis setup.

3.2 Remove snow and ice from around the wheel housings on the rear axle.

3.3 Loosen snow chain.

3.3.1 To make it easier to remove the snow chain: Drive/roll the vehicle so that the locking plate of the snow chain is at axle height (⇒ *Figure 16*).

- 1 – Locking plate
- 2 – Axle height

3.3.2 Disengage bungee cord with hook from the chain link.

3.3.3 Feed the tensioning chain through the steel eyelets as far as the locking plate (⇒ *Figure 16-1*).



Figure 16

3.3.4 Disengage the chain link at the locking plate and pull the tensioning chain through the locking plate (⇒ *Figure 17-C*).

- 1 – Tensioning chain
- 2 – Locking plate



Figure 17

3.3.5 Hold the chain net above the centre of the axle and pull it away from the wheel (⇒ *Figure 18-D*).

- 1 - Chain net
- 2 - End of spring steel clip

End of spring steel clip is rubbing slightly on the tire running surface (⇒ *Figure 18-E*).

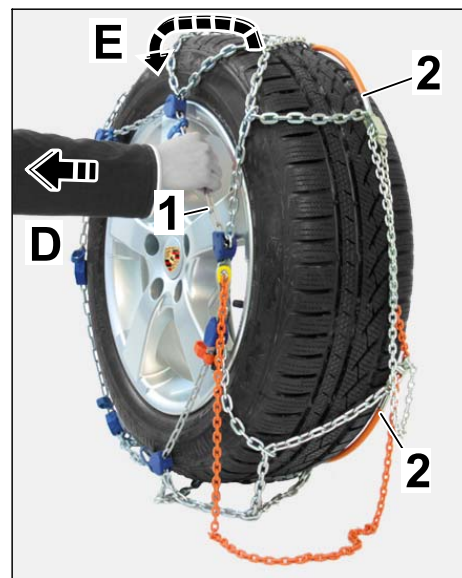


Figure 18

3.4 Pull snow chain off the wheel.

3.4.1 If the end of the spring steel clip is visible: Pull the ends of the spring steel clip apart as far as possible ⇒ *Figure 19-A*- and pull the snow chain off the wheel from above ⇒ *Figure 19-B*-.

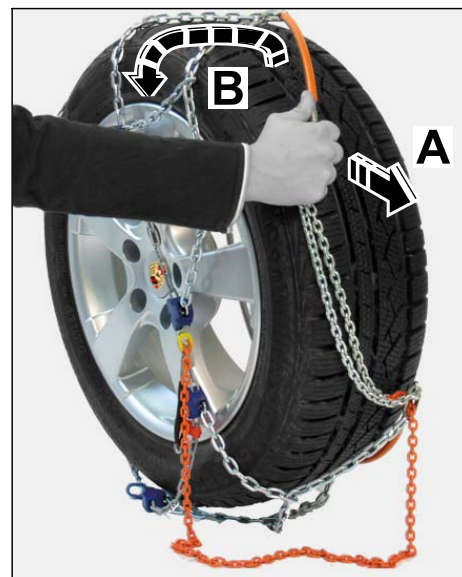


Figure 19

- 3.4.2 Set the snow chain down on the road (⇒ *Figure 20*).



Figure 20

NOTICE

Using snow chains

- **Damage to steel eyelet/locking plate**
- ⇒ **The steel eyelet/locking plate must be outside of the rolling area on the running surface of the tire.**

- 3.4.3 Carefully drive the vehicle off the snow chain (⇒ *Figure 20 -Arrows-*).

- 3.4.4 Shake out the snow chain and stow it away.

Maintenance: 4 Snow chain maintenance

- Wash snow chain in hot water immediately after use and dry it.
- Visually inspect the snow chain for signs of damage and adequate wire strength (chain links).
- Snow chains must **NOT** be oiled! Spray snow chains with commercially available anti-rust agent if necessary.
- After drying, stow dry snow chains back in the vehicle if necessary.
- Snow chains are made of high-quality steel, but are not rust-resistant. A small amount of rust will not impair the quality of the snow chains.

44 39 24 00: – Snow chains (2 ea.) installed on rear axle

Labor time: **50 TU**

Includes: Reading instructions.
Checking snow chains for damage before installing and installing snow chains.
Checking that snow chains are installed correctly and re-tensioning after driving 50 – 100 m/ 164 — 328 ft.

44 39 20 00: – Snow chains (2 ea.) removed/installed on rear axle

Labor time: **75 TU**

- Includes:
- Reading instructions.
 - Removing installed snow chains.
 - Checking snow chains for damage before installing and installing snow chains.
 - Checking that show chains are installed correctly and re-tensioning after driving 50 – 100 m.

Important Notice: Technical Bulletins issued by Porsche Cars North America, Inc. are intended only for use by professional automotive technicians who have attended Porsche service training courses. They are written to inform those technicians of conditions that may occur on some Porsche vehicles, or to provide information that could assist in the proper servicing of a vehicle. Porsche special tools may be necessary in order to perform certain operations identified in these bulletins. Use of tools and procedures other than those Porsche recommends in these bulletins may be detrimental to the safe operation of your vehicle, and may endanger the people working on it. Properly trained Porsche technicians have the equipment, tools, safety instructions, and know-how to do the job properly and safely. Part numbers listed in these bulletins are for reference only. The work procedures updated electronically in the Porsche PIWIS diagnostic and testing device take precedence and, in the event of a discrepancy, the work procedures in the PIWIS Tester are the ones that must be followed.

© 2020 Porsche Cars North America, Inc.