

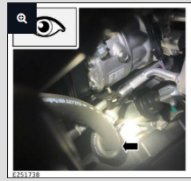


<p>Search this document...</p> <p>Hide document tree</p> <ul style="list-style-type: none"> 1: General Information 2: Chassis 3: Powertrain 4: Electrical <ul style="list-style-type: none"> 412: Climate Control System <ul style="list-style-type: none"> 412-00: Climate Control System - General Information <ul style="list-style-type: none"> Specification Diagnosis and Testing Auxiliary Climate Control Cabin Comfort Climate Control System Climate Control System General Procedures <ul style="list-style-type: none"> Air Conditioning Compressor Commissioning Air Conditioning System Recovery, Evacuation and Charging 	<p>During vehicle Pre Delivery Inspection: Air Conditioning not blowing cold air</p>	 <p>Low pressure in the system due to twisted or kinked air conditioning inlet pipe</p>	<p>NOTE:</p> <p>Make sure the system is depressurized before disconnecting any system pipe work or connections.</p> <ul style="list-style-type: none"> • If the pressure is low due to a twisted or kinked air conditioning inlet pipe, install a new air conditioning inlet pipe
<p>Customer returning the vehicle: Air Conditioning not blowing cold air</p>		<p>NOTE:</p> <p>Make sure the system is depressurized before disconnecting any system pipe work or connections.</p> <ul style="list-style-type: none"> • If the inlet pipe is found to be twisted/kinked replace the inlet pipe and compressor (the compressor may have become damaged due to oil starvation) 	

Check correct orientation of the compressor inlet pipe.

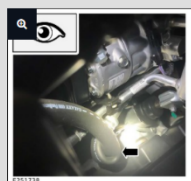

EPC Part Numbers = LR071863 – 3L V6 P LR061874 – 3L V6 D LR085580 – AJ20P

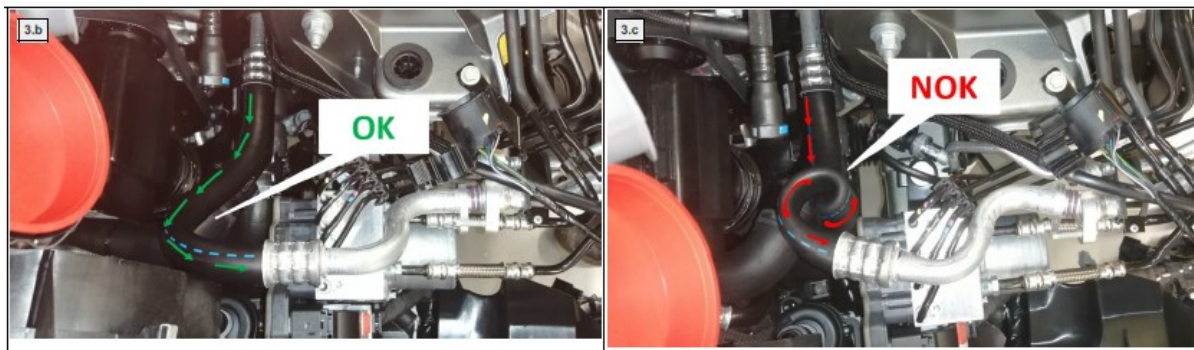