

SUBJECT: STARTER DOE	No:	TSB-20-13-002			
IGNITION KEY / C	IGNITION KEY / CHECK ENGINE LIGHT ILLUMINATES				
	DTC P0014				
CIRCULATE TO:		[ X ] TECHNICIAN			
[X] SERVICE ADVISOR	[X] SERVICE MANAGER	[X] WARRANTY PROCESSO	DR	[] SALES MANAGER	

## PURPOSE

This reflash is to correct two separate conditions that may exist with one reflash of the ECU software.

- 1. The starter does not engage after quickly turning the ignition key and may result in a no start condition. Turning the ignition key a second time allows the vehicle engine to start.
- The check engine light illuminates with no drivability concerns and has a DTC P0014 (Exhaust Variable Valve Timing System Target Error) stored. Because DTC P0014 does not create a fail-safe mode, the drivability of the vehicle is not affected.

This TSB instructs dealers to reprogram the Engine Control Module (ECU) with countermeasure software to correct the issue *for any affected vehicles that come in for service (with customer approval) and any in dealer inventory.* 

## AFFECTED VEHICLES

2018 - 2020 Eclipse Cross

## REPAIR PROCEDURE

- Confirm your MUT-III SE is updated with the latest reprogramming database.
- Write down all of the electrical device settings such as A/C and radio before reprogramming. The settings should be restored after reprogramming.
- Turn off all electrical devices to minimize the vehicle's electrical load. Also use an external power source to ensure that the vehicle battery maintains the specified voltage during reprogramming.
- Make sure the USB cable and MUT-III SE main harness are not damaged.
- Connect the MUT-III SE to an AC power source to prevent internal battery discharge.
- Stay away from the under hood area during reprogramming. If the connection between the engine ECU and ETACS is lost, the cooling fan operates as fail-safe.
   **NOTE:** If an affected vehicle has a Malfunction Indicator Lamp (MIL) illuminated before reprogramming, and DTCs are listed in the ECU memory, diagnose and repair those DTCs per the service manual <u>before</u> reprogramming. DO NOT reprogram the ECU until the reason(s) for other DTCs being set has been corrected.

## IMPORTANT

To maximize customer satisfaction with the quality of their vehicle, affected new or used inventory vehicles should be remedied before the vehicle is delivered.

Copyright 2020, Mitsubishi Motors North America, Inc.

Continued

Page 1 of 11

The information contained in this bulletin is subject to change. For the latest version of this document, go to the Mitsubishi Dealer Link, MEDIC, or the Mitsubishi Service Information website (*www.mitsubishitechinfo.com*). (4999)

Page 2 of 11 TSB-20-13-002

# EQUIPMENT

The following equipment is needed to reprogram the ECU:

- VCI (Vehicle Communication Interface) or VCI Lite MB991824 or MB992744
- MEDIC Laptop/Tablet with A/C power adapter 520924, or FZG1MK2.
- MUT III Main Harness "A" (blue connector at the DLC end) MB991910 or MB992745.
- USB 2.0 Cable MB991827 or MB992747.
- MEDIC 3.5/4 update at **661** or higher.
- For Standalone MUT III units, MUT3-SE Reprogramming Database **N201001** or higher.

# ECU REPROGRAMMING CHART

Model	ECU Part	Data Number	Software Part Number		
WOUEI	Number	Data Number	Previous	New	
			1860D11605/B42529		
			1860D11603/B42528		
18MY Eclipse Cross	1860D116	1862D147	1860D11602/B42527	1860D11605/B42531	
			1860D11601/B42526		
			1860D11600/B42525		
			1860D40202/B49806		
19MY Eclipse Cross	1860D402	1862D148	1860D40201/B49805	1860D40203/B49808	
			1860D40200/B49804		
20MY Eclipse Cross	1860D573	1862D149	1860D57300/B56105	1860D57301/B56107	

# **REPAIR PROCEDURE**

#### SOFTWARE/MEDIC VERSION VERIFICATION

1. Verify that the ECU has not already been updated to the latest S/W number in the table above. If the Engine ECU is at the latest level, reprogramming is not necessary.

**NOTE:** Reprogramming the Engine ECU with the latest database (e.g., **N201001**) includes all past and current reprogramming for TSBs of affected vehicles. It is not necessary to reprogram the ECU for each previous TSB.



# For MEDIC 3.5/4 users only: (MUT-III SE STV users go to step 5)

2. Verify the MEDIC 3.5/4 is at version 3.5 and at update **661** or higher.

If your **MEDIC 3.5/4 update is at least 661**, continue with the Reprogramming Procedure. If your **MEDIC 3.5/4 update is below 661**, update your MEDIC as follows.

3. Select the MEDIC 3.5/4 Admin tab and click on "Updates."



 If the MEDIC update screen advises updates are available, click the "Begin" button. After all updates are complete, GO TO THE REPROGRAMMING PROCEDURE.





- STANDALONE MUT-III SE SCAN TOOL VIEWER (STV) ONLY: (MEDIC 3.5 USERS - GO TO THE REPROGRAMMING PROCEDURE). Verify that your MUT3-SE has the most current version of the reprogramming database: From the MUT3-SE Main Page:
- a. Click "STV."

b. Click the "ECU Reprogramming" button.

c. Click "SDB Data List, select the reprogramming data system and press the OK button"

Reprogramming			4
ECU Reprogramming(SOB)	SOB Data List	ECU Reprogramming X-Line	
Data Selection K-Line	Data List X-Line		
	U		





- d. Confirm that the database number displayed in the upper right above the chart is **N201001 or higher** 
  - If the database number displayed on your MUT3-SE is **N201001** or greater, continue to the next section.
  - If the reprogramming database number displayed on your MUT3-SE is lower than N201001, then the MUT3-SE database needs to be updated.
- e. Once database number is confirmed, hit the Home Button to go back to the System Select screen.

#### **REPROGRAMMING PROCEDURE**

#### **CAUTION** To ensure that the vehicle battery maintains 12V during the procedure, hookup a battery charger to the vehicle during the procedure.

#### NOTE: VCI Stand-alone reprogramming is not available for this procedure. The laptop/tablet and the VCI must remain connected for the entire procedure.

1. Connect the equipment as follows:

**NOTE:** VCI Lite and MEDIC 4.0 Toughpad shown for illustration purposes only.



- Turn the MEDIC PC/tablet on. If the battery indicator in the lower right hand corner of the screen does not show a full charge, it is recommended that either the battery be charged prior to beginning, or be used with the A/C power adaptor connected.
- Connect the USB cable to the VCI/VCI Lite. When the laptop/tablet displays the MUT-III SE main screen, connect the USB cable to the device.
- Connect the MUT-III SE main harness with the blue DLC connection to the VCI/VCI Lite. Connect the blue connection of the MUT-III SE main harness to the vehicle's data link connector.
- For VCI only (p/n MB991824): Turn the VCI power switch ON. Verify that the indicator lamp in the upper right corner of the screen is green.

# 

DO NOT DISTURB THE HARNESS CABLES OR CONNECTIONS DURING THE REPROGRAMMING PROCESS AS IT COULD CAUSE THE CONTROL UNIT TO LOSE DATA. IF THE USB CABLE IS DISCONNECTED DURING THIS PROCEDURE, A WARNING MESSAGE WILL DISPLAY.

2. Turn the ignition switch to the "ON" position.



3. Using MEDIC, from the main page, click the "MUT3-SE" icon at the top center of the screen to open MUT-III SE. Click the STV button.



 The System Select screen opens and populates with some basic information from the vehicle. Look at the label on the passenger side B pillar to identify the appropriate class. (See B pillar label below; class is labeled as "model"). If necessary, select the correct class from the drop-down list.



 Verify that the ECU has not already been updated to the latest S/W number shown in the "ECU Reprogramming Chart" in this TSB. If the ECU is at the latest level, reprogramming is not necessary.



a. Select "MFI" from the System List, then click on the check mark at the bottom of the screen.

Friday and the West State of the State		Par Parts
Diagnostic Trouble Code	Data List	Drive Recorder
Special Function	Readness Test	Actuator Test
Coding L	Ś	
ct function.		
netect MFI Y St	ecial Function	
ECU Information	Provisional DTCs	Evap Leak Monitor
	Mode \$05	In-use Performance Tracking
Starter counter writing Mode \$DA	Stanter counter initialization	Timing chain maintenance
Stater courter witting Mode SDA	Barter counter initialization	Tenny chain maritenance
State counter enting	Barter counter initialization	Teng dain nurtenance
State counter entrop Node SGA	Barter Courter initialization	Terring chain maintenance
Attactors  Ct functions  Ct fu	Bitartier counter initialization	Treng dhan mantenance
Attactors	Bitariter counter initialization Bitariter Counter initialization Bitariter Counter initialization COUT CAN ECCU Information CCU Information CCU Information	Treng dhan martenance
there counter enting : Node SOA ct function mation noded MP 2 Rom	Reafer Counter initialization  Reof CAN  ECU Information  CCU Information  Value  Value	Trang dhain maintenance
Stater counter writing Mode SGA cl function mation 10014 GK1WX FLV2LSM 2020 model MFI 2 Rom ECU Orign Statelings	Barter Counter initialization  Barter Counter initialization  COUNT CAN  COUNT CAN  COUNT INformation  COUNT Information  COUNT Information  Value  D4  as	Trang dhain maintenance
Bater counter writing Mode SGA charaction anation 10044 (SK1WX IFUZLAN 2000) redect MFI s Born ECU Drigon Suppler ID ECU Drigon	COU Information CCU Information CCU Information Using CCU Informa	Treng dhan martenance
Mode SDA Mode SDA ct function.	COUT CAN  COUT CAN  COUT CAN  COUT CAN  COUT INformation  Value  D4  S5  O0  1  1  1  1  1  1  1  1  1  1  1  1  1	Treng chain maintenance
Mode SDA Mode SDA thunction thunction thunction Mode SDA thunction thunction State Biom ECU Origin State Paire ECU Diago Ver. Hardware Version	Bitariter counter initialization  Bitariter counter initialization  Bitariter counter initialization  COUT CAN  ECU Information  ECU Information  CUU  A  B  C  D  D  D  D  D  D  D  D  D  D  D  D	Trang dhain maintenance
there counter writing Mode SDA there counter writing there is a state of the source	Blanker Counter initialization  Blanker Counter initialization  COU Information  CCU Information  CCU Information  Value  D4  B5 00 01 01 000 B59107	Treng chain maintenance
Abole SGA	Barter Counter initialization         0001 CAN           Special Function         ECU Information           CCU Information         1           D4         25           00         01           01         0000           856107         168005673	Trang dhain maintenance
Mode SOA Mode SOA I function: I function: I function: I function I	Bitariter counter initialization         0001 CAN           Special Function         ECU Information           CCU Information         Value           04         85           00         01           01         0000           B5:00073         1	Treng dhan mantenance
Mode SDA Mode SDA thurction thurctio	Bitartier counter initialization         0001 EAN           Special Function         ECU Information           CCU Information         Value           04         85           00         01           010         01           0000         859107           186005733         1           1         1960057301	Trong chain maintenance

b. Select "Special Function."

c. Select "ECU Information."

d. If the Software Part Number listed is not at the latest level (shown in the "ECU Reprogramming Chart" in this TSB), proceed with the next step. Click the Home button to return to the System Select screen.

If the Software Part Number **is** at the latest level, then reprogramming is not necessary.

6. Before reprogramming, perform an "Erase and Read All DTCs" to clear any DTCs that may have set.



a. On the System Select screen click the "ALL DTC" button.

	Read all DTCs	Er	ase and Rea	d all DTCs	
			[	$\overline{}$	
			l		
				V	
ct functio	n.	_	_		
<b>P</b>	Ê				
ABDICS	Erase and Read all DTCs				
	System List				
Select	System Name	Results	1 1	_	
1	MFI	AILDTCs			icle Information
1	ELC-AT/CVT/TC-SST	?) All DTCs			LIPSE CROSS
	ECPS/4WS	~			18
	SDS AID BAG	Are you sur	67		INAIPO2628
	Air Conditioner	1			
	ETACS				
1	TPMS	× ^		h in the	
Select che	ecking systems.				
		-	-		
<b></b>	1			$\checkmark$	
ALDTCS	Erase and Read all DTCs				
	System List				
Select	System Name	Results			
1	MFI		4		Vehicle Information
1	ELC-AT/CVT/TC-SST			Model Name	ECLIPSE CROSS
1	ECPS/4WS			Model Year	2018
1	ABS/ASC/ASTC/WSS	_	-	Model Code	GK1WXTPUZL2M
V	SRS-AIR BAG		8		
	Ar Conditioner	-	5		
	TPMS	-		_	
12.1			10		
Select chi	ecking systems.		- 7	14	
				-	

b. Select "Erase and Read All DTCs."

c. A window will pop up asking you to confirm DTC erasing. Click the check mark in the dialog box for DTC erasing and reading to begin.

- d. The "System List" on the left side of the screen will have all selections checked. <u>Do not</u> change these selections.
- e. Click the check mark to continue.



- When DTC erasing is completed, click the check mark in the pop-up message that reads "All erasing and checks are completed."
  - a. If any DTCs return after erasing is completed, click the check mark to clear the window. Diagnose and repair per the Service Manual.



4.1

Erase and Read all DTCs





b. If DTCs do not return, click the check mark to clear the window, then click the Home icon in the lower left to return to the System Select menu.

- 8. Reprogram the ECU following the steps below.
  - a. On the System Select page, click on the Reprogram button.

b. Select "ECU Reprogramming (SDB)."

c. Select "MFI" in the System List, then click the check mark.



Conversional and the second se

- Verify that the correct data file listed in the table matches the one in the "ECU Reprogramming Chart."
- e. Click the check mark at the bottom of the page to initiate reprogramming.
- f. Click the check mark in the "Check reprogramming data" dialog box.

- g. Once the reprogramming is initiated, the screen shown will indicate the reprogramming progress.
- NOTE: Do NOT disturb the cables or turn off the ignition during reprogramming.
- h. Once reprogramming is completed, click the check mark in the "Completed" dialog box.

Data No. New HW Part No. New SW Part No. / Pro	No.	Previous SW Pad No /Ver	Contents	
18620870 18600116 1860011603	16600116	1560011601	18 ECLIPBE CROSS 4 CVT 2 Countermeasure for MII, illumination with DTCs P0065/P061A	B40 ures
		_		•
				-
ــــــــــــــــــــــــــــــــــــــ	7			
ہے ۱				
MP1 Special Function CLU Information			1	
MPI Special Function ECU Mittin ECU Information Rem		slue		
MR Special Function CU Uniture ECU Information ECU Origin Q4	matton =	alue	<u> </u>	
MR Special Function CLU Information Term Term Term CLU Origin OLU Origin OLU Origin OLU Origin OLU Origin OLU Origin OLU Origin OLU OLU OLU OLU OLU OLU OLU OLU OLU OLU	mason = 1	alue		
Am Special Function ECU Internation ECU Internation Rem 04 Applent D 65 ECU ID 00	mason =	alue		
MPI Special Function ECU Information Term ECU Information Term 04 Applier ID 65 ECU ID 00 30 Diag Ver. 01	madon =	alue		
MPs         Special Function         ECU lettermation           Item         ECU lettermation         ECU lettermation           Item         65         ECU ID         05           ECU ID         00         J3         Jacquere 01           Stora Viersion         0000         Hermitian         Hermitian	mation T	alue		
LAT Special Function CECU Internation ECU Internation E	mation I	alue		
MRI         Special Function         ECU Internation           Bern         ECU Internation         ECU Internation           Bern         ECU Internation         ECU Internation           Bern         0         Statement           Bern         0         Statement           Bern         00         Statement           Bern         00         Statement           Bern         BI228         Statement           Bern Number         18600116         Statement	mason •	alue		
MPI Special Function ECU Internet ECU Inter	maton ×	alue _		
MP1         Special Function         ECU Information           Idem         IECU Filtermation           Idem         Idemation           Idem         IE	madon I	alue		

- i. Verify the correct information is listed in the table. Click the check mark at the bottom of the page, then click the Home button to return to the System Select screen.
- Perform an "Erase and Read All DTCs" again to clear any DTCs that may have set. For instructions, refer to steps 6 and 7 in this TSB.
- 10. Confirm the software version has been updated. **For instructions, refer to step 5 in this TSB.**

Confirm "Software Part Number" now matches the NEW one shown in the **"ECU Reprogramming Chart"** in this TSB.

- 11. Turn off the ignition switch and disconnect the MUT-III SE. Turn off and disconnect battery charger.
- 12. Using a ball-point pen, enter the appropriate ECU part number, Software Part Number (ROM ID#), this Technical Service Bulletin number, your dealer code, and the current date on the Engine Compartment/Control Module Label (p/n MSSF024G00). The Vendor Code is not applicable. The label is available from your facing PDC.

MITSUBISHI	AUTHORIZED MODIFICATIONS	These Modifications Have Poun Approved as Appropriate by EPA and Mod	AUTHORIZED MODIFICATIONS
THE FOLL	OWING MODIFIC	CATIONS HAV B. EN M. JE:	
PART NUMBER 1860DXXX	VENDOR N/A	A NG 1860C2XXXX	P/N Vndr Code
TSB		A/T	TSB
ENG TSB-20-13-XXX A/T Engine Compartment Lab	S	DEALER CODE         DATE           99332         06/25/20	Dir C de Date Control Module Label

13. Test drive the vehicle to confirm proper operation.

## WARRANTY INFORMATION

If an affected vehicle is reported with the described condition and within the warranty period, diagnose the condition, repair as described in this bulletin and submit a WSC Form A/Claim Type W, with the appropriate Labor Operation Code below:

Operation	Labor Op	Nature	Cause	Time
	Code	Code	Code	Allowance
Reprogramming	138501 DL	02A	605	0.3 hours

In case of inventory modification:

Operation	Labor Op Code	Nature Code	Cause Code	Time Allowance
Reprogramming	B00467 10	02A	605	0.3 hours
Miscellaneous Cost	B00467 90	02A	605	-