

The LP regulator will not adjust. The furnace keeps flaming out. Removed LP regulator cover. Tech tried adjusting LP regulator but could not get it adjusted below 15 inches. R&R regulator. Drop tested. Passed. Fired furnace at 13 inches.

1.0 approved maximum. Also, the LP regulator needs to be at 11WC