

FACT SHEET

RIDE COMMAND



Keyboard selection and press-hold functionality for more characters:

Before searching for your destination, select the language that you prefer under the settings menu General → Language (will require reboot).

If the desired character has an accent, tilde, or other marking and is not already on the keyboard, press and hold on the letter to select other variations.

Address entry format:

The following are tips to ensure your destination is searched correctly.

1. Start with the address number, followed by the street, city, and country (if location is in another country).
Here is an example:
55 Boulevard Beaumarchais Paris France
- This may vary depending on the location, for example, in some European destinations the house number may come after the street name.
2. For some destinations Post code (NPA/CAP/PLZ/PSC) may be helpful.
3. If you are searching for a location that is in a different country, enter the country name in English. The street name and city should remain in the native language.
4. It is possible to route to a city center, but you must search for both the city and country.

Alternative for Navigation, dropping a pin:

Zoom out and pan to location on the map. Press and hold on map to drop a pin.

Disconnect Bluetooth® phone before searching:

To ensure the best search functionality, it is strongly recommended to disconnect your Ride Command system's Bluetooth® connection to your mobile device before entering a navigation search. Once the search is complete, feel free to reconnect your Bluetooth® device.

For the latest information about your Ride Command® display, including updates, tutorials, and more, please visit <https://ridecommand.indianmotorcycle.com>

