

15-029: Power Steering Reservoir Cap Separation

6/2/2021

[Edit](#) [Clone](#)

15-029

Section

Steering - 15

Subject

Power Steering Reservoir Cap Separation - Cap May Separate During Removal

Date

6/1/2021

Whats New Abstract

Information Only – Power steering reservoir cap may separate during removal when it is pulled upward instead of twisted.

Condition

The power steering reservoir cap may separate into two pieces during removal.

Chassis Affected

All chassis built from 3/22/2021 through current production and equipped with 2 qt. composite power steering reservoir J86-1070.

Action

Information Only

The power steering reservoir cap may separate during removal when it is pulled instead of twisted off as intended. Reassemble the power steering reservoir cap instead of replacing it.

Parts

Parts are available from PACCAR Parts.

Quantity	Part Number	Description
1	J22-1009	Power Steering Reservoir (PSR) Cap

Procedure

1. Press the separated portion of the power steering reservoir cap back into the base of the cap that remained attached to the power steering reservoir.
2. Ensure that the top portion of the cap is firmly attached to the base of the cap.
3. Twist the power steering reservoir cap to remove it from the reservoir.



CAUTION

Do not use pliers to remove the power steering reservoir (PSR) cap base, as this may result in damage to the cap.

