


X-LIFT MANUAL

Standard Operating instructions.

The roof can be operated either with the jack's remote control or with the rocker switch (if installed as an option).

Operating with the remote control. Press the top center button. If the light next to the button is RED, you are ready to operate the Roof Lift. If the light is GREEN... Press and hold the top center button (about 5 seconds) until the light changes to RED.

The fuses for the Lift Actuators are located under the clear door pictured below.

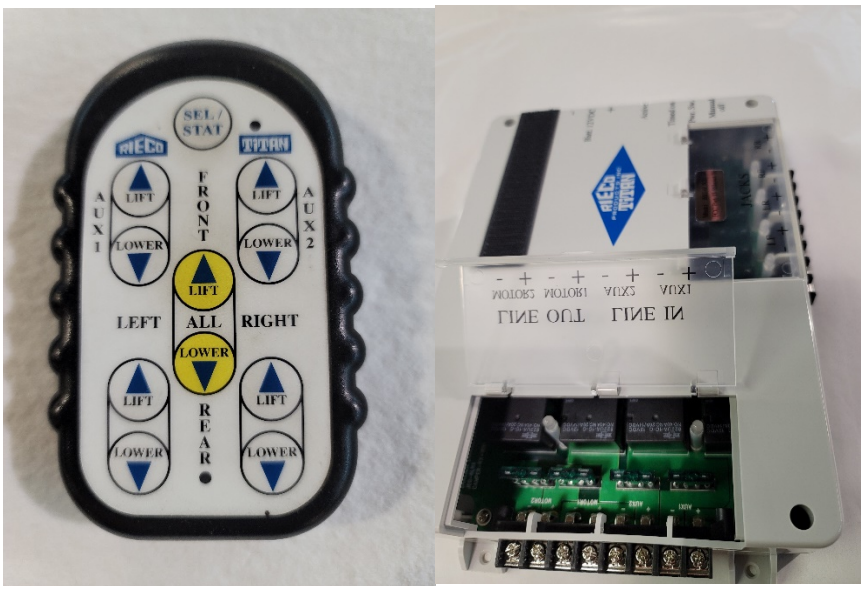

To manually operate the lift arms

1. Remove the protective plastic cover by removing two screws.
2. Insert the flexible manual drive tool into a cordless drill.
3. Insert the flexible shaft into the end of the motor as shown in picture.
 - Run the drill in the CW direction to raise the roof.
 - Run the drill in the CCW direction to lower the roof,
 -

