

## Android Display Audio Screen Goes Blank During LaneWatch™ Camera Aiming

### AFFECTED VEHICLES

2016 Pilot with Android Display Audio

When LaneWatch camera aiming is complete, the Android Display Audio (ADA) screen should switch back to the LaneWatch camera view. However, due to a bug in the audio/audio-navigation unit, the screen may go blank and the unit may lock up instead.

If that happens, here's a work-around so you can check if the camera aiming is complete.

1. Turn the ignition to OFF, then back to ON.
2. Press the LaneWatch button on the end of the turn signal lever and watch the ADA screen.
  - If you see **Aiming Failed**, check your aiming target setup and repeat the aiming procedure.
  - If you see the LaneWatch camera view, go to step 3.
3. Turn off the LaneWatch camera and enter the Audio Diagnostic Mode. Select **Detail Information and Settings**, **Functional Setup**, and **LaneWatch**.
4. Check the **Aiming** line on the **LaneWatch** screen.



- If you see **OK**, camera aiming is complete.
- If you see **NG**, check your aiming target setup and repeat the aiming procedure.