



Grounding Bus Bar (Cloverleaf, Grounding Star, Four Point Ground Stud) On Frame Rail; Inspection To Be Performed For Power And Ground, Data Link DTCs - US10 And Newer Emissions, Model Year 2011 And Newer



> Internal Content

The ground star is located on the driver's side frame rail near the battery box and fuel tank. If the ground becomes loose or gets protective coating, paint, dirt, or corrosion in between the terminals, the ground star needs to be removed, cleaned, and the protective coating needs to be reapplied.





Tags

volvo

mack

k12246971

cummins

Related links and attachments

No links or attachments available



Feedback

[Give feedback](#)

to help improve the content of this article