



(Back Office Only) How To Fully Disable Automatic Traction Control (ATC) , Traction Control System (TCS) With The Use Of The Dash Switch



If this occurs Bendix has added the ability to make the mud / snow switch fully disable the ATC / TCS.

Please follow the steps below:

1. Using Bendix A Com version 6.11 connect to the ABS ecu.
2. Click on controller configuration / then click on modify.
3. In this screen you can select what the mud / snow switch function will be. Select the ATC disable and select the write tab.
4. Confirm that the ATC function has been fully disabled before returning the truck to the customer.



Tags

k82435297 us07 us10 us10+obd13 us14
us14+obd15 us14+obd16 us17 vnm vnx
vah leu lr mru - terrapro chu - pinnacle
cxu - pinnacle gu - granite td - titan volvo
mack



[Give feedback](#)

to help improve the content of this article