


2016 CX-3


MANUAL DRIVER'S SEAT MOVES DOWN BY ITSELF

Some customers may complain that the manual driver's seat gradually moves down and needs re-adjustment of the height position. This concern may be caused by the customer's thigh touching and pushing down the height adjustment lever when getting in or out of the vehicle.

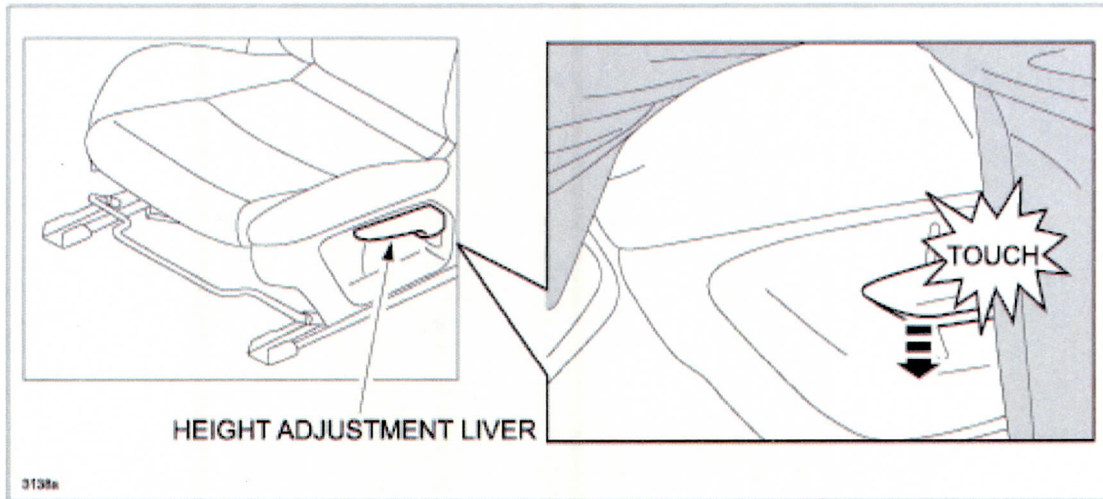

Cause

1. The seat is positioned near the side sill. When getting in and out of the vehicle, the driver's leg may push down the seat height adjustment lever, causing the seat to move downward.
2. Operational force of the seat height adjustment lever is low and free play of the lever is short; so seat downward movement is likely to happen with light contact.

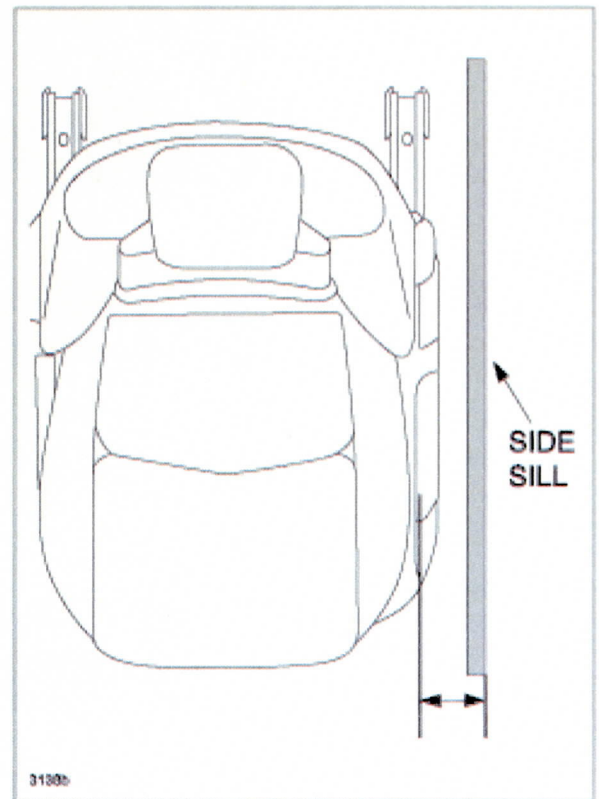

When you receive a customer complaint for this concern, explain that the seat may move down by leg touching the seat adjustment lever when getting in or out of the vehicle. Confirm that the seat position is appropriate before driving.

An editorial board comprised of MNAO service staff members generates, collects, and verifies information for this publication. © 2016 Mazda Motor of America, Inc.

To contribute repair tip ideas, send an e-mail to mtips@mazdausa.com or fax to (949) 442-6599. If we select your repair tip, you will receive 50 Reward Performance by Mazda (RPM) points for your efforts. All contributions become property of MNAO, which assumes permission to publish them without further consideration.

THE UNIVERSITY OF MICHIGAN LIBRARY
ANN ARBOR, MICHIGAN 48106-1000
TEL: (313) 763-7000 FAX: (313) 763-7001
WWW: WWW.LIBRARY.UMICH.EDU



UNIVERSITY MICROFILMS INTERNATIONAL
SERIALS ACQUISITION
300 NORTH ZEEB ROAD
ANN ARBOR MI 48106-1500
TEL: (313) 763-0700 FAX: (313) 763-0701
WWW: WWW.UMI.COM

1998

UNIVERSITY MICROFILMS INTERNATIONAL
SERIALS ACQUISITION
300 NORTH ZEEB ROAD
ANN ARBOR MI 48106-1500
TEL: (313) 763-0700 FAX: (313) 763-0701
WWW: WWW.UMI.COM