



# On-Highway Vehicles With 2018 Interior Update - Enabling Traffic Sign Recognition (TSR) For Bendix 1.0



> Internal Content

## IMPORTANT

The instructions below only apply to ACOM® versions previous to ACom® PRO™. An eService case should be open if TSR is being enabled utilizing PRO.

**NOTE: There will be a charge for the instrument cluster software update**


To enable Traffic Sign Recognition:

1. Obtain a Fleet Registry Key from Bendix. Bendix technical support can be reached at **800.247.2725**.

- **NOTE:** The Key should be obtained **before** any changes are made with ACOM®.


2. Connect to the vehicle and launch ACOM®.

3. From the list of ECUs, select the FLC20 module. Click **Start with ECU**.

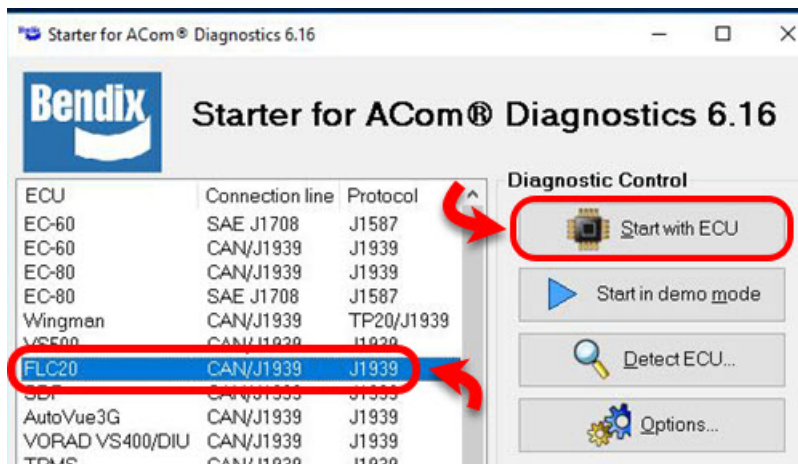


4. Once the Status page opens, click **Config**.




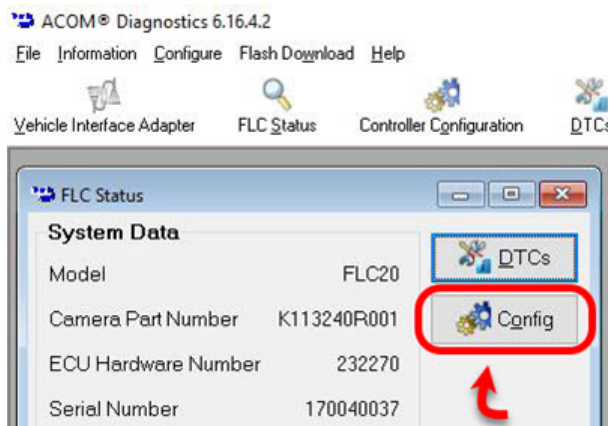


5. Click the **TSR** tab at the top of the Controller Configuration window. The Controller Configuration window will open.

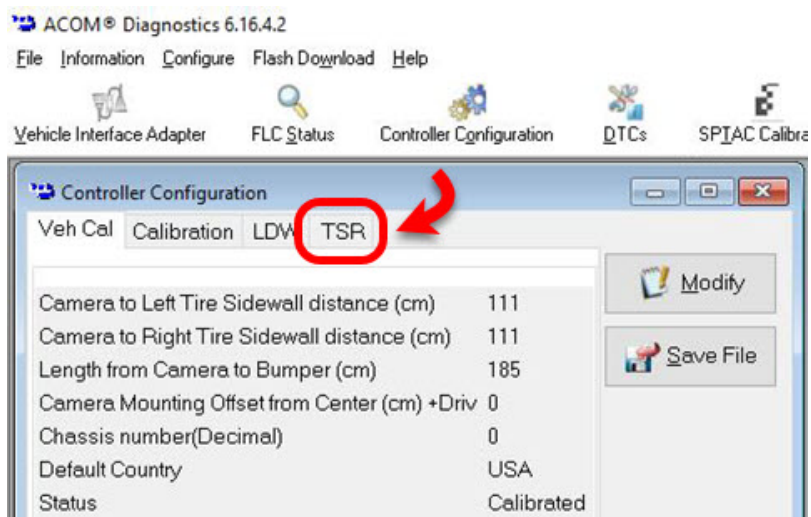

6. Traffic Sign Recognition will appear in Disabled status. Click the **Modify** button. The Change Configuration window will open.

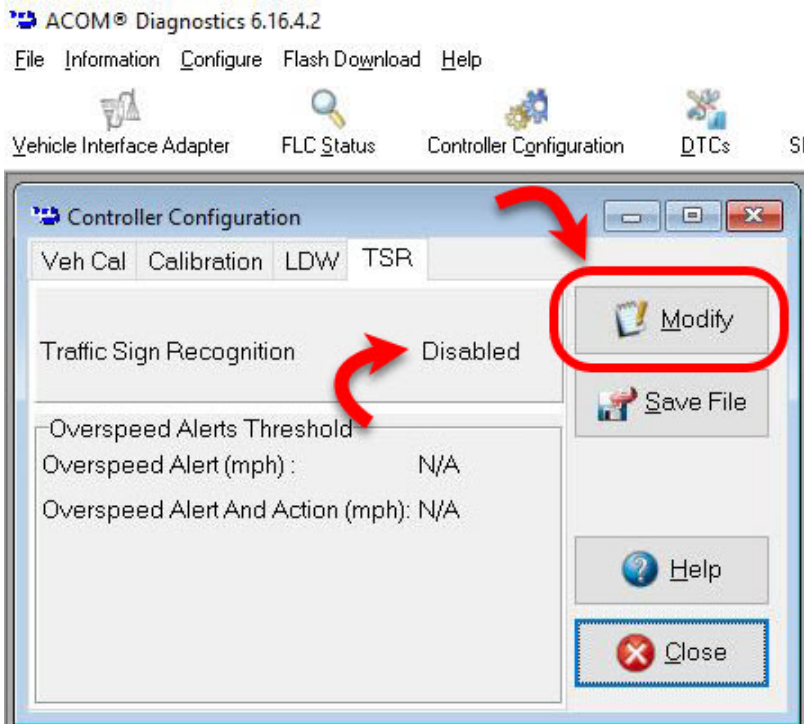


7. Click the arrow for the dropdown box in the Traffic Sign Recognition field.

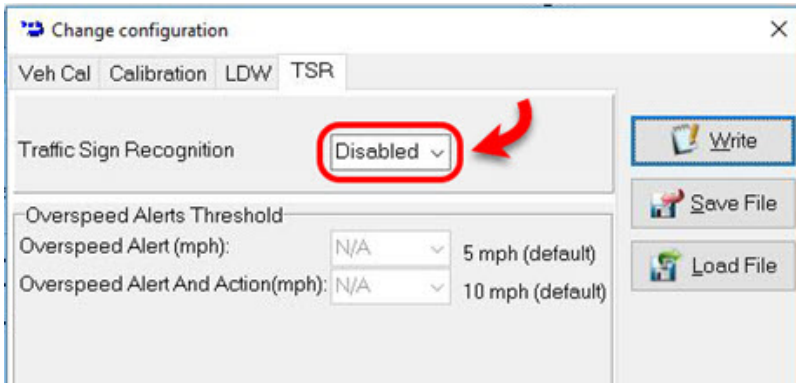


8. Highlight Enabled and click to select.




9. Click the Write button.

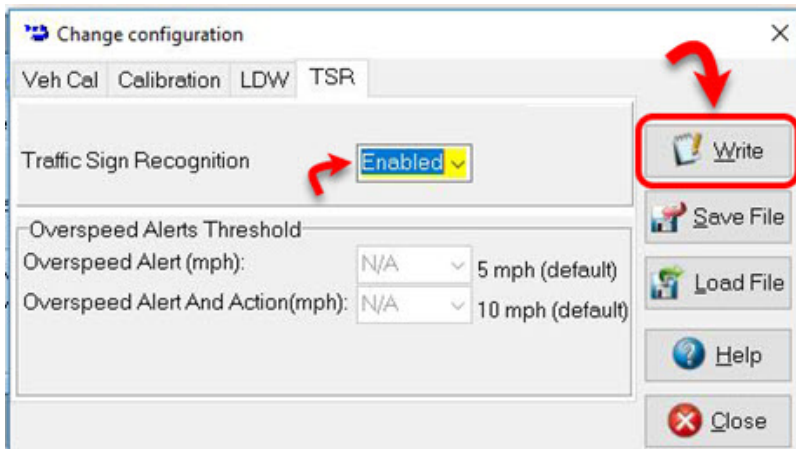

10. When the change is complete, a notification window will open. Click **OK**.

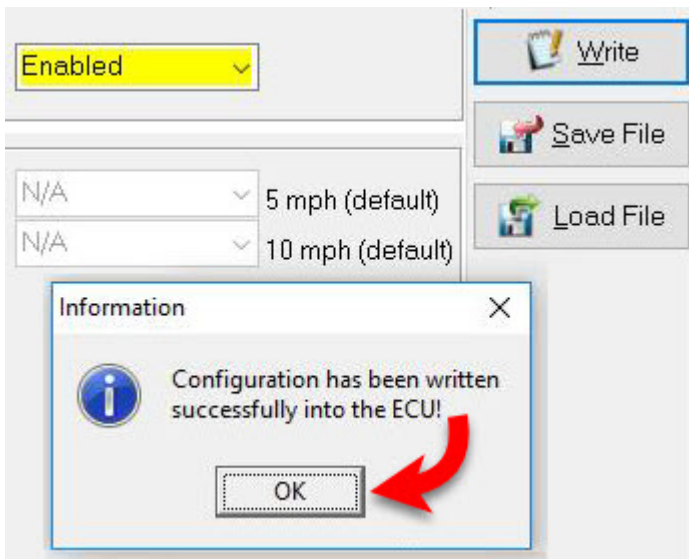

11. **ACOM** will return to the Controller Configuration window. Make sure the Traffic Sign Recognition field now shows **Enabled**.

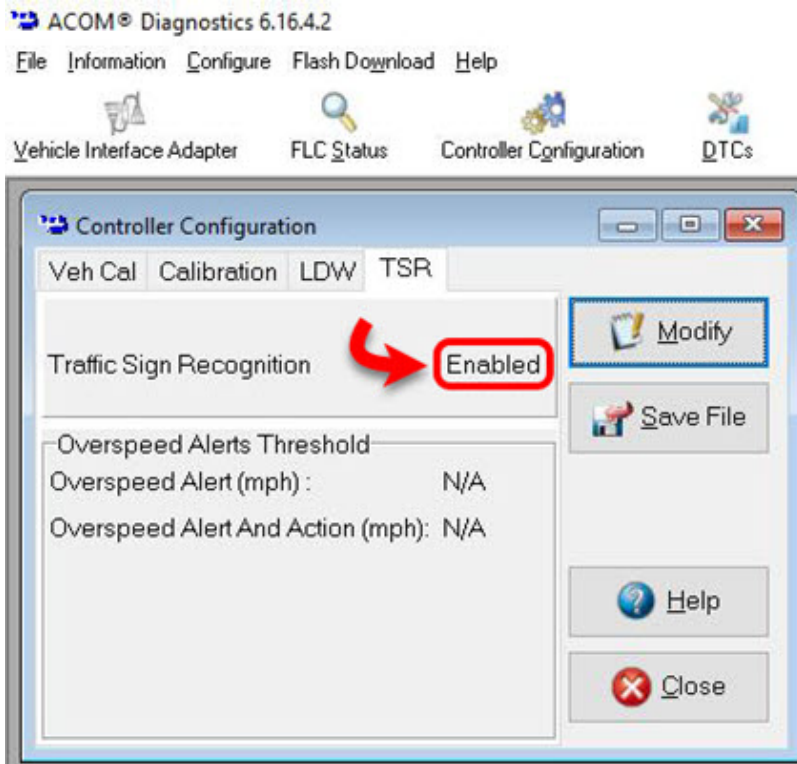

12. Launch Premium Tech Tool and connect to the vehicle.

13. Run Operation [1700-08-03-39 Program Electronic Control Unit](#), located under the Program tab.

14. Select [Information display \(MID 140\)](#).

15. Make sure [Update Electronic Control Unit with latest software](#) is selected. Click **Program** in the lower right-hand corner.

16. When programming completes, click **Exit** in the lower right-hand corner.

17. Run Operation [1700-22-03-06 Accessory Kit](#).

tsr traffic sign recognition bendix  
 the the number box, enter 85.

speed limit sign recognition sbn17-007 k53654520

**Note: there will be a charge for this software.**

mack volvo

19. Click **Program** in the lower right-hand corner. Allow the programming operation to complete.



Click **Exit**. Disconnect from the vehicle.

## Related links and attachments

No links or attachments available



## Feedback

[Give feedback](#)

to help improve the content of this article