

 **HYUNDAI**
Technical Service Bulletin

GROUP CAMPAIGN	NUMBER 22-01-013H
DATE FEBRUARY, 2022	MODEL(S) GENESIS (BH) EQUUS (VI)

SUBJECT: GENESIS (BH) AND EQUUS (VI) BRAKE RESERVOIR CAP AND OWNER'S MANUAL REVISION (SERVICE CAMPAIGN 978)

*** IMPORTANT**

***** Retail Vehicles Only *****

Dealers must perform this Service Campaign whenever an affected vehicle is in the shop for any maintenance or repair.

When a vehicle arrives at the Service Department, access the "Vehicle Information" screen via WEBDCS to identify open Campaigns.



Description: The brake fluid specifications labeled on the master cylinder reservoir cap and in the vehicle owner's manual require revision to indicate DOT 4 brake fluid only. This bulletin describes the procedure to replace the master cylinder reservoir cap and apply a sticker to the owner's manual with the revised brake fluid specification.



Applicable Vehicles:

Certain 2009-2012MY Genesis (BH) vehicles produced from 04/30/2008 to 03/28/2012
Certain 2011-2012MY Equus (VI) vehicles produced from 07/13/2010 to 03/24/2012

Parts Information:

Part Information		Remarks																																								
 <p>Original Brake Reservoir Cap</p>	 <p>Revised Brake Reservoir Cap</p>	<p>Original cap states to use either DOT 3 or DOT 4 brake fluid.</p> <p>Revised cap states to use DOT 4 brake fluid only.</p> <p>P/N 58531-P2100QQH (KIT includes cap and stickers)</p>																																								
<p>Warning : Brake fluid</p> <p>Use Only DOT-4 specification when adding or changing brake fluid.</p> <p>✦ Correction of existing contents of owner's manual</p> <table border="1"> <thead> <tr> <th>Model</th> <th>Page</th> <th>Existing Texts</th> <th>Remark</th> </tr> </thead> <tbody> <tr> <td rowspan="3">BH Genesis</td> <td>Maintenance 7-13p or 7-14p</td> <td>Brake fluid Check brake fluid level in the brake fluid reservoir. The level should be between "MIN" and "MAX" marks on the side of the reservoir. Use only hydraulic brake fluid conforming to DOT 3 or DOT 4 specification. Never mix different types of fluid.</td> <td rowspan="3">Change 'DOT 3 or DOT 4' to 'DOT 4'</td> </tr> <tr> <td rowspan="2">Recommended Lubricants and Capacities 8-4p or 8-5p</td> <td> <table border="1"> <thead> <tr> <th>Lubricant</th> <th>Volume</th> <th>Classification</th> </tr> </thead> <tbody> <tr> <td>Coolant 3.8L</td> <td>8.88 US qt. (8.4 l)</td> <td>Mixture of antifreeze and water (Ethylene glycol base coolant for aluminum radiator)</td> </tr> <tr> <td>Coolant 5.0L</td> <td>12.79 US qt. (12.1 l)</td> <td></td> </tr> </tbody> </table> </td> </tr> <tr> <td>Brake fluid</td> <td>0.7-0.8 US qt. (0.7-0.8 l)</td> <td>FMVSS116 DOT-3 or DOT-4</td> </tr> <tr> <td rowspan="3">VI Equus</td> <td>Maintenance 7-22p or 7-24p</td> <td>Brake fluid Check brake fluid level in the brake fluid reservoir. The level should be between "MIN" and "MAX" marks on the side of the reservoir. Use only hydraulic brake fluid conforming to DOT 3 or DOT 4 specification. Never mix different types of fluid.</td> <td rowspan="3">Change 'DOT 3 or DOT 4' to 'DOT 4'</td> </tr> <tr> <td rowspan="2">Recommended Lubricants and Capacities 8-4p or 8-5p</td> <td> <table border="1"> <thead> <tr> <th>Lubricant</th> <th>Volume</th> <th>Classification</th> </tr> </thead> <tbody> <tr> <td>Coolant 3.8L</td> <td>8.88 US qt. (8.4 l)</td> <td>Mixture of antifreeze and water (Ethylene glycol base coolant for aluminum radiator)</td> </tr> <tr> <td>Coolant 5.0L</td> <td>12.79 US qt. (12.1 l)</td> <td></td> </tr> </tbody> </table> </td> </tr> <tr> <td>Brake fluid</td> <td>0.7-0.8 US qt. (0.7-0.8 l)</td> <td>FMVSS116 DOT 3 or DOT 4</td> </tr> </tbody> </table> <p>✦ Sticker - Please attach the below stickers to the Owner's manual.</p> <div style="display: flex; align-items: center;"> <div style="margin-right: 10px;">4.5 mm</div> <div style="border: 1px solid red; padding: 2px;">DOT4</div> <div style="margin-left: 20px; border: 1px solid red; padding: 2px;">DOT4</div> <div style="margin-left: 20px; border: 1px solid red; padding: 2px;">DOT4</div> <div style="margin-left: 20px; border: 1px solid red; padding: 2px;">DOT4</div> </div> <div style="display: flex; align-items: center; margin-top: 5px;"> <div style="margin-right: 10px;">27 mm</div> <div style="border: 1px solid red; padding: 2px;">DOT4</div> <div style="margin-left: 20px; border: 1px solid red; padding: 2px;">DOT4</div> <div style="margin-left: 20px; border: 1px solid red; padding: 2px;">DOT4</div> </div>		Model	Page	Existing Texts	Remark	BH Genesis	Maintenance 7-13p or 7-14p	Brake fluid Check brake fluid level in the brake fluid reservoir. The level should be between "MIN" and "MAX" marks on the side of the reservoir. Use only hydraulic brake fluid conforming to DOT 3 or DOT 4 specification. Never mix different types of fluid.	Change 'DOT 3 or DOT 4' to 'DOT 4'	Recommended Lubricants and Capacities 8-4p or 8-5p	<table border="1"> <thead> <tr> <th>Lubricant</th> <th>Volume</th> <th>Classification</th> </tr> </thead> <tbody> <tr> <td>Coolant 3.8L</td> <td>8.88 US qt. (8.4 l)</td> <td>Mixture of antifreeze and water (Ethylene glycol base coolant for aluminum radiator)</td> </tr> <tr> <td>Coolant 5.0L</td> <td>12.79 US qt. (12.1 l)</td> <td></td> </tr> </tbody> </table>	Lubricant	Volume	Classification	Coolant 3.8L	8.88 US qt. (8.4 l)	Mixture of antifreeze and water (Ethylene glycol base coolant for aluminum radiator)	Coolant 5.0L	12.79 US qt. (12.1 l)		Brake fluid	0.7-0.8 US qt. (0.7-0.8 l)	FMVSS116 DOT-3 or DOT-4	VI Equus	Maintenance 7-22p or 7-24p	Brake fluid Check brake fluid level in the brake fluid reservoir. The level should be between "MIN" and "MAX" marks on the side of the reservoir. Use only hydraulic brake fluid conforming to DOT 3 or DOT 4 specification. Never mix different types of fluid.	Change 'DOT 3 or DOT 4' to 'DOT 4'	Recommended Lubricants and Capacities 8-4p or 8-5p	<table border="1"> <thead> <tr> <th>Lubricant</th> <th>Volume</th> <th>Classification</th> </tr> </thead> <tbody> <tr> <td>Coolant 3.8L</td> <td>8.88 US qt. (8.4 l)</td> <td>Mixture of antifreeze and water (Ethylene glycol base coolant for aluminum radiator)</td> </tr> <tr> <td>Coolant 5.0L</td> <td>12.79 US qt. (12.1 l)</td> <td></td> </tr> </tbody> </table>	Lubricant	Volume	Classification	Coolant 3.8L	8.88 US qt. (8.4 l)	Mixture of antifreeze and water (Ethylene glycol base coolant for aluminum radiator)	Coolant 5.0L	12.79 US qt. (12.1 l)		Brake fluid	0.7-0.8 US qt. (0.7-0.8 l)	FMVSS116 DOT 3 or DOT 4	<p>Owner's manual revision stickers.</p> <p>P/N 58531-P2100QQH (KIT includes cap and stickers)</p>
Model	Page	Existing Texts	Remark																																							
BH Genesis	Maintenance 7-13p or 7-14p	Brake fluid Check brake fluid level in the brake fluid reservoir. The level should be between "MIN" and "MAX" marks on the side of the reservoir. Use only hydraulic brake fluid conforming to DOT 3 or DOT 4 specification. Never mix different types of fluid.	Change 'DOT 3 or DOT 4' to 'DOT 4'																																							
	Recommended Lubricants and Capacities 8-4p or 8-5p	<table border="1"> <thead> <tr> <th>Lubricant</th> <th>Volume</th> <th>Classification</th> </tr> </thead> <tbody> <tr> <td>Coolant 3.8L</td> <td>8.88 US qt. (8.4 l)</td> <td>Mixture of antifreeze and water (Ethylene glycol base coolant for aluminum radiator)</td> </tr> <tr> <td>Coolant 5.0L</td> <td>12.79 US qt. (12.1 l)</td> <td></td> </tr> </tbody> </table>		Lubricant	Volume	Classification	Coolant 3.8L	8.88 US qt. (8.4 l)	Mixture of antifreeze and water (Ethylene glycol base coolant for aluminum radiator)	Coolant 5.0L	12.79 US qt. (12.1 l)																															
		Lubricant		Volume	Classification																																					
Coolant 3.8L	8.88 US qt. (8.4 l)	Mixture of antifreeze and water (Ethylene glycol base coolant for aluminum radiator)																																								
Coolant 5.0L	12.79 US qt. (12.1 l)																																									
Brake fluid	0.7-0.8 US qt. (0.7-0.8 l)	FMVSS116 DOT-3 or DOT-4																																								
VI Equus	Maintenance 7-22p or 7-24p	Brake fluid Check brake fluid level in the brake fluid reservoir. The level should be between "MIN" and "MAX" marks on the side of the reservoir. Use only hydraulic brake fluid conforming to DOT 3 or DOT 4 specification. Never mix different types of fluid.	Change 'DOT 3 or DOT 4' to 'DOT 4'																																							
	Recommended Lubricants and Capacities 8-4p or 8-5p	<table border="1"> <thead> <tr> <th>Lubricant</th> <th>Volume</th> <th>Classification</th> </tr> </thead> <tbody> <tr> <td>Coolant 3.8L</td> <td>8.88 US qt. (8.4 l)</td> <td>Mixture of antifreeze and water (Ethylene glycol base coolant for aluminum radiator)</td> </tr> <tr> <td>Coolant 5.0L</td> <td>12.79 US qt. (12.1 l)</td> <td></td> </tr> </tbody> </table>		Lubricant	Volume	Classification	Coolant 3.8L	8.88 US qt. (8.4 l)	Mixture of antifreeze and water (Ethylene glycol base coolant for aluminum radiator)	Coolant 5.0L	12.79 US qt. (12.1 l)																															
		Lubricant		Volume	Classification																																					
Coolant 3.8L	8.88 US qt. (8.4 l)	Mixture of antifreeze and water (Ethylene glycol base coolant for aluminum radiator)																																								
Coolant 5.0L	12.79 US qt. (12.1 l)																																									
Brake fluid	0.7-0.8 US qt. (0.7-0.8 l)	FMVSS116 DOT 3 or DOT 4																																								

Warranty Information:

Model	Op. Code	Operation	Causal Part	Op. Time	Nature	Cause
Genesis (BH)	10D228R0	Reservoir Tank Cap Replacement and Owner's Manual Revised Sticker Attachment	58531-P2100QQH	0.3 M/H	D73	ZZ3
Equus (VI)						

NOTE 1: Submit Claim on Campaign Claim Entry screen

NOTE 2: If a part that is not covered by this campaign is found in need of replacement while performing Service Campaign 978 and the affected part is still under warranty, submit a separate claim using the same repair order. If the affected part is out of warranty submit a Prior Approval request for goodwill consideration prior to performing the work.

Service Procedure:

1. Open the hood and locate the brake master cylinder reservoir.



2. Remove the original brake fluid reservoir cap. Replace it with the new one.

NOTICE

The revised cap states to use only DOT 4 brake fluid.



3. Apply the revised stickers to the owner’s manual in the applicable areas shown below:

Genesis (BH) vehicles:

- Maintenance – Page 7-13 or 7-14
- Recommended Lubricants and Capacities – Page 8-4 or 8-5

Equus (VI) vehicles:

- Maintenance – Page 7-22 or 7-24
- Recommended Lubricants and Capacities – Page 8-4 or 8-5

Warning
 The brake fluid specifications for the 09-12MY Genesis (BH) and 11-12MY Equus (VI) have been revised.
ONLY use DOT-4 brake fluid in your vehicle. DO NOT use DOT-3 brake fluid.
 Attach the stickers below to the relevant sections in the owner's manual as indicated.

Model	Page in Owner's Manual	Revised Content			Note													
BH Genesis	Maintenance 7-13p or 7-14p	Brake fluid Check brake fluid level in the brake fluid reservoir. The level should be between "MIN" and "MAX" marks on the side of the reservoir. Use only hydraulic brake fluid conforming to DOT4 specification. Never mix different types of fluid.			"DOT 3 or DOT 4" is revised to "DOT 4"													
	Recommended Lubricants and Capacities 8-4p or 8-5p	<table border="1"> <thead> <tr> <th>Lubricant</th> <th>Volume</th> <th>Classification</th> </tr> </thead> <tbody> <tr> <td rowspan="2">Coolant</td> <td>3.8L</td> <td>8.88 US qt. (8.4 l)</td> <td rowspan="2">Mixture of antifreeze and water (Ethylene glycol base coolant for aluminum radiator)</td> </tr> <tr> <td>5.0L</td> <td>12.79 US qt. (12.1 l)</td> </tr> <tr> <td>Brake fluid</td> <td colspan="2">0.7~0.8 US qt. (0.7~0.8 l)</td> <td>FMVSS116 DOT4</td> </tr> </tbody> </table>				Lubricant	Volume	Classification	Coolant	3.8L	8.88 US qt. (8.4 l)	Mixture of antifreeze and water (Ethylene glycol base coolant for aluminum radiator)	5.0L	12.79 US qt. (12.1 l)	Brake fluid	0.7~0.8 US qt. (0.7~0.8 l)		FMVSS116 DOT4
		Lubricant	Volume	Classification														
Coolant		3.8L	8.88 US qt. (8.4 l)	Mixture of antifreeze and water (Ethylene glycol base coolant for aluminum radiator)														
	5.0L	12.79 US qt. (12.1 l)																
Brake fluid	0.7~0.8 US qt. (0.7~0.8 l)		FMVSS116 DOT4															
VI Equus	Maintenance 7-22p or 7-24p	Brake fluid Check brake fluid level in the brake fluid reservoir. The level should be between "MIN" and "MAX" marks on the side of the reservoir. Use only hydraulic brake fluid conforming to DOT4 specification. Never mix different types of fluid.																
VI Equus	Recommended Lubricants and Capacities 8-4p or 8-5p	<table border="1"> <thead> <tr> <th>Lubricant</th> <th>Volume</th> <th>Classification</th> </tr> </thead> <tbody> <tr> <td rowspan="2">Coolant</td> <td>3.8L</td> <td>8.88 US qt. (8.4 l)</td> <td rowspan="2">Mixture of antifreeze and water (Ethylene glycol base coolant for aluminum radiator)</td> </tr> <tr> <td>5.0L</td> <td>12.79 US qt. (12.1 l)</td> </tr> <tr> <td>Brake fluid</td> <td colspan="2">0.7~0.8 US qt. (0.7~0.8 l)</td> <td>FMVSS116 DOT4</td> </tr> </tbody> </table>			Lubricant	Volume	Classification	Coolant	3.8L	8.88 US qt. (8.4 l)	Mixture of antifreeze and water (Ethylene glycol base coolant for aluminum radiator)	5.0L	12.79 US qt. (12.1 l)	Brake fluid	0.7~0.8 US qt. (0.7~0.8 l)		FMVSS116 DOT4	
		Lubricant	Volume	Classification														
		Coolant	3.8L	8.88 US qt. (8.4 l)	Mixture of antifreeze and water (Ethylene glycol base coolant for aluminum radiator)													
5.0L	12.79 US qt. (12.1 l)																	
Brake fluid	0.7~0.8 US qt. (0.7~0.8 l)		FMVSS116 DOT4															

※ Sticker - Please attach the below stickers to the Owner's manual.

4.5 mm	DOT4	DOT4	DOT4
27 mm	DOT4	DOT4	DOT4