



Preliminary Information

PIT5890 Dinghy Towing A 2022 Traverse

Models

Brand:	Model:	Model Years:	VIN:		Engine:	Transmissions:
			from	to		
Chevrolet	Traverse	2022	All	All	All	All

Involved Region or Country	North America
Condition	Dinghy Towing on a 2022 Traverse
Cause	There was a mistake in the owner’s manual for the 2022 Traverse, that states Dinghy Towing is NOT capable. That is incorrect. Dinghy towing IS capable on the 2022 Traverse and is done the same way as the 2021 Traverse.

Correction:

The information in SI Owner’s Manual under Recreational Vehicle Towing is correct and can also be given to the customer.

Dinghy Towing

For vehicles being dinghy towed, the vehicle should be run at the beginning of each day and at each RV fuel stop for about five minutes. This will ensure proper lubrication of transmission components.

To tow the vehicle from the front with all four wheels on the ground:

1. **Position the vehicle that will be towed and secure it to the towing vehicle.**
2. **Put the vehicle in N (Neutral).**
3. **Shut engine off (vehicle will remain in accessory mode).**
4. **Disconnect the negative (-) terminal connector from the 12-volt battery.**
5. **Close the hood of the vehicle.**

Caution: If the vehicle is towed without performing each of the steps listed under “Dinghy Towing,” the automatic transmission could be damaged. Be sure to follow all steps of the dinghy towing procedure prior to and after towing the vehicle.

Caution: If 105 km/h (65 mph) is exceeded while towing the vehicle, it could be damaged. Never exceed 105 km/h (65 mph) while towing the vehicle.

Once the destination is reached:

1. **Shift the vehicle to P (Park).**
2. **Reconnect the negative (-) terminal connector to the 12-volt battery.**
3. **Start the engine and let it idle for more than three minutes before driving the vehicle.**

Caution: Too much or too little fluid can damage the transmission. Be sure that the transmission fluid is at the proper level before towing with all four wheels on the

ground.

Caution: Do not tow a vehicle with the front drive wheels on the ground if one of the front tires is a compact spare tire. Towing with two different tire sizes on the front of the vehicle can cause severe damage to the transmission.

Version History

Version	1
Modified	02/01/2022 - Created on.



GENERAL MOTORS

© 2022 General Motors. All Rights Reserved.