

Creaking Noise When Load Applied To Front Seat Cushion

Topic number	LI91.10-P-065540
Version	2
Function group	91.10 - Front seats
Date	5/26/22
Validity	BR217, BR223
Reason for change	Model series added to

Complaint

Creaking noise from side bolster when load applied to seat cushion of front seats.


Cause

Soiling to the replacement fabric of the seat cushion cover means that friction on the seat side finisher mountings generates a creaking noise.

Remedy

1. Clean fabric cover and seat side finisher in marked area (Pic. 1)
2. Apply lubricant A 000 989 35 60 in area of inner plastic cover (reinforcement for cover at inner side of front seat - do not apply directly onto outer cover).

Attachments

File	Description
1.JPG	Pic 1. Fabric cover generates friction on an seat side finisher mounting
	

Symptoms

XENTRY TIPS

Body > Seat > Noises > Grunting

Body > Seat > Noises > Creaking

Parts

Part number	ES1	ES2	Designation	Quantity	Note	EPC
A0009893560			Lubricant	1	Lubricant in spray can 100 ml	X

Operation numbers/damage codes

Op. no.	Operation text	Time	Damage code	Note
			91A30	Reinforcement for cover at inner side of front seat, left
			91N30	Reinforcement for cover at inner side of front seat, right