


2022 Ontour

ONTOUR 2.2 SQUEEK NOISE FROM MIDDLE KITCHEN GALLEY

CUSTOMER INDICATED THE SQUEEK NOISE WAS COMING FROM WHERE THE COUNTER TOP MEETS THE FELT WALLS BEHIND THE KITCHEN GALLEY.

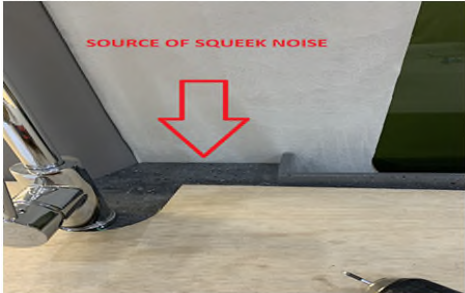

TO REPAIR, REMOVE THE MICROWAVE AND ADD A SCREW (2 3/4" size) 2" ABOVE THE LEFT LOWER CUTOUT AS SEEN IN PICTURE 2 BELOW. ADD ANOTHER SCREW (2 3/4" size) 1" ABOVE THE RIGHT UPPER CUTOUT AS SEEN IN PICTURE 3 BELOW.

