

# Service Bulletin

22-013

**June 24, 2022** Version 1

# **Civic Coupe Trunk Spring Replacement**

#### **AFFECTED VEHICLES**

Year	Model	Trim Level	VIN Range
2016–20	Civic Coupe	All except Si	ALL
2016–20	Civic Coupe	Si	ALL

NOTE: This bulletin does not apply to vehicles with Honda Genuine accessory spoilers or non-OEM style trunk spoilers.

#### **SYMPTOM**

The trunk spring breaks and will not hold the trunk lid in the upright position.

### **POSSIBLE CAUSE**

There is fatigue in the material used in manufacturing of the trunk spring.

#### **CORRECTIVE ACTION**

Replace the trunk spring(s) with new part number(s) in the PARTS INFORMATION.

#### **PARTS INFORMATION**

Part Name	Part Number	Quantity
Spring R, Trunk Open	74871-TBG-A01	1
Spring L, Trunk Open	74872-TBG-A01	1
Spring L, Trunk Open	74872-TBJ-A01	1

#### **TOOL INFORMATION**

Tool Name	Tool Number	Quantity
Torsion Bar Assembly Tool	07AAF-T2AA200	1

**CUSTOMER INFORMATION:** The information in this bulletin is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely maintain your vehicle. These procedures should not be attempted by "do-it-yourselfers," and you should not assume this bulletin applies to your vehicle, or that your vehicle has the condition described. To determine whether this information applies, contact an authorized Honda automobile dealer.

### **WARRANTY CLAIM INFORMATION**

The normal warranty applies.


Operation Number	Description	Flat Rate Time	Defect Code	Symptom Code	Template ID	Failed Part Number
8231B8	Replace the trunk lid torsion bar(s). (except Si)	0.3 hr.	01101	03217	A22013A	74871-TBG-A00
	Replace the trunk lid torsion bar(s). (Si)				A22013B	74872-TBJ-A00

Skill Level: Repair Technician

### **REPAIR PROCEDURE**


NOTE: Follow the procedure found in the service information under *Trunk Lid Torsion Bar Removal and Installation* noting the steps shown below.

1. Remove the rear seat-back release lever.

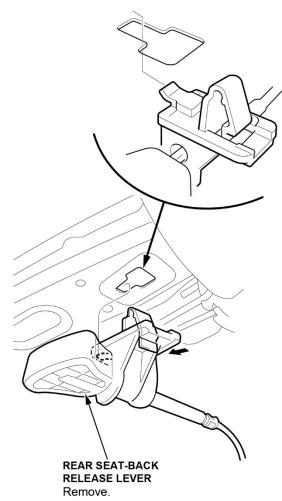


2. Remove the trunk lid torsion bars from the trunk lid torsion bar clip.


NOTE: Take notice of the clip orientation upon disassembly as it will be turned **180 degrees** in the opposite direction upon reassembly.

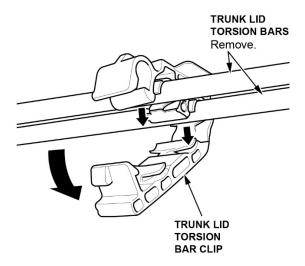


3. Remove the truck lid torsion bars with the torsion bar assembly from both trunk lid hinges.

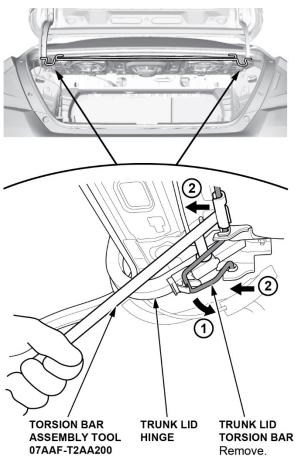

4. If necessary, remove the trunk lid torsion bar holders and the trunk lid torsion bar slider.

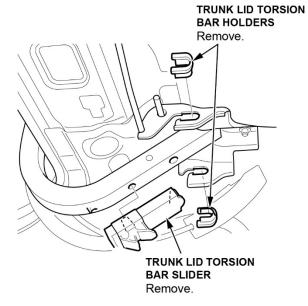

5. Remove the clip and rotate it **180 degrees**.

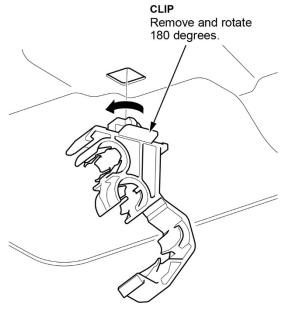

6. Install all the removed parts in the reverse order of removal.

END