

GROUP	NUMBER
<b>ENGINE</b>	22-EM-010H
DATE	MODEL
<b>JULY 2022</b>	ALL MODELS

SUBJECT INTAKE AND EXHAUST SYSTEM INSPECTION AND REPLACEMENT GUIDELINES DURING ENGINE REPLACEMENT

This TSB supersedes TSB 17-EM-001 with revisions for Intake Manifold replacement criteria.

### **Description:**

Follow the guidelines outlined in this bulletin to inspect and clean or replace certain components of the engine intake system accordingly during engine short block or sub-assembly replacement.

## **NOTICE**

Failure to follow this TSB may result in reoccurring damage to the new engine assembly. If the short engine assembly is being replaced, refer to TSB 10-EM-003 (ENGINE OIL PUMP REPLACEMENT GUIDELINES DURING ENGINE REPLACEMENT) for additional information.

#### **Applicable Vehicles:**

All engine equipped models

#### **Inspection and Recommended Service Action:**

Engine Condition	Recommended Action	Applicable Components
	MUST REPLACE	<ul><li>Intake Manifold</li><li>Engine Oil Pump/Balance Shaft Module</li></ul>
Any physical damage to one or more combustion chambers,	REPLACE if debris is found inside	<ul> <li>Air Intake Filter</li> <li>Air Intake Carbon Trap (if equipped),</li> <li>Intercooler (if equipped)</li> <li>Exhaust Manifold w/Catalyst Assembly</li> </ul>
valves, cylinder walls, and/or piston tops due to internal engine issue.	Inspect and CLEAN (Replace, if damaged or debris is stuck.)	<ul> <li>Throttle body</li> <li>PCV System / Valve Cover Baffle</li> <li>Air Intake Hose / Pipe</li> <li>MAF Sensor,</li> <li>Exhaust Manifold (Non-Catalyst Type)</li> <li>Intercooler Pipe (if equipped)</li> <li>Turbocharger (if equipped)</li> </ul>
Engine oil consumption and/or excessive combustion blow by due to reduced seal between cylinder walls and piston rings.	Inspect and CLEAN	<ul> <li>Intake Manifold</li> <li>Throttle Body</li> <li>PCV System / Valve Cover Baffle</li> <li>Air Intake Hose / Pipe</li> <li>Intercooler Pipe (if equipped)</li> <li>Intercooler (if equipped)</li> </ul>

## **NOTICE**

- <u>Must Replace:</u> If severe physical internal engine damage is observed (such as broken pistons/valves, connecting rod interference to cylinder block, seized crank, large debris/fragments in the oil pan), do not reuse the intake manifold or the oil pump/BSM.
  - Replace the intake manifold and the oil pump/BSM (if not supplied with replacement engine) for any of the above conditions.
- <u>Inspect and Clean:</u> Inspect the component for any debris and clean using an appropriate cleaning agent (such as a degreaser), then drain/remove any residual liquids. Be sure to fully dry with shop air. Replace if any debris is stuck inside and cannot be fully cleaned.
- Service Procedure: Refer to applicable Shop Manual for the required service procedures.

# **Warranty Information:**

Normal warranty applies.

TSB #: **22-EM-010H** Page 2 of 2