

Bulletin No.: PIT5895A Published date: 07/8/2022

Preliminary Information

PIT5895A Multifunction Inner Tailgate Will Not Open Or Unable To Disable Inner Tailgate

<u>Models</u>

Brand:	Model:	Model Years:	VIN:		Engine	Transmissions:
			from	to	Engine:	11411511115510115.
Chevrolet	Silverado 1500 LTD (RPO J21, VIN Digit 5 = W or Y)	2022	All	All	All	All
Chevrolet	Silverado 1500 New (RPO J22, VIN Digit 5 = A or D)	2022	All	All	All	All
Chevrolet	Silverado 2500/3500HD	2022	All	All	All	All
GMC	Sierra 1500 Limited (RPO J21, VIN Digit 5 = 8 or 9)	2022	All	All	All	All
GMC	Sierra 1500 New (RPO J22, VIN Digit 5 = H or U)	2022	All	All	All	All
GMC	Sierra 2500/3500HD	2022	All	All	All	All

Involved Region or Country	North America
Additional Options (RPO)	QK2 - Multifunction Tailgate
	1. Some customers may comment that the inner tailgate will not release and is inoperative. The primary tailgate will release and working properly.
Condition	 This condition ONLY applies to Silverado 1500 New/ Sierra 1500 New with RPO J22. Some customers my comment they are not able to disable the inner tailgate and every time they try to disable the inner tailgate it just releases.
Cause	 The cause of this concern could be that the inner tailgate is disabled, which is a new feature for the 2022 model year. Calibration issue.

Correction:

1. To correct this concern enable the inner tailgate. The following information is from the owners manual:

The inner tailgate may be equipped with an enable/disable feature to prevent the inner tailgate from being opened when a hitch or other equipment is installed that could damage the inner tailgate.

To disable the inner tailgate from opening: ensure that the remote key is within 1 meter (3 ft) of the rear bumper and then hold the upper touch pad on the tailgate handle for three seconds.

The tail lamps will flash to alert you that the inner gate has been disabled.

The inner and outer tailgate can still be operated like a traditional tailgate, but the inner gate will not be able to be opened alone.

To enable the inner tailgate function, hold the upper touch pad on the handle for 3 seconds until the tail lamps flash.

The inner tailgate can now be opened separately from the outer tailgate.

2. Engineering is working on a fix. At this time do not attempt any repairs. When a fix is released this PI will be updated.

Additional SI Keywords

end end-gate endgate gate tail tail-gate tailgate

Version	2
Modified	02/11/2022 - Created on.
Modified	07/08/2022 - Updates to the title, models, condition, cause and correction.



© 2022 General Motors. All Rights Reserved.