

AUTOMATIC EMERGENCY BRAKING

Automatic Emergency Braking can detect objects in your path and engage the brake to help your vehicle avoid or reduce the severity of a collision.

We've updated Automatic Emergency Braking so that when Lucid Stability Control is set to Partial or Off, Automatic Emergency Braking will be disabled. Forward Collision Warning will remain enabled. When you turn your vehicle off and on again, Lucid Stability Control will default back to Full, and Automatic Emergency Braking will be re-enabled.

Automatic Emergency Braking may not detect stationary objects in time to avoid collision at certain speeds and is not a replacement for attentive driving.