

Case Number: S2208000005 - Rev. A

Release Date: January 2022

Symptom/Vehicle Issue: D-Pillar 2nd And 3rd Row Power Folding Seat Switch Inop

Discussion: The D-Pillar power folding seat switch may be inoperative. There may not be any related faults present. The PLGM may properly report liftgate position (as open/closed) however if the BCM does not see the liftgate in the open position it will lock out the FSM D-Pillar switch resulting in customer complaint.



This document does not authorize warranty repairs. This communication documents a record of past experiences. STAR Online does not provide any conclusions about what is wrong with the vehicle. Rather, it captures all previous cases known that appear to be similar or related to the vehicle symptom / condition. You are the expert, and you are responsible for deciding on the appropriate course of action.

Contact STAR Center, or your Technical Assistance Center Via TechCONNECT or eCONTACT ticket if no solution is found

FCA US LLC




Diagnostics: Using WiTech, review the power liftgate status in the BCM. Determining if the BCM believe it is open or closed. If the BCM status does not match the physical position of the power liftgate. Verify continuity on liftgate ajar signal circuit G78 between PLGM and BCM, check for opens/shorts or loose connections at the BCM or PLGM.

PLGM LIFGATE OPEN

•				
Ungrouped Data				Pin D28 - Brake Pedal Switch
NAME*	VALUE	UNIT	TYPE	Pin E03 / G09 - Internal Trunk Liftgate Switch
Battery Voltage Input	14.36		Bussed Inputs	Pin E03 / G09 - Internal Trunk Liftgate Switch Voltag
Chime Activation	Off		Bussed Output	
Gear Position 1 Switch Closed			Sensors	Pin E07 - Liftgate Ajar Voltage
Gear Position 2 Switch Closed			Sensors	Pin E09 - Driver Door Ajar
			Sensors	Pin E09 - Driver Door Ajar Voltage
Latch Sector Status	SECTOR_READY_TO_CINCH		Sensors	Pin E17 - Right Rear LED Diagnostic
Latch Status	Unlatched		Sensors	Pin E17 - Right Rear LED Diagnostic Voltage
Liftgate Status	Open		Sensors	Pin E18 - Passenger Door Lock Position
Number of FlashRom re-writings (F-ROM)		Number	Bussed Inputs	Pin E18 - Passenger Door Lock Position Voltage
Pawl Detent Switch Closed			Sensors	Pin E29 - Driver Secondary Door Ajar

BCM LIFTGATE CLOSED

6	Pin E03 / G09 - Internal Trunk Liftgate Switch Voltage	8.0314	Volts	Sensors
ıt				Senso s
	Pin E07 - Liftgate Ajar Voltage	16.0000		Sensors
	Pin E09 - Driver Door Ajar	Not Ajar		Sensors
	Pin E09 - Driver Door Ajar Voltage	16.0000		Sensors
	Pin E17 - Right Rear LED Diagnostic	Not Short		Sensors
	Pin E17 - Right Rear LED Diagnostic Voltage	16.0000	Volts	Sensors
	Pin E18 - Passenger Door Lock Position			Sensors
6	Pin E18 - Passenger Door Lock Position Voltage	16.0000		Sensors
	Pin E29 - Driver Secondary Door Ajar	Open Circuit		Sensors

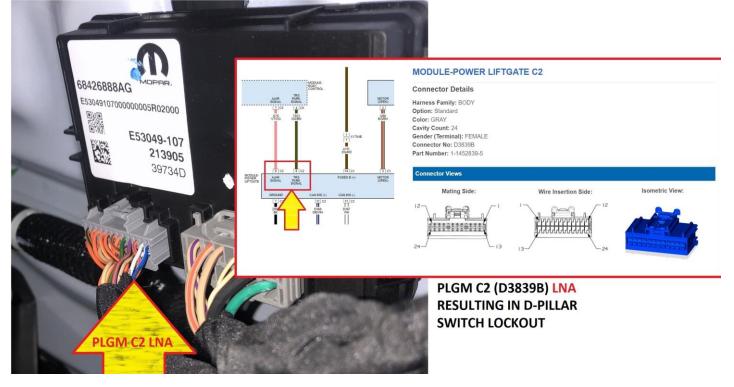

Contact STAR Center, or your Technical Assistance Center Via TechCONNECT or eCONTACT ticket if no solution is found



Repair Procedure: Secure PLGM/BCM connections or repair circuit G78 as needed.

Verification: Confirm the 2nd and 3rd row power folding seats operate normally.

This document does not authorize warranty repairs. This communication documents a record of past experiences. STAR Online does not provide any conclusions about what is wrong with the vehicle. Rather, it captures all previous cases known that appear to be similar or related to the vehicle symptom / condition. You are the expert, and you are responsible for deciding on the appropriate course of action.

Contact STAR Center, or your Technical Assistance Center Via TechCONNECT or eCONTACT ticket if no solution is found