



SIB 52 07 22  
CHECK REAR SEATS CCM

2022-10-07

**MODEL**

E-Series	Model Description	Production Date
G07 LCI	X7 SAV	From August 1 2022

**SITUATION**

When turning off the vehicle, a Check Control Message (CCM) for "rear occupant alert, check rear seats" is displayed in the instrument cluster.



**CAUSE**

To achieve 5-star crash test ratings, some BMW vehicles have been equipped with a rear seat occupant recognition system since model year 2018. This is to let the driver know if 2<sup>nd</sup> row seat passengers are buckled in and to help remind drivers if there are occupants still in the back seat. The 3<sup>rd</sup> row seat occupancy is not actively monitored.

Starting with the G07 Life-Cycle Impulse (LCI) vehicles, this passive display has now been set to default to a Check Control Reminder.

At the end of a trip, the system informs the driver of the possible presence of occupants on the rear seats. Since the 3<sup>rd</sup> row seats are not monitored the system depends on the opening of the 2<sup>nd</sup> row doors to trigger this reminder.

If a door with access to the rear row seating is operated within 30 minutes before starting off, a message appears on the control display when the trip is completed, and a signal tone sounds.

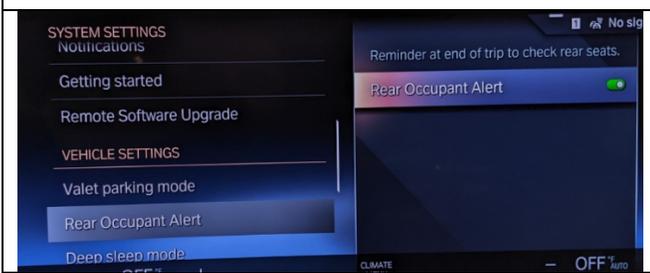
If the trip is continued within 30 minutes, the message is displayed again after the trip has been completed.

**CORRECTION**

If customers do not wish to receive this safety reminder, they can switch it off in the i-drive menu.

**PROCEDURE**

	1-Go into the i-drive Menu and select <b>SYSTEM</b>
--	---

	<p><b>SETTINGS</b></p>
	<p>2- Under <b>VEHICLE SETTINGS</b> select <b>REAR OCCUPANT ALERT</b>.</p> <p>Move the slider so it appears green to turn off the warning.</p>

This information is contained within the owner’s manual.

**CLAIM INFORMATION**

This bulletin is provided as information only.

**FEEDBACK REGARDING THIS BULLETIN**

<p>Technical Feedback</p>	<p>To submit feedback for the technical topics of this bulletin: Submit your feedback in the rating box at the top of this bulletin</p>
<p>Warranty Feedback</p>	<p>To submit feedback for the CLAIMS section of this bulletin: Submit an IDS ticket to the Warranty Department, or use the chat available in the Warranty Documentation Portal</p>
<p>Parts Feedback</p>	<p>To submit feedback for the PARTS section of this bulletin: Submit an IDS ticket to the Parts Department</p>