

REFERENCE:	Nova Bus Manuals
SECTION:	08: Pneumatic System
RS N°:	MQR 7621-2506
EFFECTIVE IN PROD.:	N/A

APPLICATION DEADLINE: 2024AL10  
CLAIM REFERENCE NUMBER: WB-5329

SUBJECT:	Leveling valve out of Adjustment.
JUSTIFICATION:	Leveling valve N92260 found out of adjustment with damaged sway bar bushing bracket.

LEVEL	DESCRIPTION	DIRECT CHARGES		TIME
		LABOUR	MATERIAL	
1	–	–	–	–
2	Leveling valve re-adjustment	Novabus	Novabus	1 h
	Replacement of Stabilizer Bar Bracket and Bushing			1 h

## DISPOSAL OF PARTS

REMOVED PARTS ARE:	DISCARDED*	RETAINED	* Dispose of the unused parts and the defective parts in accordance with local environmental standards in effect.
	Yes	–	

## REVISION HISTORY

REV.	DATE	CHANGE DESCRIPTION	WRITTEN BY
NR	2022DE14	Initial release	Devanand

APPROVED BY:

PAGE 1 OF 29

**MATERIAL REQUIRED PER VEHICLE**

QTY	PART N°	REV.	DESCRIPTION
<b>LEVEL 1</b>			
-	-	-	-
<b>LEVEL 2</b>			
4	2385481	B	Bracket Stabilizer Bar
8	N11121	X	Hex Bolt M8x30
16	N11173	X	Washer Flat M8
8	N10859	T	Nut Locknyl M8
2	N94049	B	Retainer Stabilizer Bar
2	N94050	B	Retainer Stabilizer Bar
2	N93851	A	Clamp Retainer Stabilizer Bar
2	N11774	X	Bolt M10x40
2	N11243	T	Nut Locknyl M10
4	N11174	X	Washer Flat M10
4	N91245	A	Cushion Mounting
<b>LEVEL 2 SHOP SUPPLIES</b>			
445 ml	R085023	-	Sealant Lub Never Seeze 1 CAN per depot. 1 ea= 455 ml CAN 3x CAN of Never seize for the entire campaign
<b>LEVEL 2 SPECIAL TOOLING</b>			
1	NT1090	NR	Suspension Air Bags Height Gage

Materials will be available within 70 days once your order has been placed.

To order, please contact [novabus.parts@volvo.com](mailto:novabus.parts@volvo.com)

Or by phone for CANADA 1-800-771-6682, for USA 1-877-999-8808

Specify document number, quantity of parts required and shipping address.

CLIENT	ORDER	ROAD NUMBER		VIN (2NVY/4RKY...)		QTY
		FROM	TO	FROM	TO	
New York City Transit New York - NYCT	LC79	9624	9629	L82L3M9777783	L82L2M9777788	6
New York City Transit New York - NYCT	LC79	9631	9637	L82L0M9777790	L82L1M9777796	7
New York City Transit New York - NYCT	LC79	9639	9639	L82L5M9777798	L82L5M9777798	1
New York City Transit New York - NYCT	LC79	9641	9641	L82LXM9777800	L82LXM9777800	1
New York City Transit New York - NYCT	LC79	9643	9650	L82L3M9777802	L82L6M9777809	8
New York City Transit New York - NYCT	LC79	9653	9657	L82L6M9777812	L82L3M9777816	5
New York City Transit New York - NYCT	LC79	9659	9662	L82L7M9777818	L82L7M9777821	4
New York City Transit New York - NYCT	LC79	9664	9667	L82L0M9777823	L82L6M9777826	4
New York City Transit New York - NYCT	LC79	9669	9672	L82LXM9777828	L82LXM9777831	4
New York City Transit New York - NYCT	LC79	9674	9675	L82L3M9777833	L82L5M9777834	2
New York City Transit New York - NYCT	LC79	9677	9684	L82L9M9777836	L82L6M9777843	8
New York City Transit New York - NYCT	LC79	9686	9694	L82LXM9777845	L82L9M9777853	9
New York City Transit New York - NYCT	LC79	9696	9703	L82L2M9777855	L82LXM9777862	8
New York City Transit New York - NYCT	LC79	9704	9708	L82L1M9777863	L82L9M9777867	5
New York City Transit New York - NYCT	LC79	9710	9713	L82L2M9777869	L82L4M9777873	4
New York City Transit New York - NYCT	LC79	9715	9717	L82L8M9777875	L82L1M9777877	3
New York City Transit New York - NYCT	LC79	9720	9721	L82L1M9777880	L82L3M9777881	2
New York City Transit New York - NYCT	LC79	9723	9730	L82L7M9777883	L82L4M9777890	8
New York City Transit New York - NYCT	LC79	9733	9740	L82L3M9777900	L82L6M9777907	8
New York City Transit New York - NYCT	LC79	9742	9744	L82LXM9777909	L82L8M9777911	3
New York City Transit New York - NYCT	LC79	9746	9746	L82L1M9777913	L82L1M9777913	1
New York City Transit New York - NYCT	LC79	9748	9751	L82L5M9777915	L82L0M9777918	4
New York City Transit New York - NYCT	LC79	9753	9753	L82L9M9777920	L82L9M9777920	1
New York City Transit New York - NYCT	LC79	9755	9765	L82L6M9777924	L82L0M9777935	11
New York City Transit New York - NYCT	LC79	9767	9784	L82L4M9777937	L82L4M9777954	18
New York City Transit New York - NYCT	LD64	9787	9787	L82L8M9777956	L82L8M9777956	1
New York City Transit New York - NYCT	LD64	9791	9794	L82L0M9777966	L82L6M9777969	4
New York City Transit New York - NYCT	LD64	9797	9797	L82L6M9777972	L82L6M9777972	1
New York City Transit New York - NYCT	LD64	9801	9805	L82L3M9777976	L82L5M9777980	5
New York City Transit New York - NYCT	LD64	9806	9806	L82L7M9777981	L82L7M9777981	1
New York City Transit New York - NYCT	LD64	9810	9811	L82LXM9777991	L82L1M9777992	2
New York City Transit New York - NYCT	LD64	9812	9812	L82L3M9777993	L82L3M9777993	1
New York City Transit New York - NYCT	LD64	9813	9813	L82L5M9777994	L82L5M9777994	1
New York City Transit New York - NYCT	LD64	9815	9818	L82L9M9777996	L82L4M9778005	4
New York City Transit New York - NYCT	LD64	9820	9821	L82L8M9778007	L82LXM9778008	2
New York City Transit New York - NYCT	LD64	9823	9823	L82L8M9778010	L82L8M9778010	1
New York City Transit New York - NYCT	LD64	9825	9826	L82L1M9778012	L82L3M9778013	2
New York City Transit New York - NYCT	LD64	9828	9828	L82L7M9778015	L82L7M9778015	1
New York City Transit New York - NYCT	LD64	9829	9832	L82L4M9778022	L82LXM9778025	4
New York City Transit New York - NYCT	LD64	9833	9834	L82L1M9778026	L82L3M9778027	2
New York City Transit New York - NYCT	LD64	9836	9843	L82L7M9778029	L82LXM9778042	8
New York City Transit New York - NYCT	LD64	9844	9844	L82L1M9778043	L82L1M9778043	1
New York City Transit New York - NYCT	LD64	9845	9849	L82L3M9778044	L82L6M9778054	5

CLIENT	ORDER	ROAD NUMBER		VIN (2NVY/4RKY...)		QTY
		FROM	TO	FROM	TO	
New York City Transit New York - NYCT	LD64	9851	9867	L82LXM9778056	L82L1M9778088	17
New York City Transit New York - NYCT	LD64	9872	9872	L82L5M9778093	L82L5M9778093	1
New York City Transit New York - NYCT	LD64	9875	9876	L82L8M9778105	L82LXM9778106	2
New York City Transit New York - NYCT	LD64	9878	9878	L82L3M9778108	L82L3M9778108	1
New York City Transit New York - NYCT	LD64	9880	9882	L82L1M9778110	L82L5M9778112	3
New York City Transit New York - NYCT	LD64	9889	9889	L82L8M9778119	L82L8M9778119	1

**TOOLS REQUIRED:**

- Jig NT1090
- Measuring Tape
- Flathead screwdriver
- 10mm and 11mm socket wrench
- Torque wrench
- Torque seal
- White sheet or cardboard

**WARNING**

Before proceeding with any adjustment, ensure that security stands are under the vehicle. Pressure in the system must be a minimum of 120 psi (827 kPa).

**NOTE**

Make sure that the surface selected for the verification of the system is as level as possible.

- 1.1. Run the bus.
- 1.2. Make sure that there is sufficient air in the reservoirs (120 psi minimum at all times.) To do so, wait until the pressure valve is released (engine running) or have continuous air supply.
- 1.3. Park the vehicle on an even surface with the transmission on neutral.
- 1.4. Apply the parking brake and set the master control switch to the **stop** position.
- 1.5. Set the battery disconnect switch in the battery compartment to the **off** position
- 1.6. Record the current height using the measuring tape at rear and front doors (See Figure 1).



Figure 1 - Measuring the Height of Front and Rear Doors

- 1.7. Raise the vehicle

**NOTE**

For more information on the raising and lowering of the vehicle, refer to section 18: HOISTING AND TOWING of the Nova LFS maintenance manual. Respect your current internal safety procedures. Use the proper hoisting equipment for your safety.

- 1.8. If the wheels are not level between each other, adjust the lifts to allow the wheels to be level.

## REAR LEVELING

- 1.9. Locate the rear left air bag in front of the rear axle (See Figure 2).

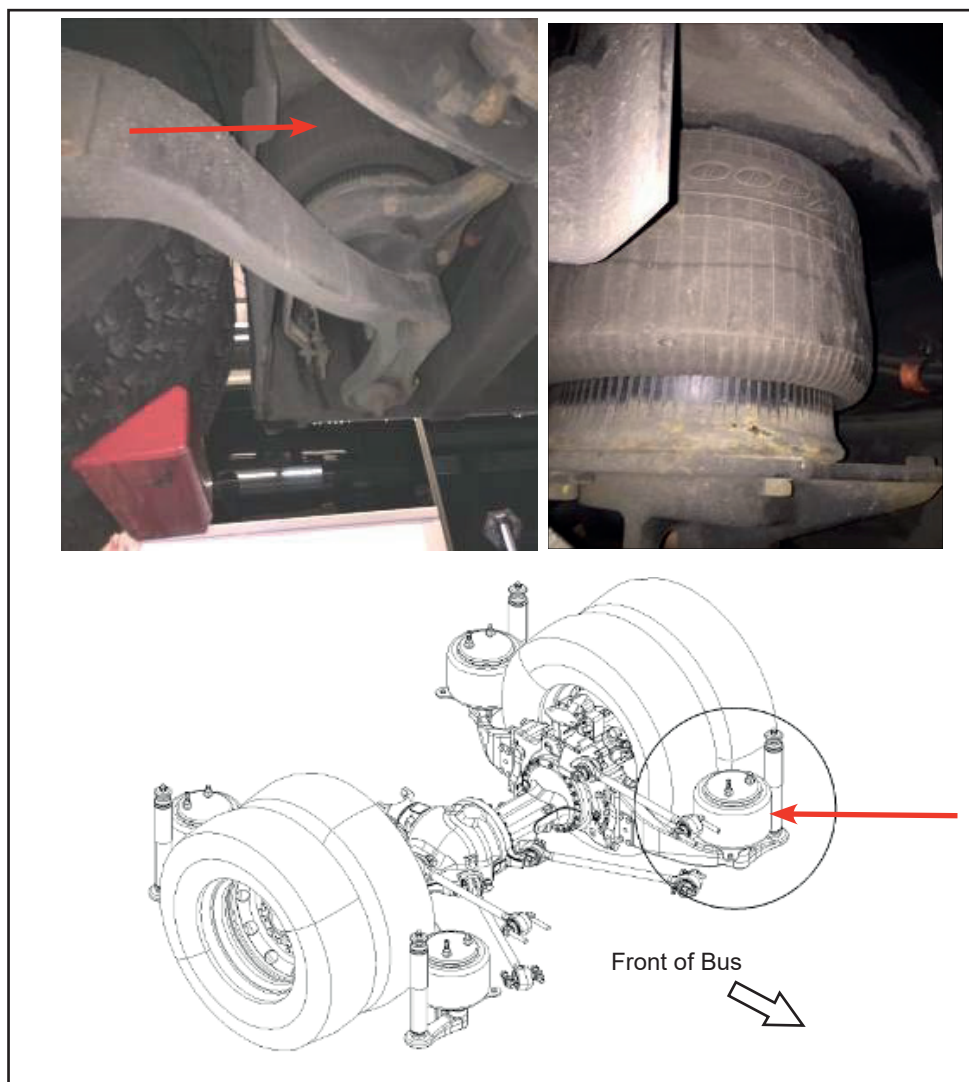


Figure 2 - Location of Rear Airbag

- 1.10. Using the jig NT1090, measure the distance from the air spring mounting plate and the bottom of the air bag structure to which the air bag is attached (See Figure 3).
- 1.11. Once the jig is in place, tighten the knob and remove the jig from the location.

**NOTE**

Make sure the jig is not touching the ridge of the frame and that the jig is flush. See picture of the incorrect condition.

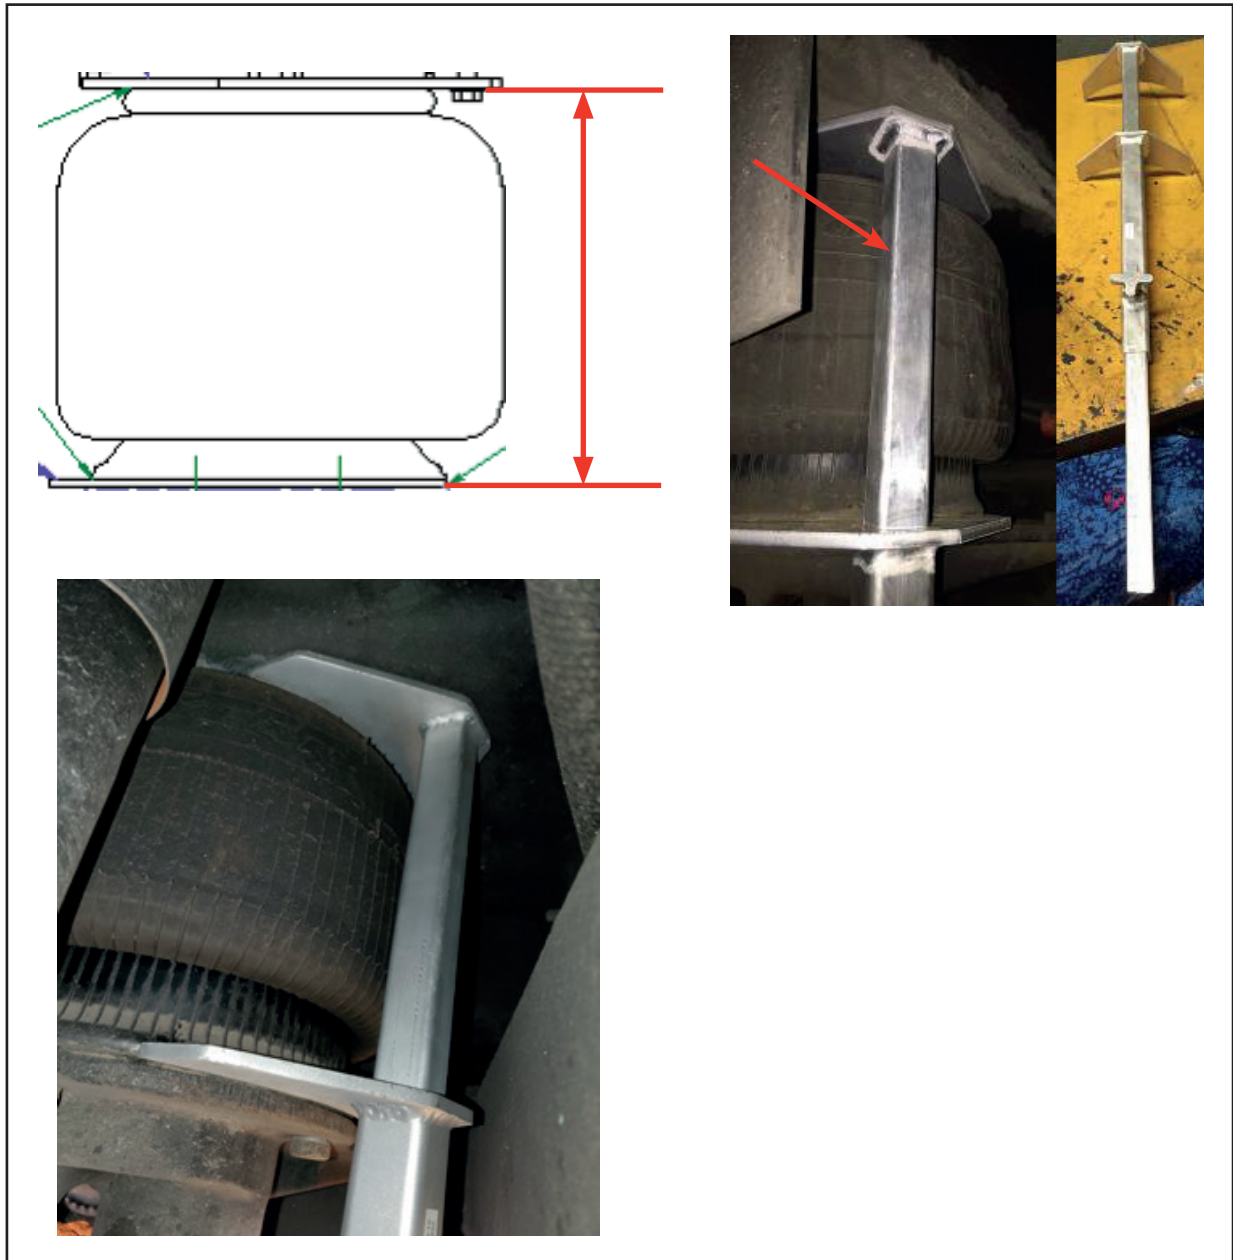


Figure 3 - Measurement of Air Springs - Rear

- 1.12. After removing the jig, measure the distance from the top of A to the bottom of B at the center of the jig using a measuring tape (See Figure 4). Confirm that the plate x plate distance is within the specification shown on table 1.

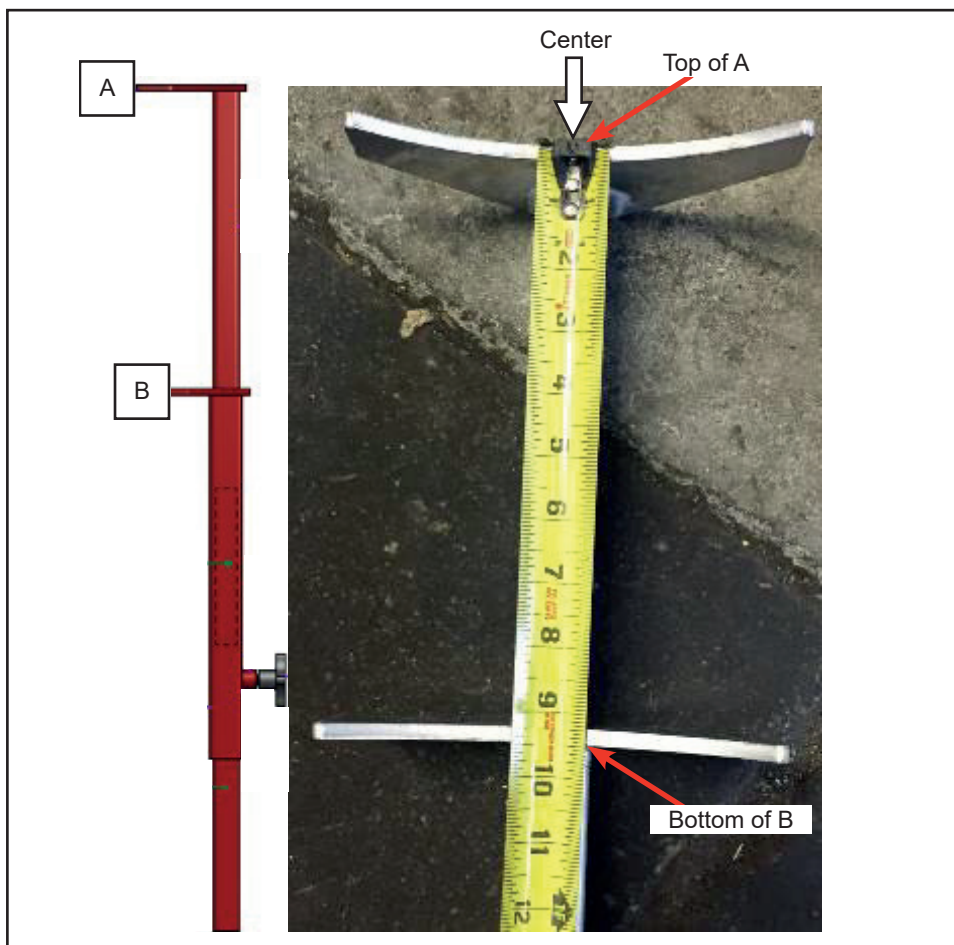


Figure 4 - Measuring the Distance From Top A to Bottom B

<b>Rear ride height Plate x Plate on lift specification</b>	<b>9 1/2" ± 1/4"</b>
<b>Minimum</b>	<b>9 1/4"</b>
<b>Maximum</b>	<b>9 3/4"</b>

Table 1 - Plate Distance

- 1.13. If the plate x plate measurement is not within specification, move on to the next step to adjust the rear plate x plate height.
- 1.14. Using a flathead screwdriver, loosen up the clamp attached to the top of the p-mount.

- 1.15. To increase the distance between the air spring mounting plates, slowly slide the p-mount downwards and the rod upwards.
- 1.16. To decrease the distance between the air spring mounting plates, slowly slide the p-mount upwards and the rod downwards (See Figure 5).

**NOTE**

Let the pneumatic system settle roughly 5 minutes before taking measurements between the air spring mounting plates.

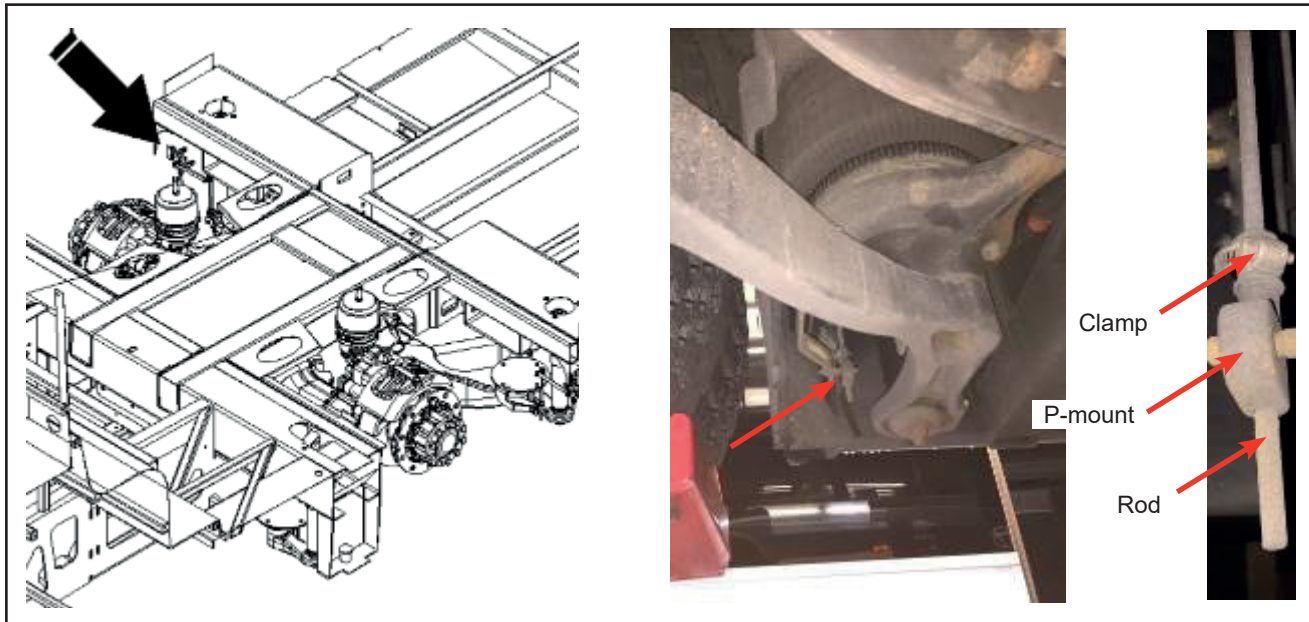


Figure 5 - Location of Airspring Mounting Plates

**NOTE**

The p-mount arm must be even with the p-mount or protrude slightly. It should never be inside the p-mount.

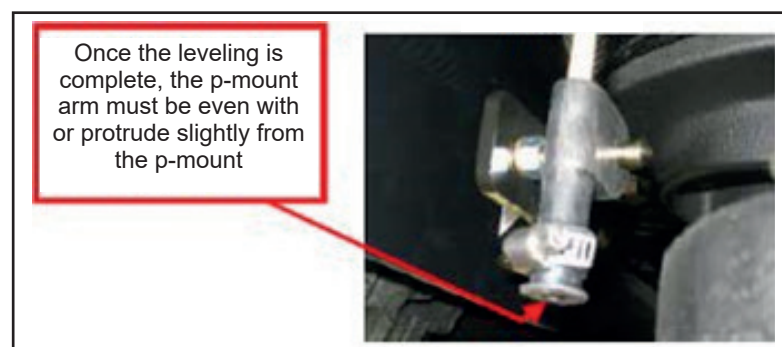


Figure 6 - View of P-mount arm

1.17. Recheck the ride height on the airbag and once the height specification is achieved, tighten the clamp.

**NOTE**

Do not over-tighten to avoid damaging the p-mount.

**NOTE**

To get more adjustment, it's possible to invert the position (flip) of the P-mount and tighten the clamps over the knurled area.

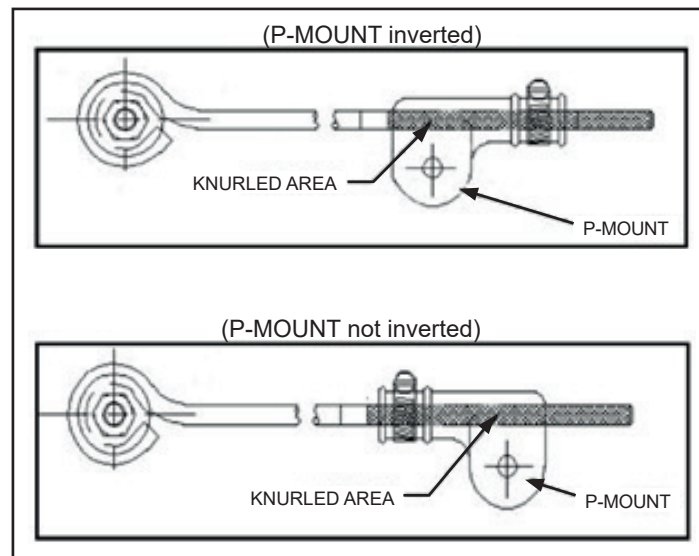


Figure 7 - Knurled Area of P-mount

1.18. Repeat the steps 1.8 to 1.16 for the right rear side.

## FRONT LEVELING

1.19. Locate the front left air bag (See Figure 8).

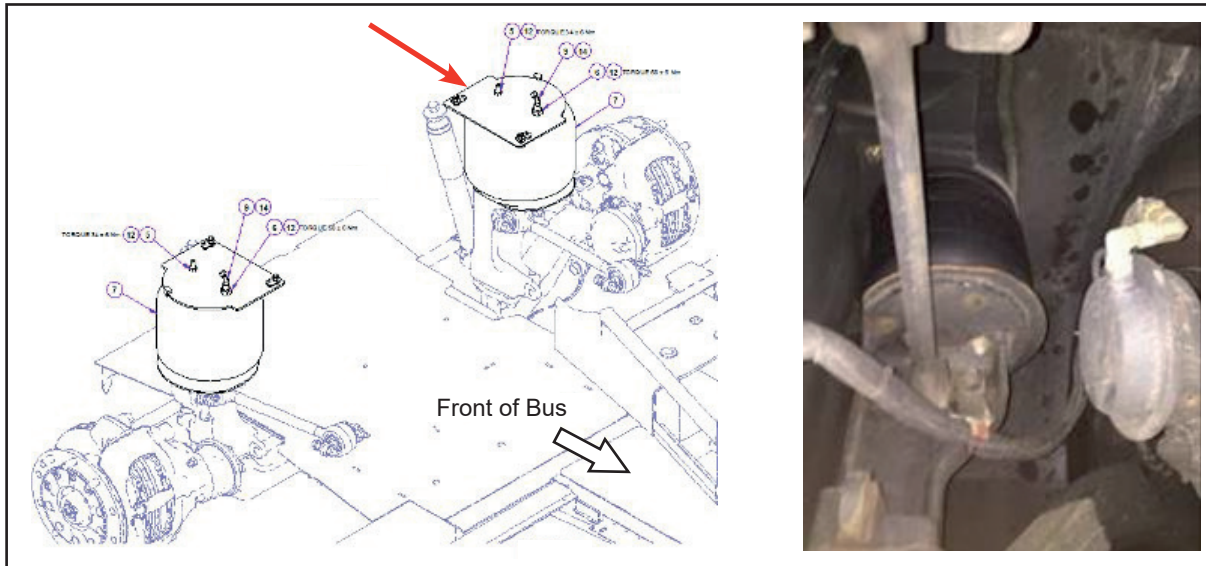
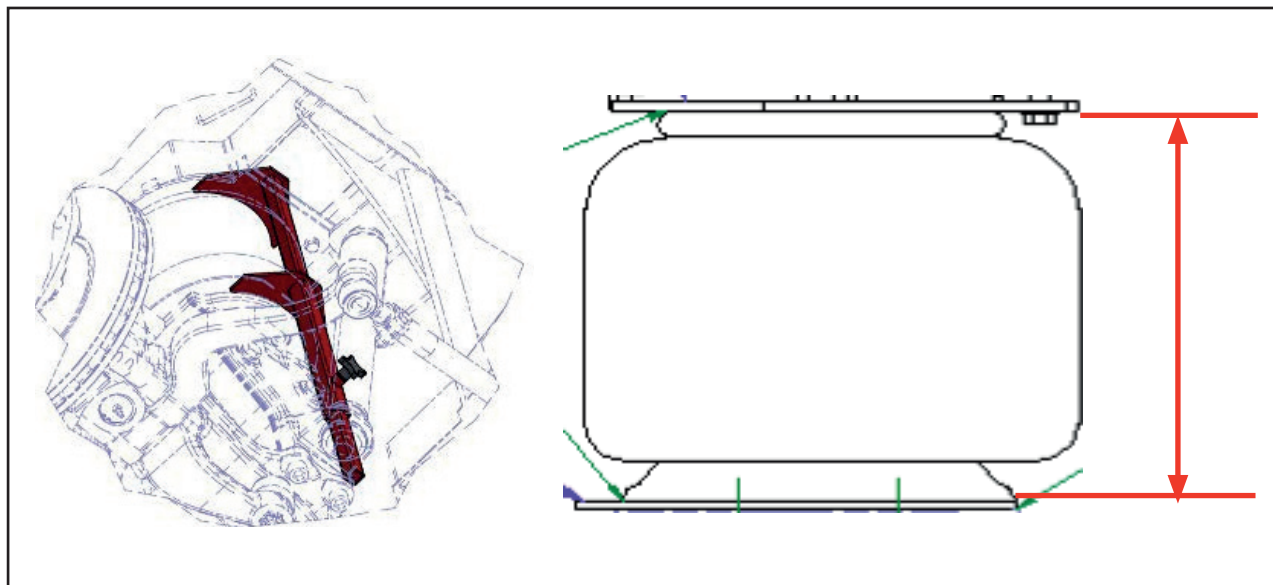


Figure 8 - Location of Front Airbag

1.20. Using the jig NT1090, measure the distance from the air spring mounting plate and the bottom of the air bag structure to which the air bag is attached.

1.21. Once the jig is in place, tighten the knob and remove the jig from the location (See Figure 9).



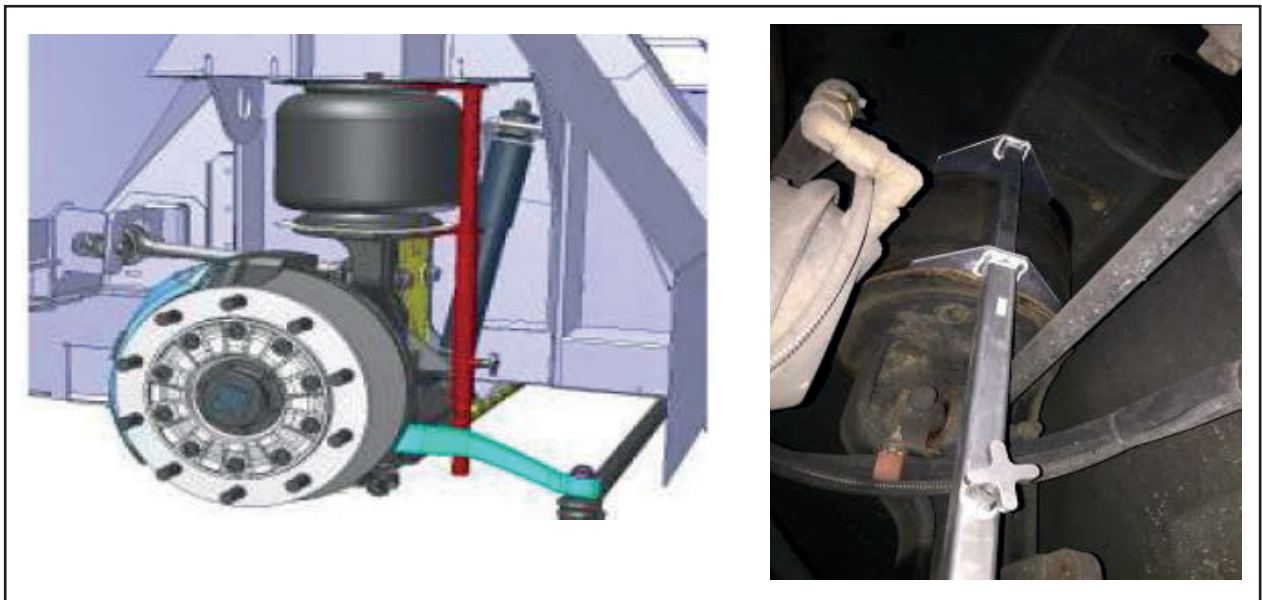


Figure 9 - Measurement of Air Springs - Front




**NOTE**

Make sure the jig is not touching any plate hardware and confirm that the jig is flush. See picture of potential hardware interference.



Figure 10 - Location of Hardware

- 1.22. After removing the jig, measure the distance from the top of A to the bottom of B at the center of the jig using a measuring tape. Confirm that the plate x plate distance is within the specification shown on table 2.

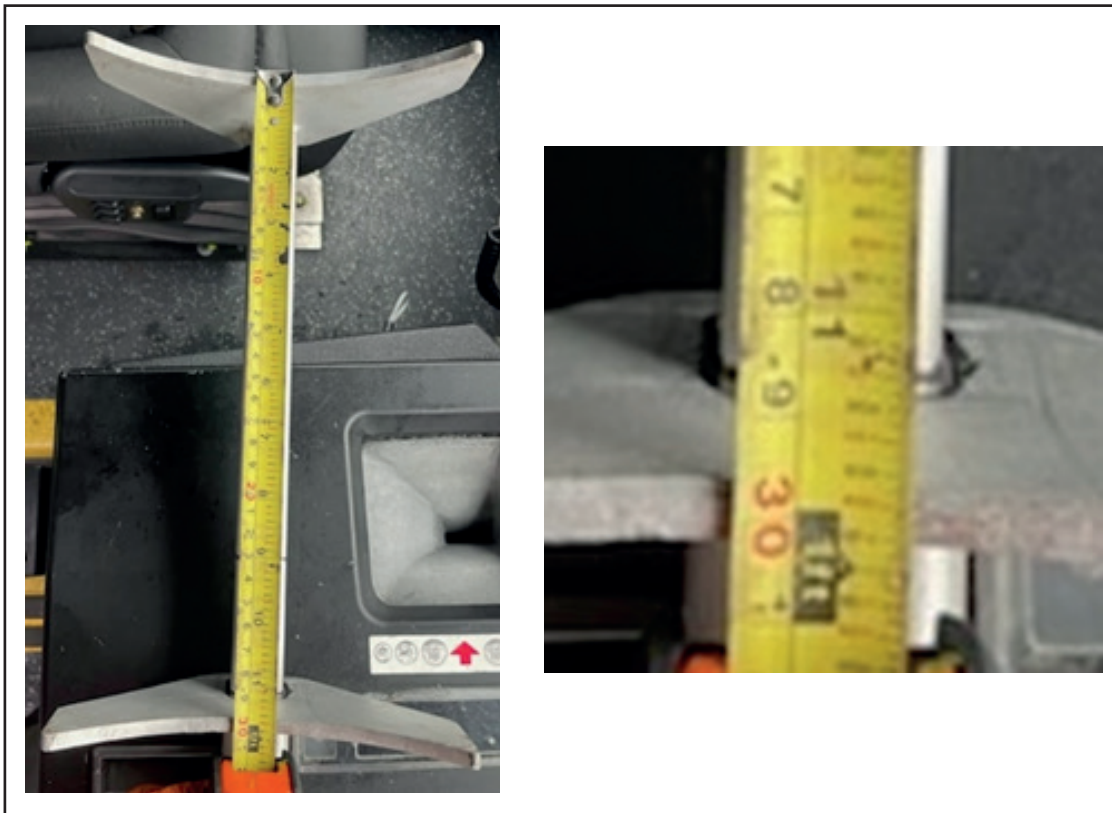

*Figure 11 - Measuring the Distance from Top A to Bottom B*



**NOTE**

If the measurement is not within specification, document the measurement.

<b>Front Ride Height Plate x Plate on lift specification</b>	<b>11 7/8" ± 1/8"</b>
<b>Minimum</b>	<b>11 3/4"</b>
<b>Maximum</b>	<b>12"</b>

*Table 2 - Plate Distance*

- 1.23. Repeat steps 14-16 for the front right side.
- 1.24. If the front left and the front right plate x plate measurements are not within specification, move on to the next step to adjust both of the front plate x plate heights.
- 1.25. Locate the center front leveling valve and remove the dust cover using a 10mm socket wrench (See Figure 12).

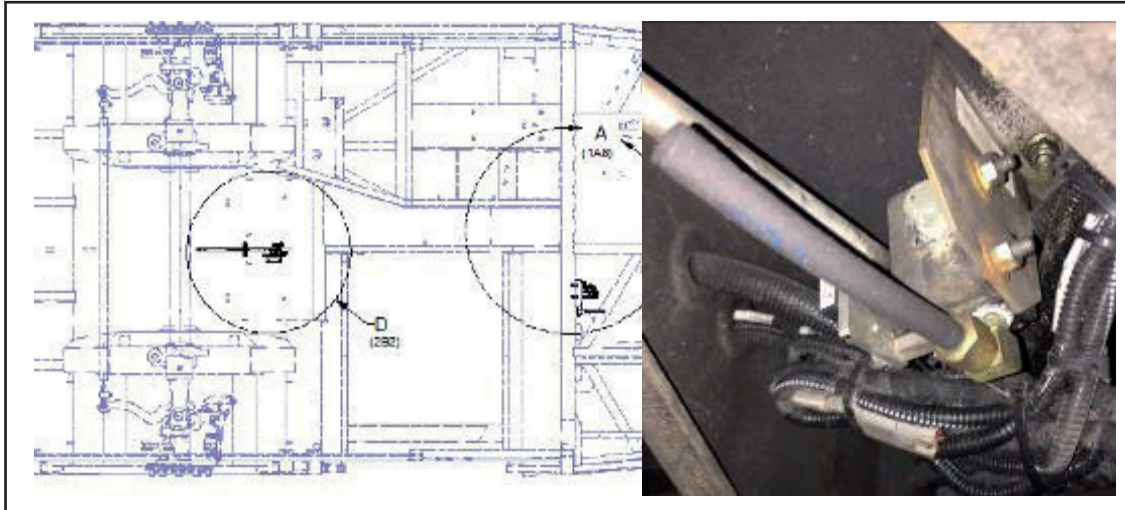


Figure 12 - Location of Center Front Leveling valve

- 1.26. Confirm that the arm and bracket on the front leveling valve is 90deg and straight. If the arm and bracket are not 90deg and straight (See Figure 13).
  - Loosen the M6 bolt using a 10mm socket wrench
  - Adjust the arm and bracket to be 90deg and straight
  - Tighten the bolt to  $8.1 \pm 0.75$  lb ft ( $11 \pm 1$  Nm) using a torque wrench and 10mm socket. Apply torque seal.

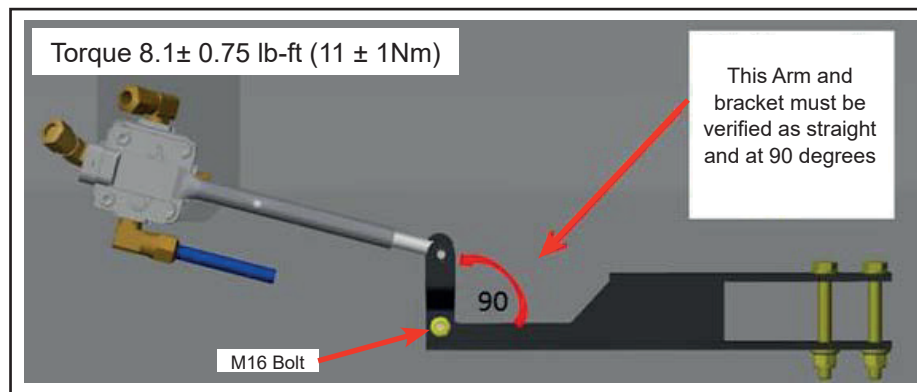


Figure 13 - Angle between the Arm and Bracket

- 1.27. Using a 11mm socket wrench, loosen up the 2x bolts on the center leveling valve. While facing the streetside of the bus, adjust the front right and left plate x plate height (See Figure 14).
- Push the valve towards the front of the bus along the slot to increase/inflate the air springs.
  - Push the valve towards the rear of the bus along the slot to decrease/deflate the air springs.

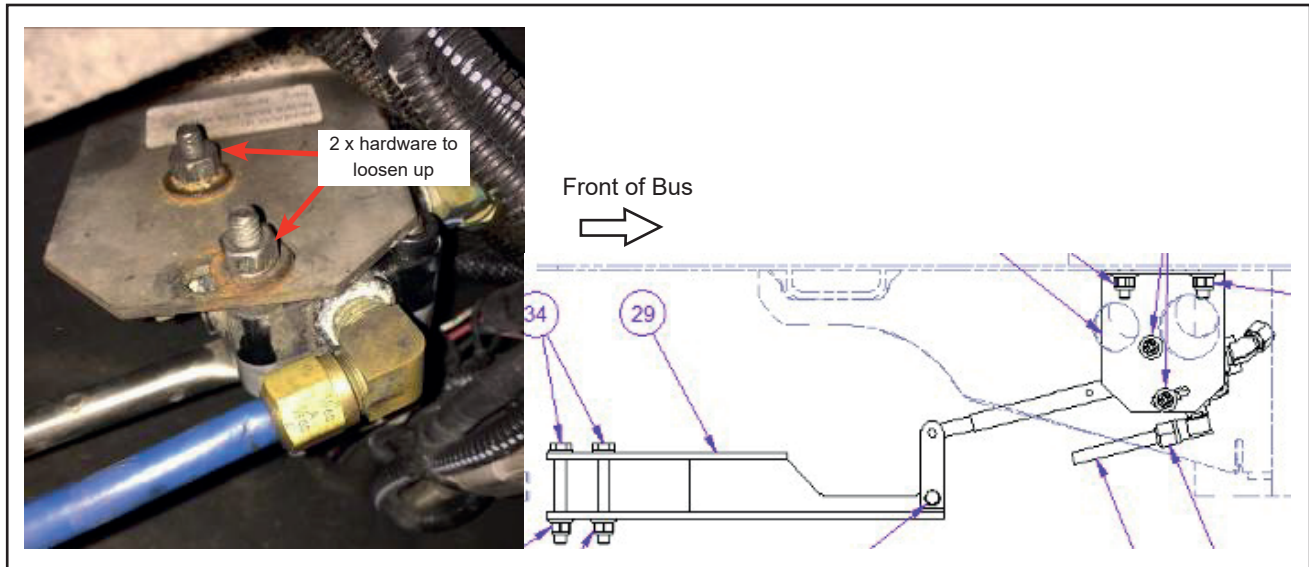


Figure 14 - Loosening the bolts on the Center Leveling Valve

- 1.28. Re-measure the front left and front right air spring plate x plate measurement using the jig to confirm if the height is within specification.



#### NOTE

Let the pneumatic system settle roughly 5 minutes before taking measurements between the air spring mounting plates.

- 1.29. If the FRONT plate x plate heights were adjusted and cannot meet specification with the leveling valve adjusted to max, adjust the REAR plate x plate measurement by returning to step 1.14 to 1.18.



#### NOTE

The rear left and rear right measurements may become out of specification when the front left and front right measurements become in specification. This is acceptable if the front measurements are within specification.

- 1.30. Re-measure the front left and front right air bag heights using the jig. Once the front right and front left plate x plate measurements are within specification, tighten the 2x bolts on the front leveling valve and torque to 3.7-4.4 lb ft (5-6 N•m) using a torque wrench and 11mm socket. Apply torque seal (See Figure 15).

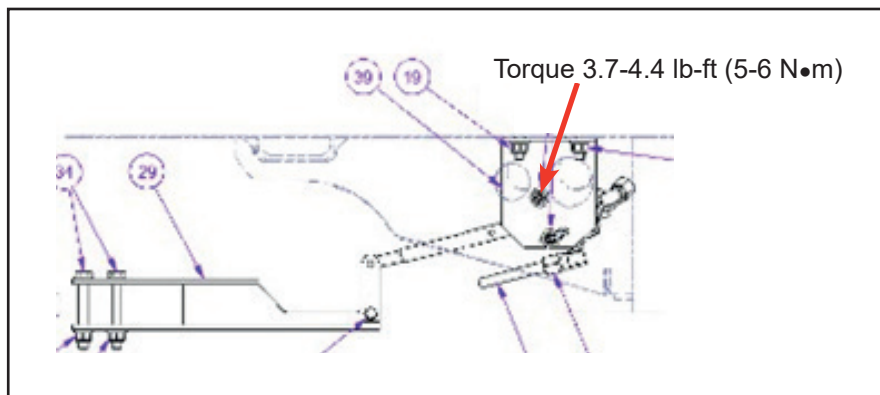


Figure 15 - Tightening the bolts

- 1.31. Reinstall the dust cover over the front center leveling valve.  
 1.32. Lower the vehicle.

**APPENDIX – REFERENCE MEASUREMENTS**

Refer to table 3 for reference vehicle front wheelchair ramp x ground height using a measuring tape.



**NOTE**

This height is only for reference purposes as the measurement is subjective based on the ground measuring from the table.

<b>Front ride height wheelchair ramp x ground specification</b>	<b>15 1/4" ± 1/4"</b>
<b>Minimum</b>	<b>15"</b>
<b>Maximum</b>	<b>15 1/2"</b>

Table 3 - Ground Measuring

## APPENDIX - KNEELING SYSTEM

**NOTE**

---

Make sure that the surface selected for the verification of the kneeling system is as level as possible.

**NOTE**

---

The installation of batteries or the connection of electrical terminals to an external power source is required for the following steps.

**NOTE**

---

The following tests are performed with an empty load (excluding the driver).

**NOTE**

---

Before performing these tests, make sure that all objects in the way are removed (e.g. safety supports).

**NOTE**

---

120 psi minimum in the reservoirs at all times and make sure that the doors have air.

- 1.33. Place the master control switch in the RUN position and front start the engine.
- 1.34. Place the kneeling and ramp master switch in the ON position (See Figure 16).

**NOTE**

---

Make sure that the ramp is retracted and that the doors are closed.

- 1.35. Activate the kneeling switch to begin kneeling (See Figure 16).

**NOTE**

---

Make sure that the underbody does not rest on the axle. No contact is allowed.



Figure 16 - Kneeling Switch

- 1.36. The alarm must sound during kneeling and the exterior yellow indicator lights must blink.
- 1.37. Check that the yellow dashboard tell-tale lights up and remains lit until the command to raise is given.
- 1.38. Allow the bus to settle.
- 1.39. Measure the kneeling height with a measuring tape in accordance to table 5 from the top of the wheelchair ramp floor to ground.



**NOTE**

This height is only for reference purposes as the measurement is subjective based on the ground measuring from the table.

<b>Front kneeling height wheelchair ramp x ground specification</b>	<b>11 1/8" -0" / +1/2"</b>
<b>Minimum</b>	<b>11 1/8"</b>
<b>Maximum</b>	<b>11 5/8"</b>

Table 4 - Ground Measuring

- 1.40. Activate the kneeling switch to start rising.



**NOTE**

The cycle ends when the brake interlock releases.

- 1.41. Turn off the master run switch.

# LEVELING VALVE KIT


## BOM FOR LEVELING VALVE KIT

- N30292 Linkage Kit 2 per bus if needed
- Kits includes items below
- Link x1
- Grommet x1
- 1/4" Stud x2
- Hose clamp x1
- P-mount x1
- Lock Washer 1/4 x4
- Hex Bolt 1/4 -20NC x4



**Linkage Kit being used with the leveling valve**

**The Kit includes:**

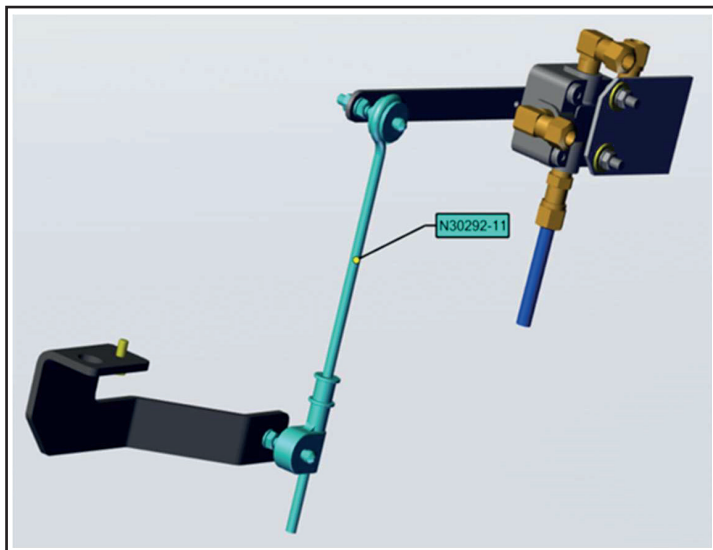

Link (P/N 22025-3)	1x
Grommet (P/N 26424)	1x
1/4" Stud	2x
Hose clamp (P/N 25921-6)	1x
P-Mount (P/N 26425-1)	1x
Lock Washer 1/4"	4x
Hex Bolt 1/4-20NC	4x

**NOTE**

For more information on the raising and lowering of the vehicle, refer to section 18: HOISTING AND TOWING of the Nova LFS maintenance manual. Respect your current internal safety procedures. Use the proper hoisting equipment for your safety.

1.42. Raise the vehicle to locate rear leveling valves, one on each side (See Figure 17).



Figure 17 - Location of Rear Leveling Valve

1.43. Loosen top and bottom nut (See Figure 18).


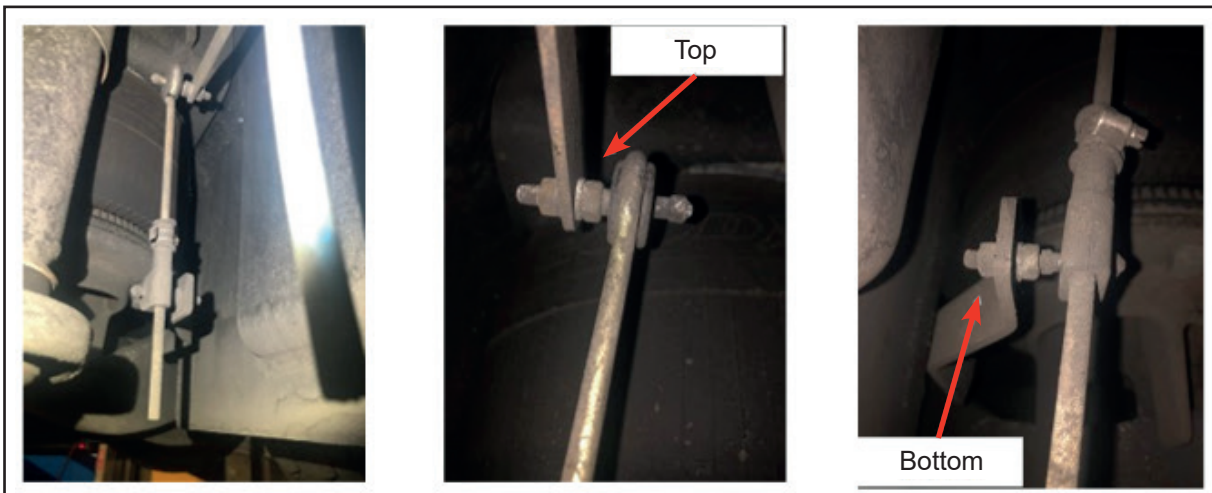


Figure 18 - Loosening the Nuts

1.44. Leveling valve with top and bottom nut loosened (See Figure 19).

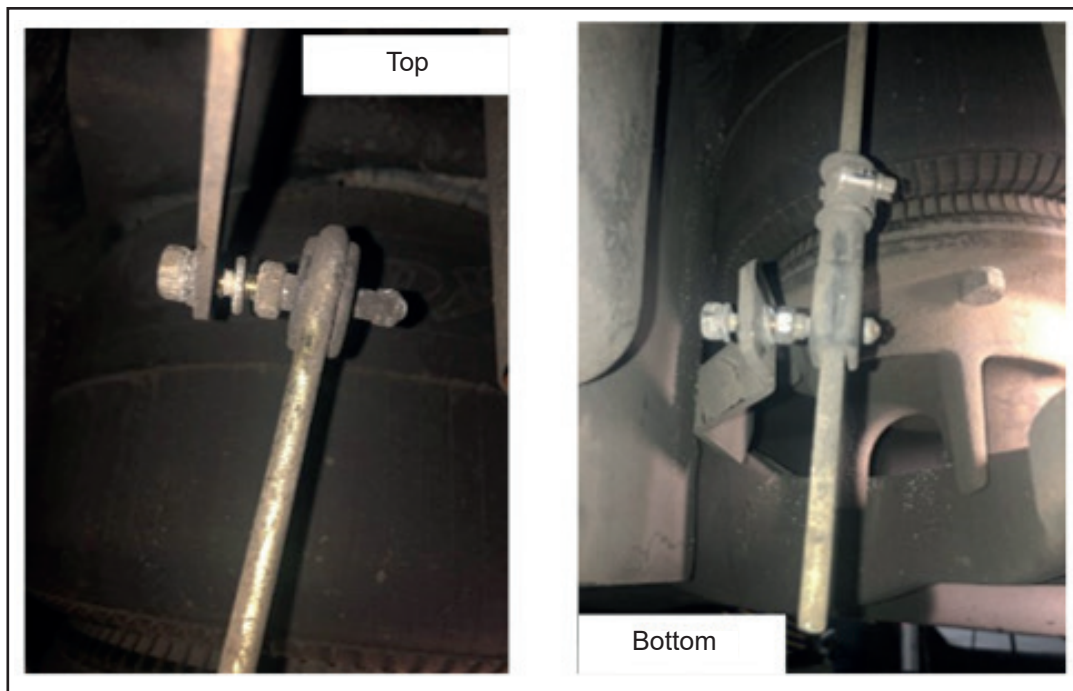

*Figure 19 - Leveling the Valve*

1.45. Leveling valve removed from the bus (See Figure 20).



*Figure 20 - Removal of Leveling Valve*

1.46. Pre-assemble new valve, adjustment will be done after installation (See Figure 21).

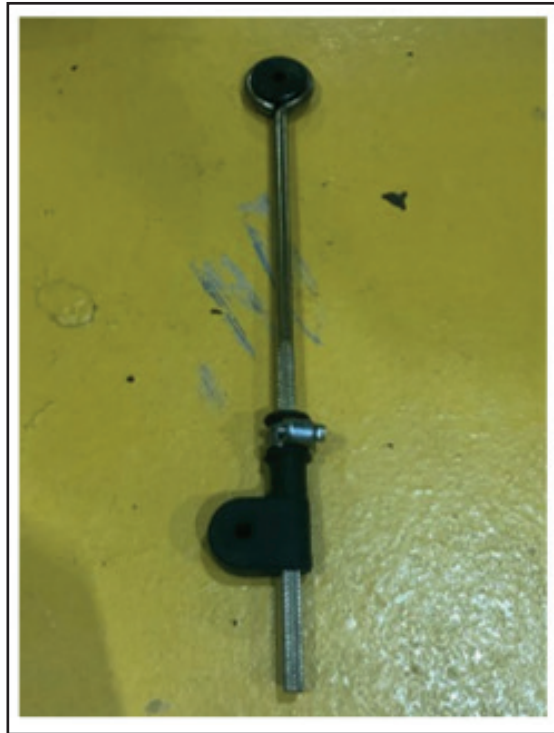


Figure 21 - Installation of New Valve

1.47. Install the support rod and hardware for top and bottom (See Figure 22).

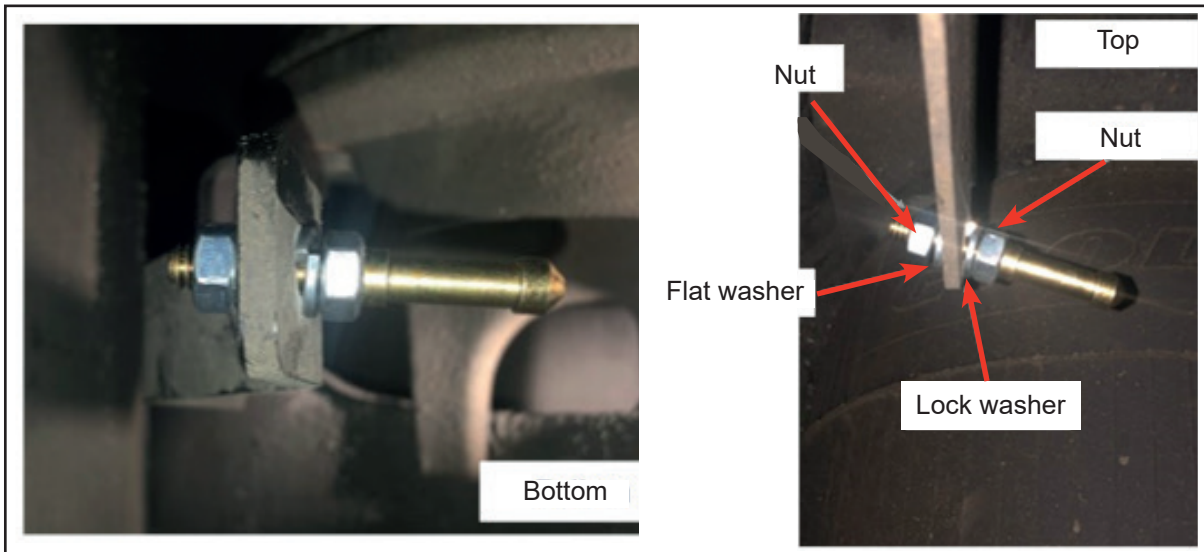


Figure 22 - Installation of Support Rod and Hardware

1.48. Secure top and bottom hardware and torque the nuts to  $8.1 \pm 0.75$  lb ft ( $11 \pm 1$  N•m) (See Figure 23).

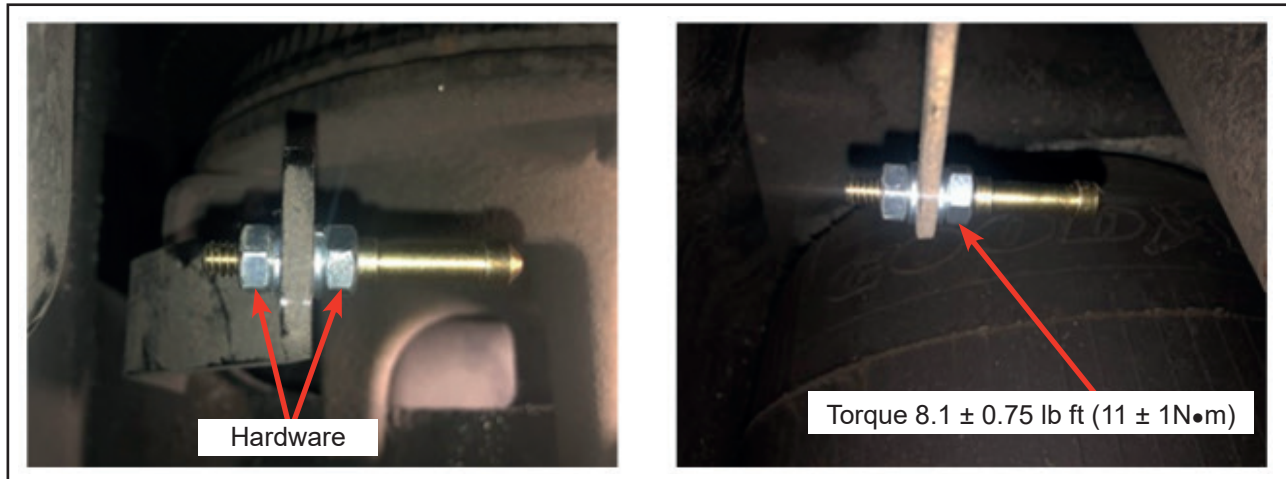


Figure 23 - Tightening the hardware

1.49. Slide the adjustment rods (See Figure 24).

1.50. Adjust leveling valve as per ride height instructions.


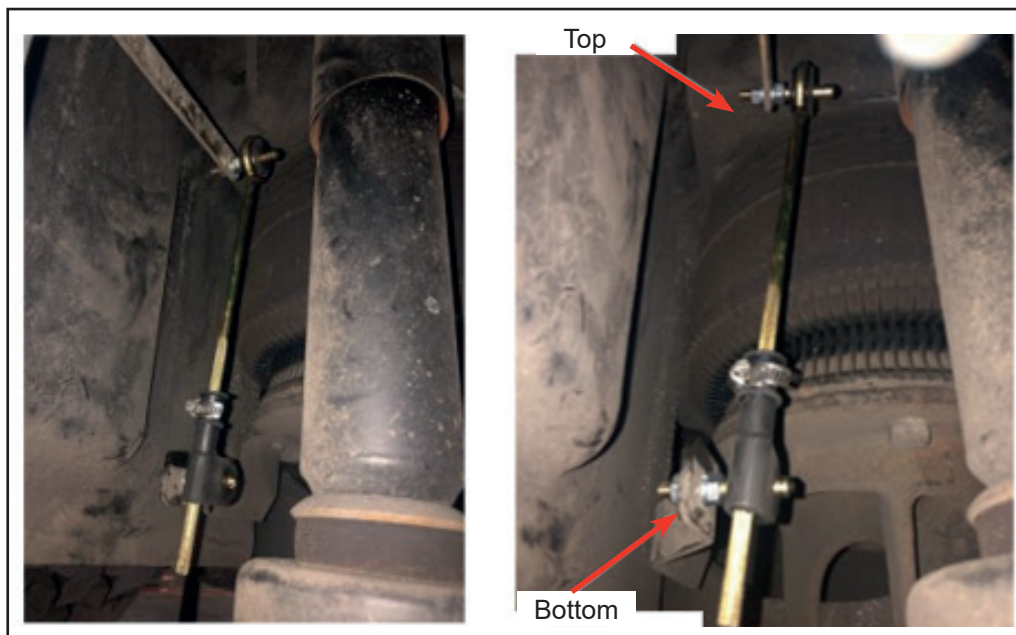


Figure 24 - Adjusting the Leveling valve

## REPLACEMENT OF STABILIZER BAR BRACKET AND BUSHING

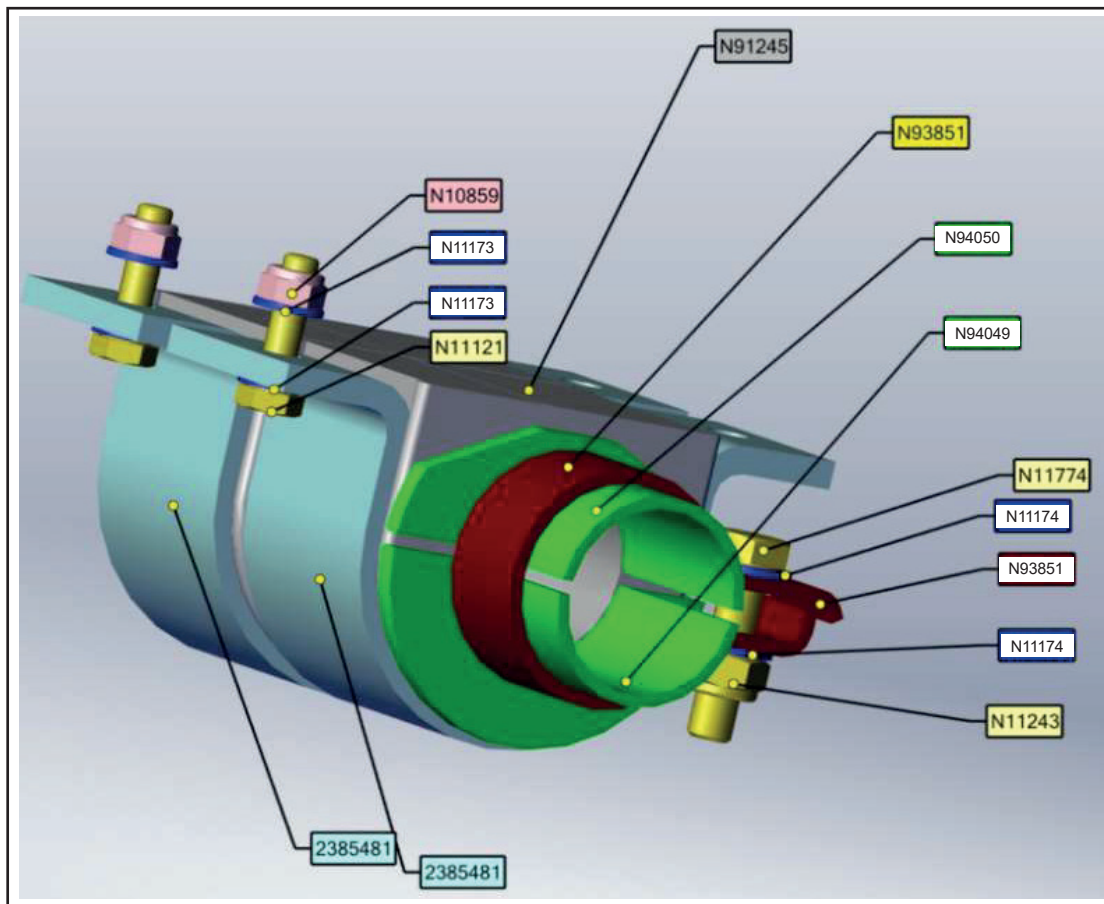

Item	Part	Description
1	2385481	Bracket Stabilizer Bar
2	N11121	Bolt M8 X 1,25 X 30
3	N11173	Washer Flat M8
4	N10859	Lock Nut M8 X 1,25
5	N94049	Retainer Stabilizer Bar
6	N94050	Retainer Stabilizer Bar
7	N93851	Clamp Retainer Stabilizer Bar
8	N11774	Bolt M10x40 Hx
9	N11243	Nut Locknyl M10
10	N11174	Washer Flat M10
11	N91245	Cushion Mounting

**TOOLS REQUIRED:**

- 13 mm socket

**WARNING**


**FOLLOW YOUR INTERNAL SAFETY PROCEDURES.**

- 1.51. Raise the vehicle.

**NOTE**

For more information on the raising and lowering of the vehicle, refer to section 18: **HOISTING AND TOWING** of the Nova LFS maintenance manual. Respect your current internal safety procedures. Use the proper hoisting equipment for your safety.

- 1.52. Locate the stabilizer bar brackets under the bus rear suspension and check for signs of damage (See Figure 25).

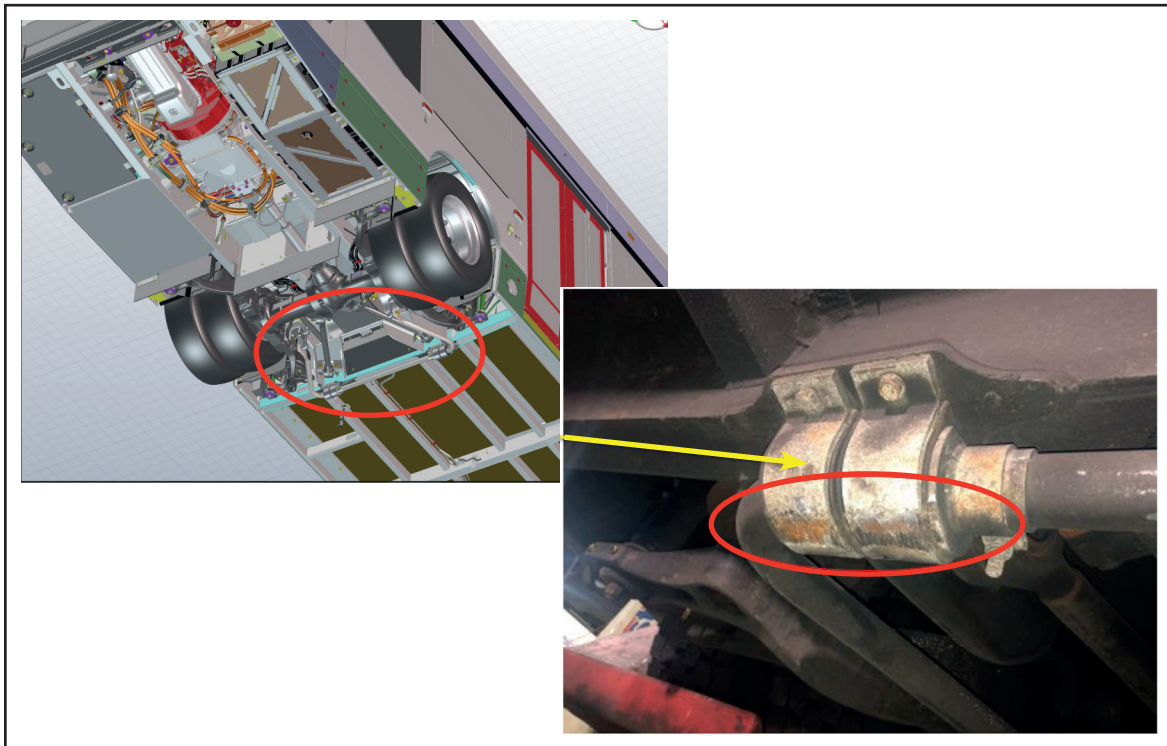

*Figure 25 - Location of Stabilizer Bar*

**NOTE**

Replace one at a time as to not displace stabilizer bar. Any part with signs of scrap or deform should be replaced.

- 1.53. Replace all the brackets hardware. Use 13mm socket to remove the hardware (See Figure 26).




*Figure 26 - Hardware Replacement*

- 1.54. Check Rubber bushing for damage and remove any damaged bushing with a small pry bar (See Figure 27).



*Figure 27 - Typical View of Damaged Bushing*

1.55. Remove and replace the bushing retaining clamp (See Figure 28).

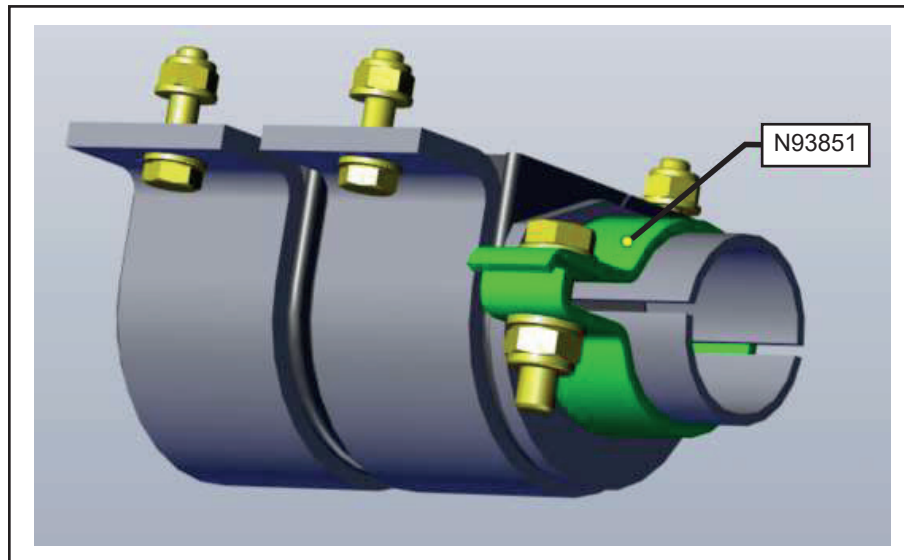

*Figure 28 - Removal of Retaining Clamp*

1.56. Install the new bushing (See Figure 29).

1.57. Add Never seez between roll bar and rubber bushings at installation.



*Figure 29 - Installation of New Bushing*

- 1.58. Install new bracket with new hardware (bolts, lock nuts and washers) in the front and rear (See Figure 30).



Figure 30 - Installation of Bracket and Hardware

- 1.59. Torque locknuts to  $18 \pm 2$  Nm and torque seal (See Figure 31).

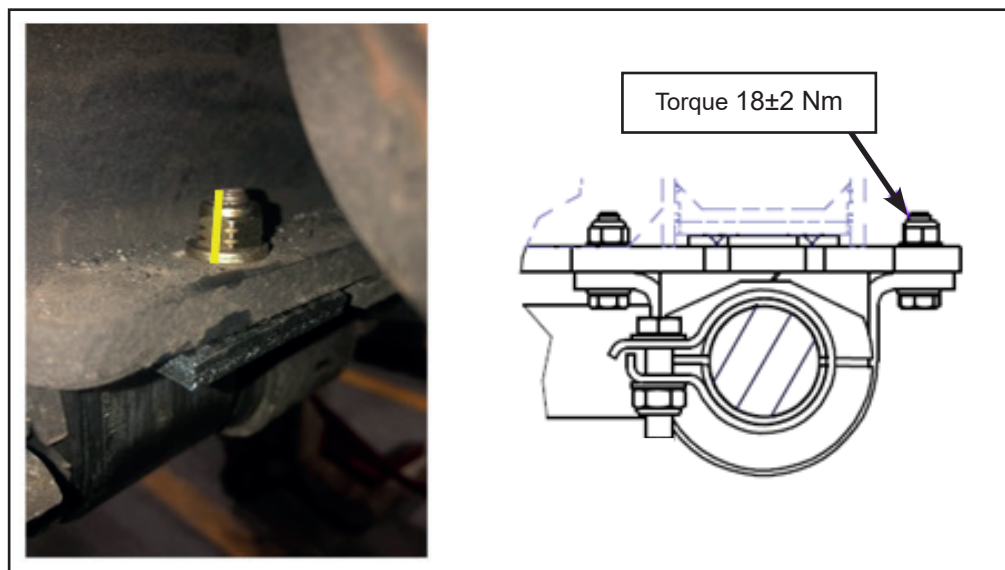


Figure 31 - Locknuts Tightening Torque

1.60. Torque locknuts to  $47 \pm 4$  Nm and torque seal (See Figure 32).

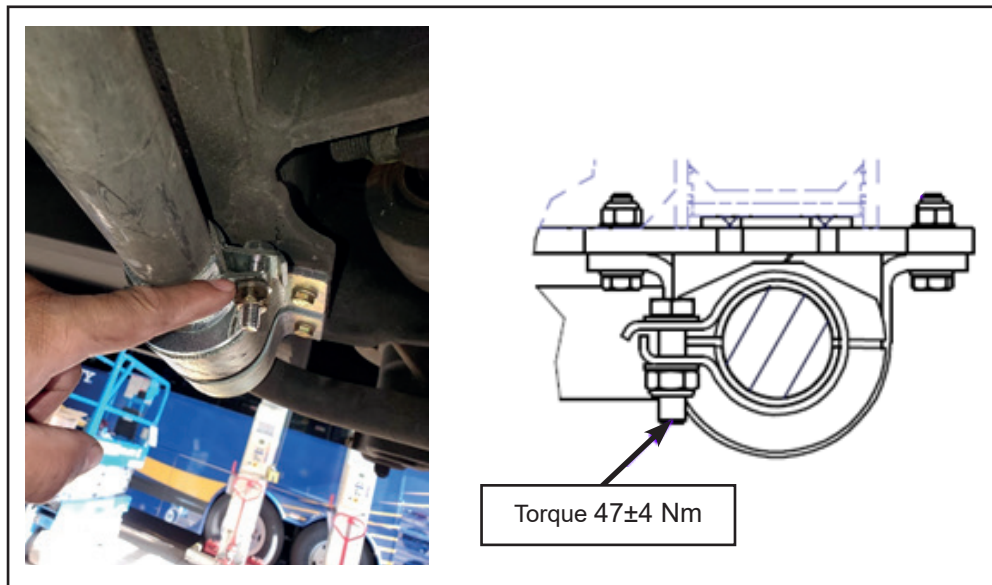


Figure 32 - Locknuts Tightening Torque

1.61. Lower the vehicle.

1.62. The vehicle can return in service.❖