

Case Number: S2208000041

Release Date: March 2022

**Symptom/Vehicle Issue:** Vehicle Only Runs In Gas Mode, Will Not Go Into Electric Mode With Or Without MIL Lamp On

**Customer Complaint/Technician Observation:** Customer states the vehicle does not go into Electric mode, during colder starts. Power Flow display shows "**Climate: 0 kW**" when requesting cabin heating.

LO	No Device	12:37	N	55° out.	73°	
+	Hybrid Electric	Pages > Po	wer Fl	ow	×	
Pawer Flow						Climate re "0 kW"
Driving	11			Hybrid Mo	de	7-
History Charging				Engine:	13 kW	
Schedule				Battery:	-6 V V	
	-			Climate:		
		-		onnate.	0 KW	
$\sim$	0 0	~	6			
Badio			(H			
Radio	Media Controle	a Apps	Clima	ate Nav	Phone	

This document does not authorize warranty repairs. This communication documents a record of past experiences. STAR Online does not provide any conclusions about what is wrong with the vehicle. Rather, it captures all previous cases known that appear to be similar or related to the vehicle symptom / condition. You are the expert, and you are responsible for deciding on the appropriate course of action.

## Contact STAR Center, or your Technical Assistance Center Via TechCONNECT or eCONTACT ticket if no solution is found



Scenario A) MIL lamp is on and/or pending DTCs

Technician observed - One or all of the following DTC's:

- P0E15-00 Hybrid/EV Battery Pack Coolant Heater "A" Control Performance needs to be present for reset
- U1008-00 LIN BUS 1 repair first
- U1124-00 Lost Communication With LIN ECU 4 repair first
- P0562 System Voltage Low repair first
- P0563 System Voltage Low repair first

Scenario B) No MIL Lamp on and no pending faults active

Verify high voltage (ECH) coolant heater status for repair procedure.

### **Repair Procedure:**

Heater status can be "Locked Until Next Start", "Locked Until Next Service", "Locked Permanent", or "OFF" the status indicates there may be a system issue which has caused the heater protection to engage. Some conditions that can contribute to the status change with the cooling system (blockage / low coolant / trapped air), heater low voltage supply, and heater high voltage supply issues need to be assessed and resolved prior to heater replacement.

To repair, start by performing the service diagnostics for any LV (low voltage), HV (high voltage) system DTC's and U1008-00, and/or U1124-00 and other related DTC's. For intermittent concerns, clean and secure the involved system component grounds (see below).

# NOTE: Use wiTech to verify the HV coolant heater status. The Electric Coolant Heater (ECH) status can be found under the HCP > DATA folder (example below).

## OFF

• ECH operation is normal, continue with published service procedures to diagnose.

## Locked Until Next Start

 The following conditions may lead to the ECH being in a LOCKED UNTIL NEXT START condition:

This document does not authorize warranty repairs. This communication documents a record of past experiences. STAR Online does not provide any conclusions about what is wrong with the vehicle. Rather, it captures all previous cases known that appear to be similar or related to the vehicle symptom / condition. You are the expert, and you are responsible for deciding on the appropriate course of action.

Contact STAR Center, or your Technical Assistance Center Via TechCONNECT or eCONTACT ticket if no solution is found



-Out of range low voltage
-Out of range high voltage
-Loss of communication
-Temporary internal memory error
-Coolant or electronics overheat protection event

Requires service inspection for coolant leaks, air in the system, HV and LV supply issues, LIN network continuity.

• The heater will re-attempt operation after a power-cycle

## LOCKED UNTIL NEXT SERVICE

- The ECH has accumulated three overheat protection events.
- Requires service inspection for leaks, air in the system, and ECH unlock.
- o Follow the "Cabin Overheat Lock Reset" see routine using wiTECH
  - From the topology screen go to the HCP Misc Functions > Cabin Overheat Lock Reset > follow wiTECH Prompts
  - DTC P0E15-00 Must be present to proceed with the Unlock (see below)
  - DTC's U1008-00, U1124, and other related DTC's must be resolved/cleared/not present to perform unlock
- Possible Causes: system coolant leaks, power supply issues/connections at ECH or High Temp AUX pump, the High Temp Aux Pump, restricted coolant lines (including frozen coolant in very cold ambient conditions), air in system, and/or ECH internal failure.

#### LOCKED PERMANENT

- **The ECH must be replaced**, this status can't be recovered or reset, requires ECH to be replaced and also requires further service inspection for leaks, or air in the system, or coolant circulation problems (pump failure or blocked flow).
- This status sets if the heater has an internal hardware defect or has been unlocked (using the Cabin Overheat Lock Reset procedure noted above) more than 3 times.

Contact STAR Center, or your Technical Assistance Center Via TechCONNECT or eCONTACT ticket if no solution is found

This document does not authorize warranty repairs. This communication documents a record of past experiences. STAR Online does not provide any conclusions about what is wrong with the vehicle. Rather, it captures all previous cases known that appear to be similar or related to the vehicle symptom / condition. You are the expert, and you are responsible for deciding on the appropriate course of action.



Possible Causes: system coolant leaks, power supply issues/connections at ECH or High Temp AUX pump, the High Temp Aux Pump, restricted coolant lines (including frozen coolant in very cold ambient conditions), air in system, and/or ECH internal failure.

EXAMPLE HV COOLANT HEATER STATUS - DATA VIEW

HV Coolant Heater Status	HCP / Data View	Locked Permanent	Sensors
HV Coolant Heater Status		Off	Sensors
HV Coolant Heater Status		Locked Until Next Service	Sensors

### HCP

Flash	DTCs	Data	Misc Functions	System Tests	Actuators	Details	Configuration
NAME							
Cabin Ov	erheat Lo	ck Reset	5				
High Ten	np Coolan	t Fill - Aux	Pump				
Low Tem	np Coolant	t Fill - Activ	ve Pump				
Low Tem	p Coolant	t Fill - Pass	ive Pump				
Park Pav	vI Actuator	r Control					
Reset Clu	utch Capa	city Adapt	ion				
Reset Hi	gh Voltage	e Cable Op	en DTC				

This document does not authorize warranty repairs. This communication documents a record of past experiences. STAR Online does not provide any conclusions about what is wrong with the vehicle. Rather, it captures all previous cases known that appear to be similar or related to the vehicle symptom / condition. You are the expert, and you are responsible for deciding on the appropriate course of action.

Contact STAR Center, or your Technical Assistance Center Via TechCONNECT or eCONTACT ticket if no solution is found

Cabin Overheat Lock Reset Cabin Overheat Lock Reset Cabin Overheat Lock Reset This procedure is used to unlock electric cabin heat function and is required to clear HCP DTC P0E15-00. The following conditions must be fulfilled before the reset can be completed: HCP DTC P0E15-00 (Hybrid/EV Battery Pack Coolant Heater "A" Control Performance) MUST be preser HCP DTC U1008-00 (LIN 1 Bus) CANNOT be present HCP DTC U1124-00 (Lost Communication With LIN ECU 4) CANNOT be present ECH inlet temperature MUST be below 75 deg C (167 deg F)		STAN	CHRYSLE	PUI	BLICATIO	N		leen	<b>SN</b>	
<ul> <li>This procedure is used to unlock electric cabin heat function and is required to clear HCP DTC P0E15-00.</li> <li>The following conditions must be fulfilled before the reset can be completed:         <ul> <li>HCP DTC P0E15-00 (Hybrid/EV Battery Pack Coolant Heater "A" Control Performance) MUST be preser</li> <li>HCP DTC U1008-00 (LIN 1 Bus) CANNOT be present</li> <li>HCP DTC U1124-00 (Lost Communication With LIN ECU 4) CANNOT be present</li> </ul> </li> </ul>	PAR.		Court of	>	DODG		IJ	Jeep	RAM	SR
<ul> <li>This procedure is used to unlock electric cabin heat function and is required to clear HCP DTC P0E15-00.</li> <li>The following conditions must be fulfilled before the reset can be completed:         <ul> <li>HCP DTC P0E15-00 (Hybrid/EV Battery Pack Coolant Heater "A" Control Performance) MUST be preser</li> <li>HCP DTC U1008-00 (LIN 1 Bus) CANNOT be present</li> <li>HCP DTC U1124-00 (Lost Communication With LIN ECU 4) CANNOT be present</li> </ul> </li> </ul>							_			
<ul> <li>The following conditions must be fulfilled before the reset can be completed:</li> <li>HCP DTC P0E15-00 (Hybrid/EV Battery Pack Coolant Heater "A" Control Performance) MUST be preser</li> <li>HCP DTC U1008-00 (LIN 1 Bus) CANNOT be present</li> <li>HCP DTC U1124-00 (Lost Communication With LIN ECU 4) CANNOT be present</li> </ul>	Cal	bin Overhe	e <mark>at Lock Re</mark> s	set						
<ul> <li>The following conditions must be fulfilled before the reset can be completed:</li> <li>HCP DTC P0E15-00 (Hybrid/EV Battery Pack Coolant Heater "A" Control Performance) MUST be preser</li> <li>HCP DTC U1008-00 (LIN 1 Bus) CANNOT be present</li> <li>HCP DTC U1124-00 (Lost Communication With LIN ECU 4) CANNOT be present</li> </ul>										
<ul> <li>The following conditions must be fulfilled before the reset can be completed:</li> <li>HCP DTC P0E15-00 (Hybrid/EV Battery Pack Coolant Heater "A" Control Performance) MUST be preser</li> <li>HCP DTC U1008-00 (LIN 1 Bus) CANNOT be present</li> <li>HCP DTC U1124-00 (Lost Communication With LIN ECU 4) CANNOT be present</li> </ul>										
<ul> <li>HCP DTC P0E15-00 (Hybrid/EV Battery Pack Coolant Heater "A" Control Performance) MUST be preser</li> <li>HCP DTC U1008-00 (LIN 1 Bus) CANNOT be present</li> <li>HCP DTC U1124-00 (Lost Communication With LIN ECU 4) CANNOT be present</li> </ul>	This pro	oodura ia uga	d to uplock alact	rio onhi	in host function	and in roqui	rad ta	oloor UCD		15.00
<ul> <li>HCP DTC U1008-00 (LIN 1 Bus) CANNOT be present</li> <li>HCP DTC U1124-00 (Lost Communication With LIN ECU 4) CANNOT be present</li> </ul>	This pro	cedure is use	d to unlock electi	ric cabi	in heat function	and is requi	red to	clear HCP	DTC POE	15-00.
<ul> <li>HCP DTC U1124-00 (Lost Communication With LIN ECU 4) CANNOT be present</li> </ul>								clear HCP	DTC POE	15-00.
	The follo	wing conditio	ons must be fulfil	led bef	ore the reset ca	n be comple	ted:			
<ul> <li>ECH inlet temperature MUST be below 75 deg C (167 deg F)</li> </ul>	The follo • HC	wing condition	ons must be fulfil 5-00 (Hybrid/EV B	led bef Battery	ore the reset ca Pack Coolant H	n be comple	ted:			
	The follo • HC • HC	owing condition PDTC P0E15 PDTC U1008	ons must be fulfil 5-00 (Hybrid/EV B 3-00 (LIN 1 Bus) (	led bef Battery CANNC	ore the reset ca Pack Coolant H )T be present	n be comple eater "A" Cor	ted: ntrol F	Performanc		
	The follo • HC • HC • HC • EC	owing condition P DTC P0E15 P DTC U1008 P DTC U1124 H inlet tempe	ons must be fulfil 5-00 (Hybrid/EV E 3-00 (LIN 1 Bus) ( 1-00 (Lost Comm	led bef Battery CANNC hunicat below	ore the reset ca Pack Coolant H OT be present ion With LIN EC 75 deg C (167 d	n be comple eater "A" Cor J 4) CANNO eg F)	ted: ntrol F	Performanc		

Please select Continue.

Inspect the cooling system for any leaks or kinked damaged hoses, verify the coolant system is full and run the High Temp Coolant Fill - AUX PUMP routine to purge the system for air as needed.



#### Inspect system grounds

This document does not authorize warranty repairs. This communication documents a record of past experiences. STAR Online does not provide any conclusions about what is wrong with the vehicle. Rather, it captures all previous cases known that appear to be similar or related to the vehicle symptom / condition. You are the expert, and you are responsible for deciding on the appropriate course of action.

Contact STAR Center, or your Technical Assistance Center Via TechCONNECT or eCONTACT ticket if no solution is found



See TSB 08-052-22 as needed

This document does not authorize warranty repairs. This communication documents a record of past experiences. STAR Online does not provide any conclusions about what is wrong with the vehicle. Rather, it captures all previous cases known that appear to be similar or related to the vehicle symptom / condition. You are the expert, and you are responsible for deciding on the appropriate course of action.

Contact STAR Center, or your Technical Assistance Center Via TechCONNECT or eCONTACT ticket if no solution is found