

2023-02-14

[illegible]

NOTE

Bench testing the battery may result in a higher voltage reading.

- b. If bench tested at 2.4 VDC and lower, the battery should be replaced.

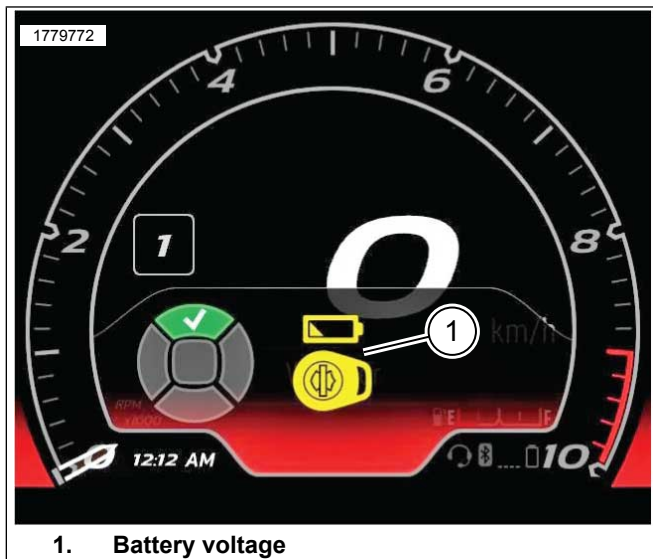


Figure 2. Instrument Module

4. Do not remove any other components besides the battery from inside the FOB.
5. When replacing the battery:
 - a. Be careful not to touch any of the internal circuitry.
 - b. Be careful not to touch any of the electrical terminals.
 - c. Be careful not to bend the electrical terminals while replacing the battery.
 - d. Be careful not to get dirt in the transmitter as the transmitter could be damaged.
 - e. See Figure 3. If the terminal on the FOB cover is bent, it will not be able to make proper contact with the opposing circuit board. Make sure latch distance is 4.9-5.8mm (1) from the inside surface of the cover.

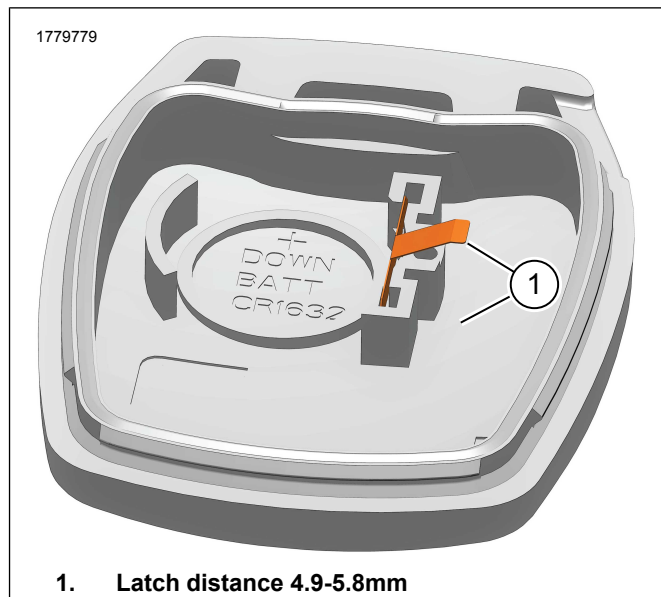


Figure 3. Metal Contact