

OTA 2.0.58 Apple Car Play and Other Minor Updates

OVERVIEW

[Apple CarPlay®](#)

[Other Minor Updates & Improvements](#)

APPLE CARPLAY®

With this update, we're introducing Apple CarPlay® support, allowing you to seamlessly integrate your iPhone® with the Glass Cockpit in your Lucid Air and use your favorite features from your iPhone with minimal distraction. Activate Siri® with the push of a button and play music and podcasts, access Maps and other apps, make calls, and send messages without taking your eyes off the road.

You can connect your compatible iPhone to your vehicle and use Apple CarPlay either wirelessly or via a USB cable.

Once you've connected your iPhone to your Lucid Air, you can launch Apple CarPlay at any time from the Right Cockpit Panel by tapping the Apple CarPlay button. To make sure Apple CarPlay is enabled for a previously paired device, go to Settings > Connectivity > Devices and make sure the Apple CarPlay button next to the name of the iPhone you want to use is on.

To activate Siri whenever CarPlay is active, long press the Voice button on your steering wheel or tap and hold the CarPlay Dashboard/Home button on the Right Cockpit Panel.

If you'd like to return to Lucid UX, your vehicle's infotainment system, tap the LUCID tile in Apple CarPlay or your vehicle's Home button on the Right Cockpit Panel. Even when Apple CarPlay is active, all your essential vehicle settings will remain available on the Pilot Panel.

OTHER MINOR UPDATES & IMPROVEMENTS

- We've changed how your vehicle responds if you attempt to drive with the frunk open. When the frunk is unlatched, your vehicle speed will be limited to 10 mph (16 km/h) and a message will appear on the Glass Cockpit saying, 'Frunk Open, Speed Limited.'
- We're delivering general improvements to the system that allows you to access your vehicle and controls its closures, security features, and certain comfort features.
- We've improved the scheduling settings for Scheduled Charging.