



Volvo Chassis - BEV PC04 VNRe ESS (Traction Battery) Locations



This is to assist in locating batteries on Phase 1 and 2 VNRe units. Keep in mind that the low voltage connections must be confirmed prior to replacement of the contactor box or Battery. The cable lengths will allow them to be switched between batteries.

VNRe			
Component	Number	# on Dwg	Location
ESS	1/A	G22 (A)	Left Side Upper
ESS	2/B	G22B	Left Side Lower
ESS	3/C	G22C	Right Side Lower
ESS	4/D	G22D	Right Side Upper
ESS	5/E	G22E	Rear Cab Lower
ESS	6/F	G22F	Rear Cab Upper
Note: Some ESS LV cable lengths permit switching between battery packs			



Tags

[bev](#)

[traction battery](#)

[volvo](#)

Categories 

Vehicle System > Battery Electric Systems

Vehicle System > Battery Electric Systems > Energy Storage

Vehicle System > Battery Electric Systems > Traction System

Related links and attachments

No links or attachments available



Feedback

[Give feedback](#) to help improve the content of this article