

What can we help you find?

SEARCH

[Help Center Home](#) / [Article](#)

4/6/2023

2014+ Chieftain Clutch Lever Inspection and Adjustment

Indian Chieftain Clutch Lever Inspection and Adjust...



Required Tools and Supplies	
Adjustable Wrench	Flathead Screwdriver or Pick
Moly Assembly Grease or All-Purpose Grease	14mm Crowfoot Wrench
10mm Socket	13mm and 14mm Wrenches
Ratchet	Torque Wrench
Shop Rags	Safety Glasses & Nitrile Gloves

To learn more about tools, read the [Tools and Fasteners Guide](#).

Always wear safety glasses and nitrile gloves when servicing your Indian Motorcycle. To properly maintain and adjust the clutch lever on your Indian Chieftain, follow these steps:

1. Park the motorcycle on a flat, level surface and allow the vehicle to cool completely.
 2. Inspect the entire length of the clutch cable for any damage to the external casing. Also inspect any exposed wire for fraying, kinks or corrosion. Replace any cables that are damaged, sticky or sluggish.
 3. Move down to the cable connection near the primary cover and slide away the rubber protector boot.
 4. Remove the lower cable E-clip with a flat-head screwdriver.
 5. Using a 10mm socket, remove the cable guide fastener and set the guide aside.
 6. Next, use an adjustable wrench with a shop rag to rotate the clutch shaft arm until the tension has been released from the cable. Rotate the cable barrel out of the clutch shaft arm and release the clutch shaft.
 7. Pull the cable down and out of the mounting boss.
 8. On the left handlebar, unscrew the bottom hinge nut with a 10mm socket.
 9. Then push the pivot pin upward and remove from the handlebar.
 10. Remove the clutch lever and rotate the cable barrel out of the lever.
 11. Remove any old grease and dirt from the lever, housing and cable ends.
 12. Lubricate the clutch lever and pivot screw with moly assembly grease or all-purpose grease.
 13. Also apply a thin coating of all-purpose grease to both clutch cable ends. DO NOT lubricate between the cable and sheath.
 14. Reinstall the clutch cable into the lever housing.
 15. Install the clutch lever into the handlebar and align the pivot pin hole.
 16. Reinstall the pivot pin fully.
 17. Then reinstall the nut. **Torque** to 35 to 62 in-lbs (4-7 Nm).
-

18. Clean any residual grease off the handlebar.
19. Rotate the clutch shaft arm and reconnect the clutch cable into the lower cable housing.
20. Reinstall the lower cable guide fastener. **Torque** to 84 in-lbs (9 Nm).
21. Then reinstall the E-clip and slide the rubber protector boot back into place.
22. Ensure the cable is properly routed in the mounting boss and cable bracket.
23. Next, measure the clutch lever free play between the clutch lever and the clutch lever mounting bracket. The free play should be 0.5 to 1.55 mm (0.02 – 0.059 inches).
24. If adjustment is needed, the clutch cable adjuster nut is located along the lower left frame. While holding the clutch cable, slide the rubber protector boot away from the lock nut.
25. Loosen the lock nut with a 14mm wrench.
26. While holding the cable, turn the cable adjuster inward or outward with a 13mm wrench until the clutch lever free play is set to specification.
27. While holding the adjuster, tighten the lock nut securely with a 14mm crowfoot wrench. **Torque** to 48 in-lbs (5.4 Nm).
28. Then re-secure the protector boot over the adjuster.
29. Finish by verifying proper operation of the clutch. Ensure the engine does not start with the clutch lever released and the bike in gear. Repeat this procedure as needed.

For more information, see your authorized Indian Motorcycle Dealer. Find a dealer near you with the [Dealer Locator](#).

Maintenance tips, procedures and specifications can be found in your [Owner's Manual](#).

To find diagrams and replacement part numbers, use the [online parts catalog](#).

YouTube® is a registered trademark of Google LLC

Unless noted, trademarks are the property of Indian Motorcycle International, LLC

© 2022 Indian Motorcycle International, LLC

Was this article helpful?

- Yes, it answers my question
 - No, it's missing information or visuals
 - No, the instructions are unclear
 - No, What are the next steps?
 - No, I'm experiencing a technical error
 - Other
-

* [-] **How can we improve this article? We'd love to hear your suggestions**

Tell us what you would like to see in this article

SEND

Keyword(s) [video](#) , [maintenance](#) , [clutch](#) , [lever](#) , [inspect](#) , [inspecting](#) , [adjust](#) , [adjusting](#) ,

HELPFUL LINKS

[Parts, Accessories and Apparel](#)
[Owner's Manuals](#)
[Indian Motorcycle Protection Plan](#)
[Special Offers](#)
[Recalls](#)
[Indian Motorcycle Lubricants](#)

CONTACT US

BY E-MAIL

Send us an e-mail inquiry.

CLICK TO CALL

BY DEALER

Locate the nearest dealer in your area.

Find A Dealer Near You

Enter City, State or Zip Code

55033

SEARCH

 [Use Current Location](#)

Filter By *(Optional)*

Reset Filters

Show dealers that offer online service scheduling

SUBSCRIBE NOW

FIND A DEALER

US-ENGLISH

MOTORCYCLES

SHOPPING TOOLS

ASSISTANCE

OWNER RESOURCES

ABOUT US

[Site Map](#)

[Privacy](#)

[Cookie Preferences](#)

[Terms](#)

[Accessibility](#)

[Careers](#)

[Global Sites](#)

