



Battery Electric Vehicle (BEV) - Diagnostic Trouble Code (DTC) Troubleshooting Ending In No Fault Found



Internal Content

If a BEV has active diagnostic trouble codes the first steps should be to check all grounds for a good clean and tight connection.

For a complete list of ground locations refer to the description, design and function document in Impact titled Electrical Power and Ground System Description under function group 37.

Tags [bev](#) [mack](#) [volvo](#) [ground](#)

Categories *

Make and Model > Mack > LR Electric

Make and Model > Volvo > VNR Electric

Vehicle System > Battery Electric Systems

Related links and attachments

No links or attachments available



Feedback

[Give feedback](#)

to help improve the content of this article