

Technical product information

Topic	New Continental GTC - Boot open/close function inoperative
Market area	Australia E04 Bentley rest Asia and Australia (6E04),China 723 Volkswagen (Anhui) Automotive CO (6723),China 796 VW Import Comp. Ltd (Vico), Beijing (6796),Germany E02 Bentley rest Europe (6E02),Japan E03 Bentley Japan (6E03),Korea, (South) E08 Bentley South Korea (6E08),United Arab Emirates E06 Bentley Middle East and Africa (6E06),United Kingdom E01 Bentley UK (6E01),United States E05 Bentley USA and rest America (6E05)
Brand	Bentley
Transaction No.	2060646/5
Level	EH
Status	Released for publishing
Release date	03-Oct-2023

New customer code

Object of complaint	Complaint type	Position
body fixtures and fittings -> door, closures operation -> open rear lid	functionality -> cannot be opened	
body fixtures and fittings -> door, closures operation -> close rear lid	functionality -> cannot be closed	

Vehicle data

New Continental GTC

Sales types

Type	MY	Brand	Designation	Engine code	Gearbox code	Final drive code
3S4*	2019	E		*	*	*
3S4*	2020	E		*	*	*
3S4*	2021	E		*	*	*
3S4*	2022	E		*	*	*
3S4*	2023	E		*	*	*

Documents

Document name
master.xml

Customer statement / workshop findings

Boot operational issues for example:

- The boot does not open or close as expected

Technical background

VERY IMPORTANT: Please ensure all VIN applicable TPI's and VIN applicable Service Campaigns are checked and conducted prior to conducting the instructions within this TPI

NOTE: The operative MUST submit the following information to a new DISS query or an existing query relating to boot operational issues

- Completed check list
- Images of the vehicle condition - In particular the boot area (Ensure license plate and VIN details are not visible)
- Video of the failure NOTE: Please capture the rear of the vehicle for at least one open/close operation (when possible) before zooming or moving in closer to the issue, the video MUST be recorded in a quiet environment
- Battery health - Print out of the results

NOTE: Please ensure any other findings or issues relating to the boot are clearly described within the DISS query



Do Not submit or update the DISS query unless ALL information (as previously requested) is attached

Production change

Not applicable

Measure



Please ensure all instructions have been fully adhered to within the Technical background section before commencing any further

Battery Test

- Carry out a battery test – Rep.Gr 27 and attach a print out of the results to the open DISS query

Hazzard light operation

With the boot open – press the boot close switch - On closure observe the hazard lights for the following:

- Hazzard lights flash twice - Normal operation (Acknowledgement of the key or virtual pedal) - No further action required
- Hazzard lights flash four times – Key fob is possibly in the incorrect position (Vehicles is detecting the key in the boot area and will not close to prevent locking the key in the boot – investigate further and retest)
- **Check list (Please circle Yes or No as applicable)**

Boot failure description

Does not open	Yes or No
Does not close	Yes or No
Does not fully open	Yes or No
Noise - Vibration	Yes or No
Harsh operation	Yes or No

Comments

Frequency of the failure

Every operation Yes or No
Most operations Yes or No
Occasionally Yes or No
Noise - Vibration Yes or No
In Specific conditions Yes or No
(Weather – incline – decline – Temperature)

Comments

Inputs where failure occurs

Key fob Yes or No
Boot button Yes or No
Internal button (Close) Yes or No
Internal button close and lock Yes or No
Virtual pedal Yes or No
Driver door switch Yes or No
Manually moving the boot
and it powers closed/open Yes or No

Audio inspection

Single beep Yes or No
Continuous beep Yes or No
Creak/Squeak/Other Yes or No

Comments

Visual inspection (Please circle OK or NOK as applicable)

Gap and profile OK or NOK
Seal fit OK or NOK
Witness marks/clashes OK or NOK

Comments



If any area of the visual inspection is NOK please highlight on the applicable images below

NOTE: Please also ensure any additional photographs and fault descriptions are attached/included within the DISS query

