

Service Category	General		
Section	Pre-Delivery Service	Market USA	Toyota Supports

### Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2024	4Runner	

#### Introduction

Pre-Delivery Service (PDS) is a critical step in satisfying our new car customers. Customer feedback indicates the following areas deserve special attention when performing PDS:

- Careful inspection for paint chips/scratches and body dents/dings.
- Proper operation of electrical accessories (including interior light, clock, and radio reset).
- Interior cleanliness.
- Proper function of mechanical systems.

Customer retention and proper maintenance of vehicles are and have always been a major focus for Toyota. To help remind customers that regular service is essential to the proper maintenance of the vehicle, dealers are required to install a service reminder sticker before delivery. By doing this, customers will be reminded to return to your dealership for service. Your current service reminder sticker may be used. (See PDS Check Sheet item 8 of "Final Inspection and Cleaning.")

This bulletin contains the PDS procedures that apply specifically to 2024 model year 4Runner vehicles. A universal PDS <u>Check Sheet</u> that contains PDS steps that apply to all 2024 model year Toyota vehicles has been developed. To properly perform a complete PDS, you must complete all procedures contained in this TSB as well as the universal PDS <u>Check Sheet</u>.

In addition, if the vehicle is stored for over 30 days, be sure to follow <u>Long-Term Vehicle</u> <u>Storage Guidelines</u>.

# **Table of Contents**

•	Warranty Policy	3
•	Warranty Information	3
•	Required Tools & Equipment	3
•	Short Pin Installation*	4
•	Front License Plate and Mounting Bracket Installation*	6
•	Front Bumper Lower Side Support Installation	8
•	Roof Rack Leg Cover Installation	9
•	Tire Pressure Warning System (TPWS) Initialization*	9
•	Memorize Steering Angle Neutral Point (With Panoramic View Monitor)*	10
•	Compass Calibration*	10
•	Dealer Contact Information for Call Dealer Head Unit Function	10
	*If applicable.	

# Warranty Policy

If the need for additional repairs or adjustment is noted during PDS, the required service should be performed under warranty. Reimbursement will be managed under the warranty policy.

<u>The Warranty Policy and Procedures Manual requires that you maintain the completed</u> <u>Check Sheet in the customer's file</u>. If you cannot produce a completed form for each retailed vehicle upon TMS and/or Region/Distributor audit, the PDS payment amount will be subject to debit.

An additional Repair Order completed in conjunction with normal PDS MUST have time punch/flags for service. If multiple repairs are performed, separate time flags MUST be punched for each repair.

# Warranty Information

OP CODE	DESCRIPTION	MODEL	TIME	OFP	T1	T2
001013	Pre-Delivery Service (PDS)	4Runner	1.1	1	-	_

# **Required Tools & Equipment**

REQUIRED EQUIPMENT	SUPPLIER	PART NUMBER	QTY
Techstream ADVi*		TSADVUNIT	
Techstream 2.0	m 2.0		
Techstream Lite	ADE	TSLITEPDLR01	1
Techstream Lite (Green Cable)		TSLP2DLR01	

\*Essential SST.

#### NOTE

- Only ONE of the Techstream units listed above is required.
- GTS+ software version 2023.03.002.02 or later is required.
- Additional Techstream units may be ordered by calling Approved Dealer Equipment (ADE) at 1-800-368-6787.

# Short Pin Installation

To minimize battery discharge, the short pin has been removed and is stored in the engine compartment relay block. Install the short pin and confirm ALL related Diagnostic Trouble Codes (DTCs) are cleared. If ANY DTCs other than B1650 and B1794 remain, refer to the applicable Repair Manual.

# Figure 1.



1	Relay Block
2	Remove the Short Pin
3	Install the Short Pin (Original Location)

# NOTE

- Removing the short pin cuts off the power sources relating to the dome, radio No. 1, and ECU-B fuses.
- The short pin does NOT function as a fuse, so ONLY install it in the position shown.
- If the vehicle is stored in the dealership for a long period of time after PDS, disconnect the negative (-) battery terminal to prevent battery discharge.
- While the vehicle is stored at the dealership, disconnect the negative (-) battery terminal to prevent battery discharge. Refer to <u>T-SB-0024-23</u>, *Battery Maintenance During PDS*, for battery maintenance information.

# Short Pin Installation (continued)

The electronic key does not operate properly (vehicles with smart entry and start system) when the short pin is NOT installed. Perform the following procedure to start the engine with the short pin uninstalled.

- 1. Depress the brake pedal and continue to hold it down.
- 2. Hold the key directly in front of the engine switch button.
- 3. When the green indicator light is illuminated on the engine switch, press the button to start the engine.

Figure 2.



### Front License Plate and Mounting Bracket Installation

The front license plate bracket and two self-tapping screws are loaded in the vehicle at the assembly plant. Follow this procedure to install the front license plate bracket and front license plate in states where it is required by law.

- 1. Align holes "A" of the mounting bracket with the dimples on the front bumper cover.
- 2. Install the two self-tapping screws through the mounting bracket and into the front bumper at the dimples.

### NOTICE

- Do NOT pre-drill holes into the bumper.
- Do NOT overtighten the self-tapping screws.
- Horizontally install the self-tapping screw to the boss of the bumper cover.

#### NOTE

- Holes "A" are used for installation of the mounting bracket to the front bumper cover.
- Holes "B" are used for installation of the front license plate to the mounting bracket.

# Figure 3.



1	Mounting Bracket	4	Boss
2	Self-tapping Screws	5	Bumper Cover
3	Dimples		

# Front License Plate and Mounting Bracket Installation (continued)

3. Install the license plate to the mounting bracket using two self-tapping screws with the following dimensions:

Length: 25.0 – 30.0 mm (0.98 – 1.18 in.) Diameter: 6.0 mm (0.24 in.)

# NOTICE

Do NOT overtighten the self-tapping screws.







1	Length
2	Diameter

1	Self-tapping Screws
2	Front License Plate
3	Mounting Bracket

### Front Bumper Lower Side Support Installation

The front bumper lower side support set is stored in the luggage compartment to avoid damage during transportation.

- 1. Attach the four claws and guide to each support.
- 2. Install the left front bumper lower side support to the front bumper by engaging the four claws and inserting the two clips.
- 3. Repeat step 2 for the right side.



# **Roof Rack Leg Cover Installation**

The roof rack leg cover is loaded in the vehicle at the assembly plant to avoid dirt in transit. Install the roof rack leg covers to the roof rack rails according to the following procedure.

- 1. Insert the protrusions at the front of the cover into the roof rack rail.
- 2. Place the cover on the leg, aligning each rear end. At this time, do NOT press down.
- 3. Engage the cover claws located toward the outside of the vehicle.
- 4. Engage the cover claws located toward the inside of the vehicle.



5. Ensure the covers are securely installed.

# Tire Pressure Warning System (TPWS) Initialization

Refer to the applicable Repair Manual for the <u>TPWS initialization procedure</u>.

# NOTE

- Limited models have a TPWS sensor in the spare tire.
- To adjust the tire pressure correctly when the outside temperature is significantly colder than shop temperature, perform a Health Check using GTS+ and select the compensation tire pressure checkbox. Compensation pressures will display on the Health Check results screen. Adjust the tire pressure when the tires are cold.

Figure 7.





# Memorize Steering Angle Neutral Point (With Panoramic View Monitor)

As a result of the removal of the short pin, the power source to the steering angle sensor is cut off. When the short pin is reinstalled, the parking assist monitor system/panoramic view monitor system will be operative, but it cannot display guidelines to assist parking operation because the center position recognized by the steering angle sensor may not be in an initial position. Therefore, perform steering angle neutral point initialization AFTER installing the short pin during PDS.

Refer to the applicable Repair Manual for the steering angle neutral point initialization procedure.

# **Compass Calibration**

Refer to the applicable Repair Manual for the <u>calibration procedure</u> for vehicles equipped with a compass in the Multi-information Display (MID).

### NOTE

- Do NOT perform calibration of the compass in a place where the Earth's magnetic field is subject to interference (underground parking, under a steel tower, between buildings, roof parking, near a railroad crossing, near a large vehicle, etc.).
- During calibration, do NOT operate the electric systems (moonroof, power windows, etc.) as they may interfere with the calibration.
- The dot on the compass display disappears when calibration has been completed.

# Dealer Contact Information for Call Dealer Head Unit Function (Premium Audio Only)

Refer to the *Multimedia System Owner's Manual* to <u>add dealer contact information</u>. See section 2-4 Basic function – Other settings – Vehicle settings – Dealer setting.