

GROUP	NUMBER
ENGINE	23-EM-005H
DATE	MODEL(S)
OCTOBER 2023	ALL MODELS

Technical Service Bulletin

SUBJECT

ENGINE OIL AND FILTER CHANGE SERVICE GUIDELINES

Description: This bulletin provides important checkpoint guidelines when performing engine oil and filter change services.

Applicable Vehicles:


• All models equipped with gasoline engine, including hybrid and plug-in hybrid electric vehicles.


Warranty Information:

Any engine damage that occurs from not following the service guideline outlined in this bulletin is subject to warranty chargeback.

Service Information:

- 1. Check the **engine oil drain plug** for proper fit and cleanliness of the threads. If damaged, replace with a new genuine Hyundai service part.
 - Do not use generic aftermarket drain plugs which may have different thread depth and flange specifications than the OE part design.
 - > Tightening torque: 39 Nm. (29 lb.-ft)
- 2. Remove the old washer from the drain plug and always use a new drain plug washer.
 - The drain plug washer is a one-time use crush type gasket. Do not reuse this part.
- 3. Prior to reinstalling the engine oil drain plug with a new washer, **check the drain hole of the oil pan thoroughly** to confirm that there is <u>no old washer</u> <u>stuck on the opening</u>. Remove if found.

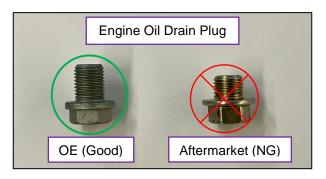

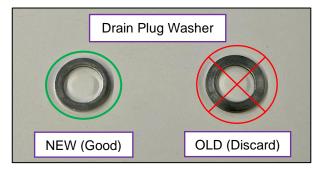



Circulate To: General Manager, Service Manager, Parts Manager, Warranty Manager, Service Advisors, Technicians, Body Shop Manager, Fleet Repair

ENGINE OIL AND FILTER CHANGE SERVICE GUIDELINES

 For engine with spin-on type oil filters, check the oil filter mounting flange thoroughly to confirm that there is <u>no old gasket stuck on the flange</u>. Remove if found.

SUBJECT:

With a clean shop towel, wipe off the sealing area of the flange and the center threads.

5. Apply light film of oil to the sealing gasket of the spin-on type oil filter, then prefill the filter with some engine oil through the center threaded hole (to help supply initial oil pressure upon restart).

Thread on the oil filter and firmly hand-tighten. Do not overtorque during the installation.

- > Tightening torque: 13.7 Nm. (10 lb.-ft)
- 6. Refill the engine with oil following the Shop Manual regarding the appropriate service grade and viscosity of engine oil.
 - > Use the latest available API Service Grade
 - Use the recommended engine oil viscosity
 - If the specified engine oil viscosity is unavailable at the time, use 5W-30 viscosity engine oil with the latest API Service Grade.
- 7. When all services are done, fully tighten the oil filler cap until several "clicks" can be heard.
 - Wipe clean the surrounding areas of any spilled oil.

