



SIB 51 08 19

2024-01-16

## WINDOW INITIALIZATION REQUIREMENTS

This Service Information Bulletin (Revision 1) replaces SI B51 08 19 **dated March 2019**.

**What's New:**

- Models added
- Cause added
- Correction added
- Procedure updated
- Parts Information added
- Claim Information added

<input type="checkbox"/>	THIS REPAIR IS MOBILE FRIENDLY
--------------------------	--------------------------------

**MODEL**

F90 (M5 Sedan)	F91 (M8 Convertible)	F92 (M8 Coupe)	G01 (Sports Activity Vehicle)
G02 (Sports Activity Coupe)	G05 (Sports Activity Vehicle)	G06 (Sports Activity Coupe)	G07 (Sports Activity Vehicle)
G09 (BMW XM)	G12 (7 Series Sedan)	G14 (8 Series Convertible)	G15 (8 Series Coupe)
G16 (8 Series Gran Coupe)	G20 (3 Series Sedan)	G22 (4 Series Coupe)	G23 (4 Series Convertible)
G26 (4 Series Gran Coupe)	G29 (Z4 Roadster)	G30 (5 Series Sedan)	G32 (640i xDrive Gran Turismo)

**CAUSE**

The basic conditions for initializing the power windows are not met.

**CORRECTION**

Initialize the windows following the procedure below<sup>[R1]</sup>.

**PROCEDURE**

In situations where the windows need to be initialized, the following general conditions must be met:

- Vehicle speed must be less than 1 MPH
- The vehicle requires a consistent, stable battery voltage source between 12-14.6 V

**Warning: Ensure that any connected battery chargers do not deviate from the above required voltage.**

- During initialization, the accelerator pedal must not be pressed
- All doors must be closed

**Additionally, as applicable to the Model Vehicle being Repaired-**

**For F90, F91, F92, G01, G02, G05, G06, G07, G09, G12, G20, G22, G23, G26, G30 vehicles:**

- Initialization is possible regardless of the ambient temperature

**For G14, G15, G16, G29, G32 vehicles<sup>[R2]</sup> :**

- Initialization can only be performed between temperatures of 60-80 degrees Fahrenheit. The ambient temperature is displayed in the Kombi (cluster).

And:

**For G14 and G23 vehicles:**

- Aside from the window that is being initialized, all the other windows must be closed
- The front and rear power windows must be initialized separately

## PARTS INFORMATION

No parts are required.

## CLAIM INFORMATION

This Service Information Bulletin provides technical and repair-related information.

Unless otherwise noted or applicable, the window initialization procedure is included in the corresponding repair procedure when it is required to be performed.

## FEEDBACK REGARDING THIS BULLETIN

Technical Feedback	To submit feedback for the technical topic of this bulletin: Submit your feedback in the rating box at the top of this bulletin
Warranty Feedback	To submit feedback for the CLAIMS section of this bulletin: Submit an IDS ticket to the Warranty Department, or use the chat available in the Warranty Documentation Portal
Parts Feedback	To submit feedback for the PARTS section of this bulletin: Submit an IDS ticket to the Parts Department

